


## SHIFT PANEL REMOVAL/INSTALLATION

id091700898400

### ATX

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Selector lever to neutral position.
3. Remove the front console box. (See FRONT CONSOLE BOX REMOVAL/INSTALLATION.)
4. Take the shaded area shown in the figure, and remove the shift panel in the direction of the arrow in the order of (1), (2) while detaching clips A, hook B.

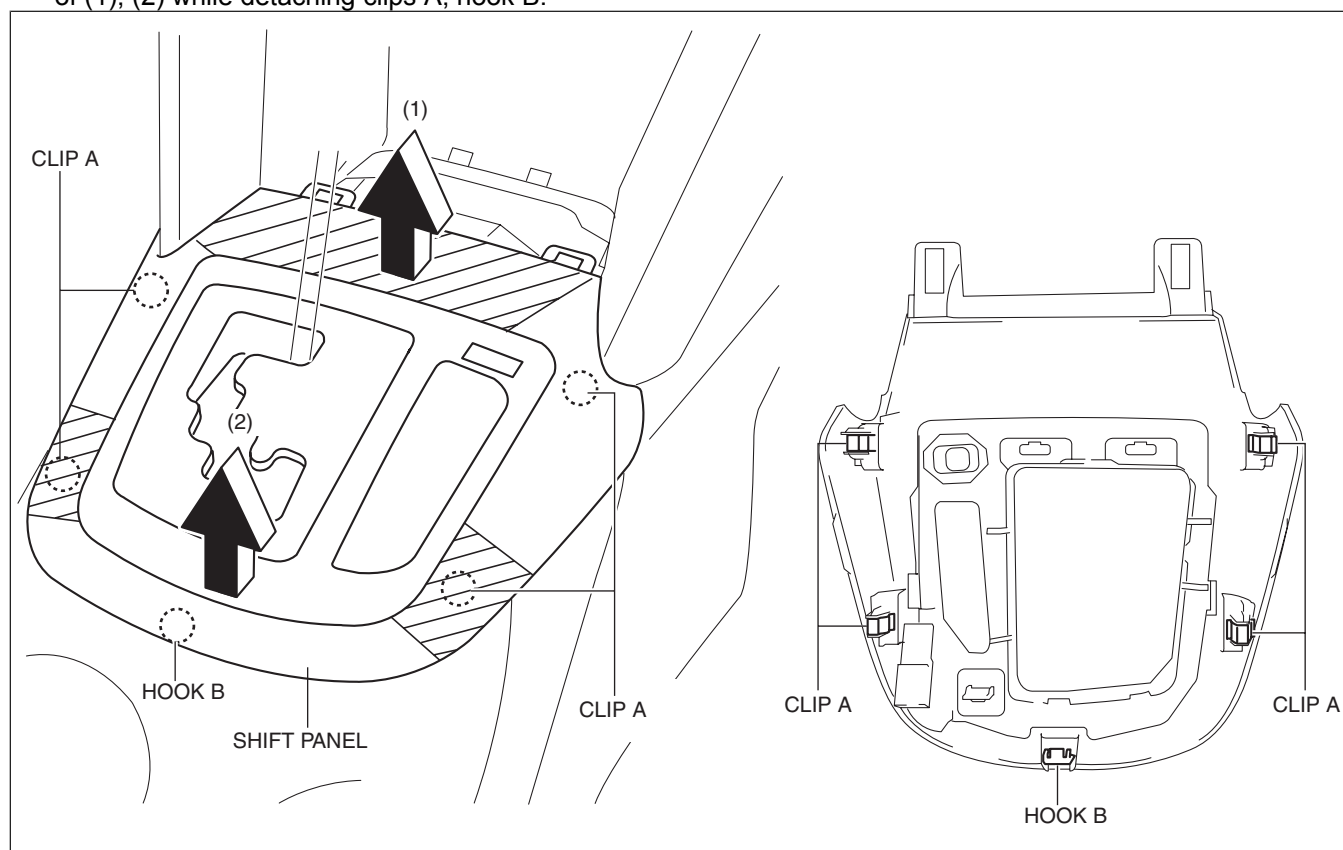


ac5uuw00001801

5. Disconnect the connector.
6. Install in the reverse order of removal.

### MTX

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the shift lever knob. (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [C66M-R, C66MX-R].) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [D66M-R, D66MX-R].)
3. Take the shaded area shown in the figure, and remove the shift panel in the direction of the arrow in the order of (1), (2) while detaching clips A, pin B, hook C.

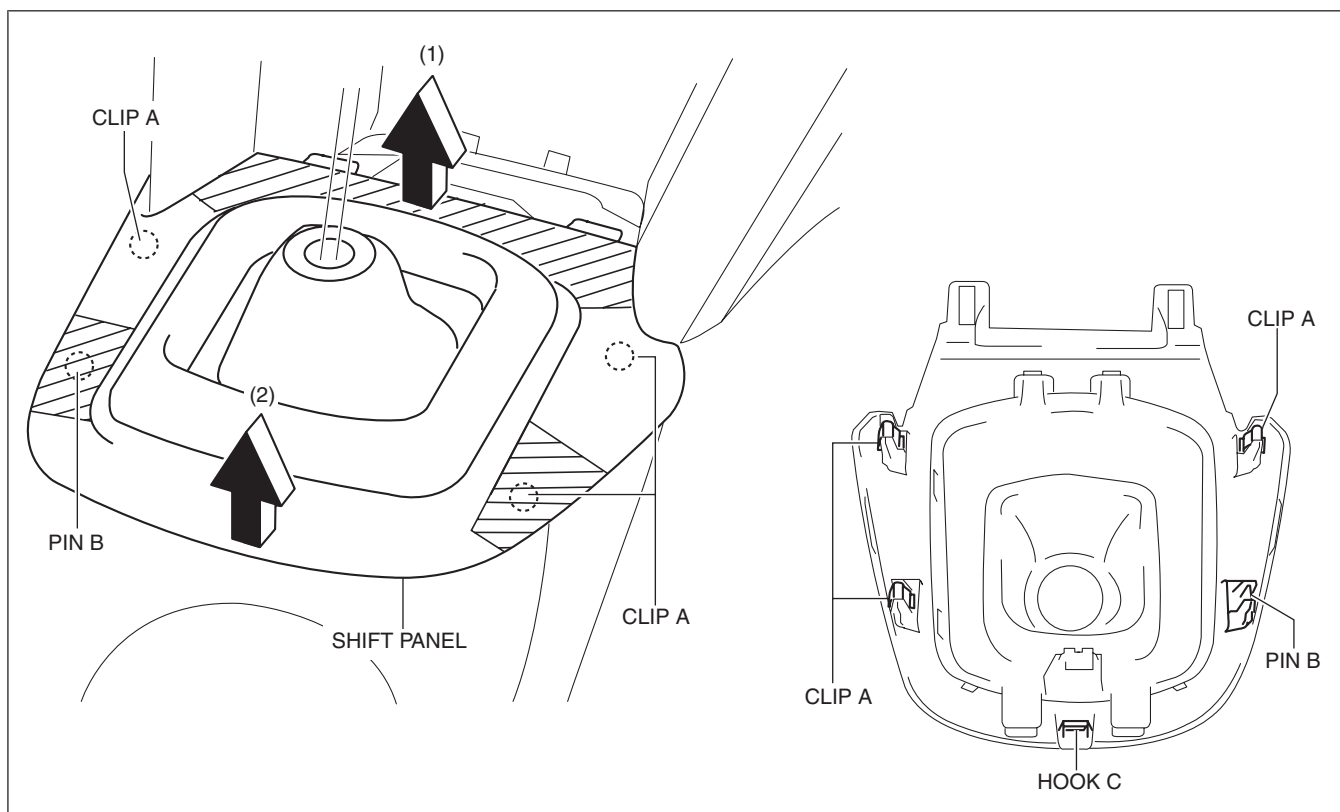

ac5uuw00001802

4. Install in the reverse order of removal.