

TURN SIGNAL/HAZARD WARNING INDICATOR LIGHTS

id091800013500

Purpose


- Notifies the driver that a turn light, the hazard warning lights are flashing.

Function

- Flashes according to the turn switch and hazard warning switch operations.

Construction

- Displayed in the instrument cluster.

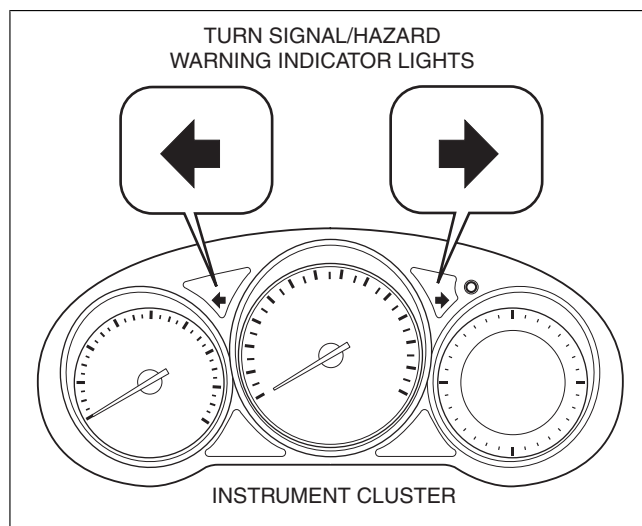


ac5uun00000536

Operation

Turn system


- When the turn switch is operated to the RH position, a turn RH signal is input to the start stop unit.
- When the turn switch is operated to the LH position, a turn LH signal is input to the start stop unit.
- The start stop unit sends the turn RH or LH signal to the front body control module (FBCM).
- The front body control module (FBCM) sends the turn RH or LH signal to the instrument cluster as a direction indicator light signal.
- When a direction indicator light signal is received, the instrument cluster flashes the direction indicator light.

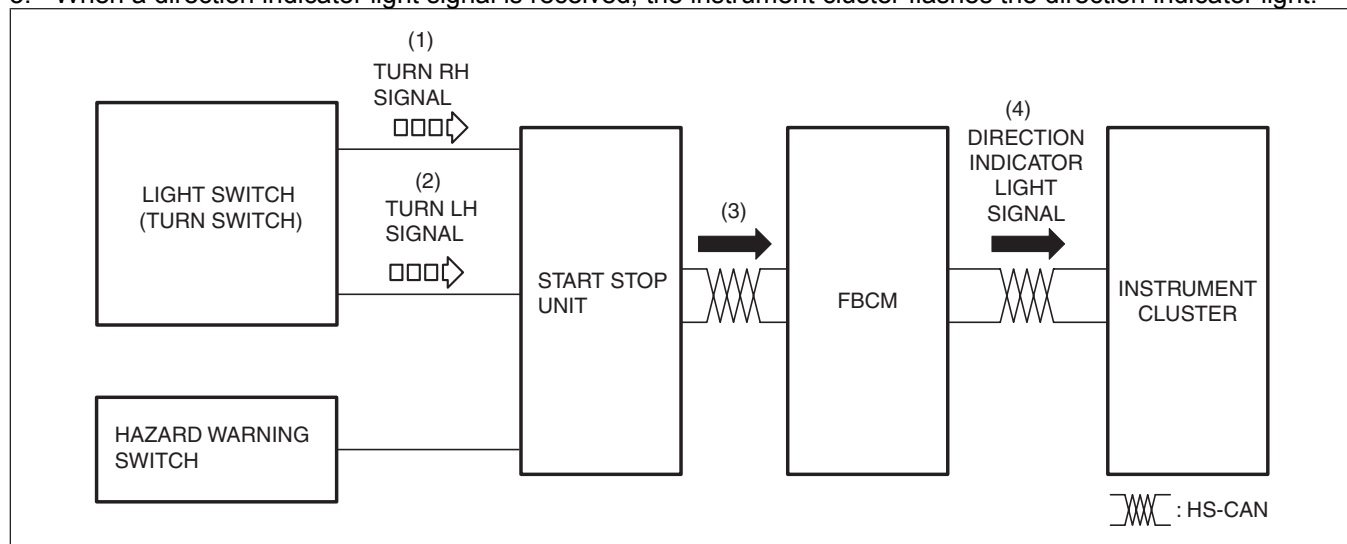

ac5wzn00001337

Hazard system

- When the hazard switch is turned on, a hazard signal is input to the start stop unit.
- The start stop unit sends a hazard signal to the front body control module (FBCM).
- The front body control module (FBCM) sends the hazard signal to the instrument cluster as a hazard warning flashing signal.
- When the hazard warning flash signal is received, the instrument cluster flashes the hazard warning lights.

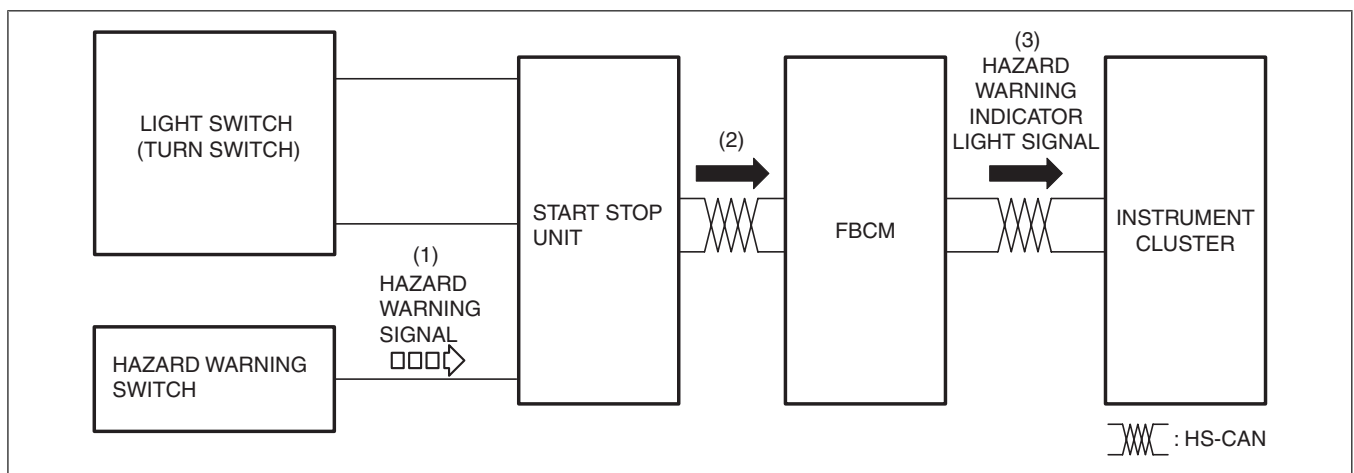

ac5wzn00001339

Fail-safe

- Function not equipped.