


POWER SEAT SWITCH REMOVAL/INSTALLATION

id091300998700

Warning

- Handling a side air bag improperly can accidentally operate (deploy) the air bag, which may seriously injure you. Read the service warnings in the Workshop Manual before handling the front seat (side air bag integrated). (See AIR BAG SYSTEM SERVICE WARNINGS.) (See AIR BAG SYSTEM SERVICE CAUTIONS.)

1. Switch the ignition off (LOCK).
2. Disconnect the negative battery cable and wait for **1 min or more**. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
3. Remove the front seat side cover. (See FRONT SEAT SIDE COVER REMOVAL/INSTALLATION.)
4. Remove the screws.
5. Remove the power seat switch.
6. Install in the reverse order of removal.

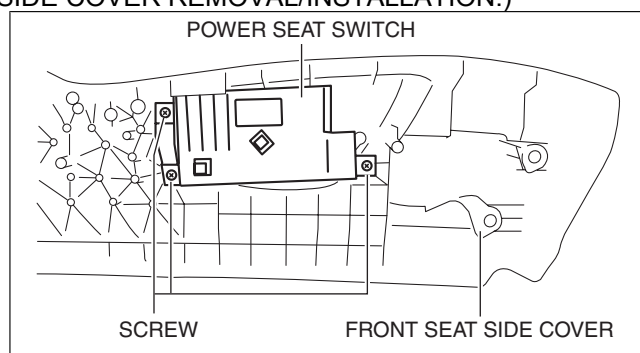

ac5uuw00002059