

---

## PRESSURE CONTROL SOLENOID [FW6A-EL, FW6AX-EL]


id0517h2361000

### Purpose/Function

- The pressure control solenoid adjusts the pressure control solenoid pressure and controls the line pressure based on the control signal from the TCM.

### Construction

- The pressure control solenoid is installed to the solenoid control valve body.
- The pressure control solenoid is a normal open-type linear solenoid.

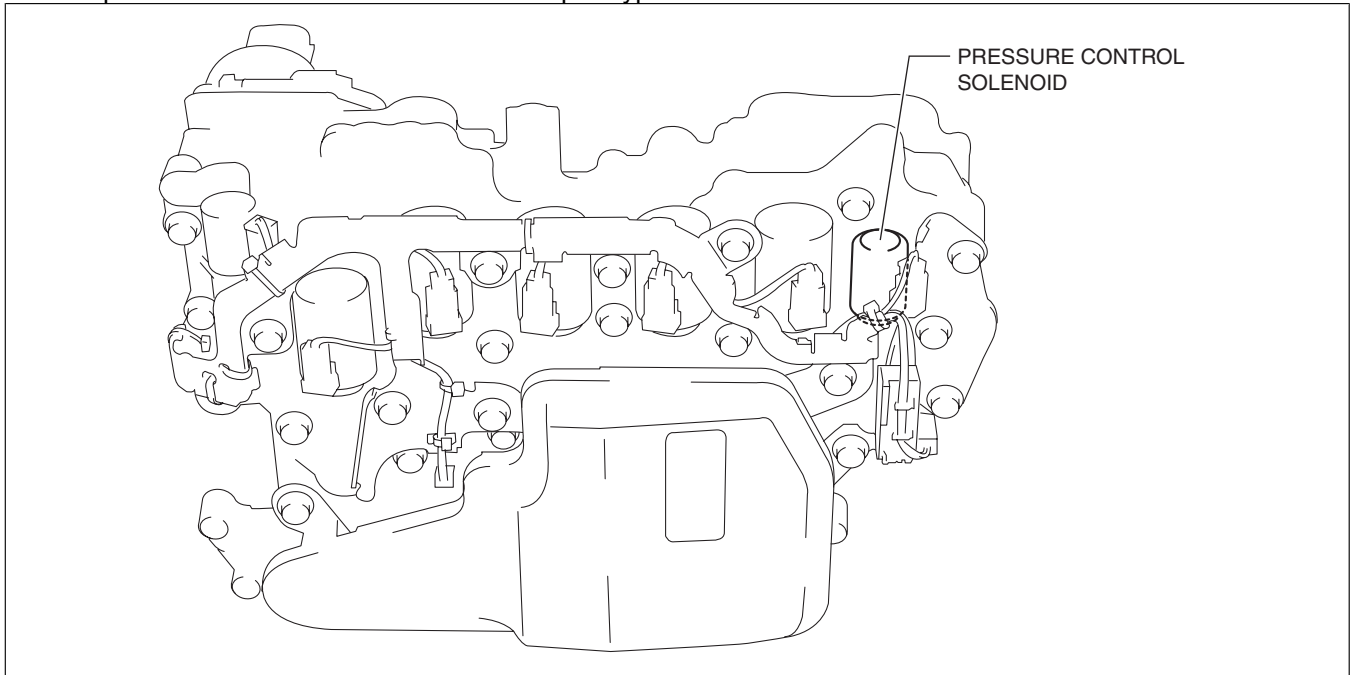

am3uun00002425

### Operation

- Adjusts the pressure control solenoid pressure by increasing/decreasing the energization current to the pressure control solenoid according to the signal from the TCM.