


FRONT CENTER SPEAKER REMOVAL/INSTALLATION


id092000866600

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the center speaker grille. (See SPEAKER GRILLE REMOVAL/INSTALLATION.)
3. Remove the screws.
4. Remove the front center speaker.

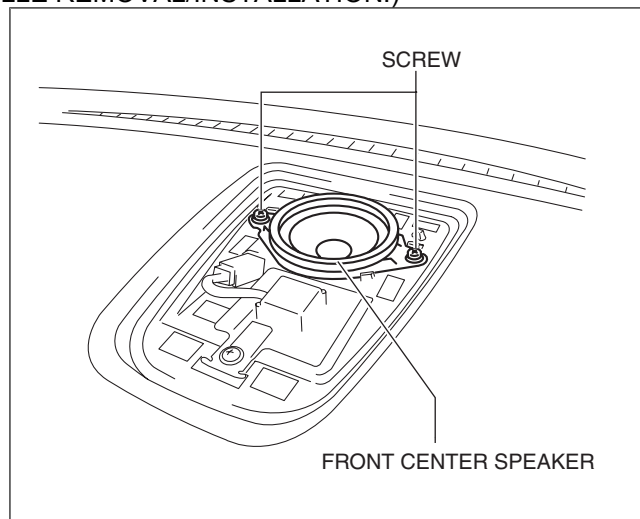

ac5jjw00000157

5. Disconnect the connector.
6. Install in the reverse order of removal.

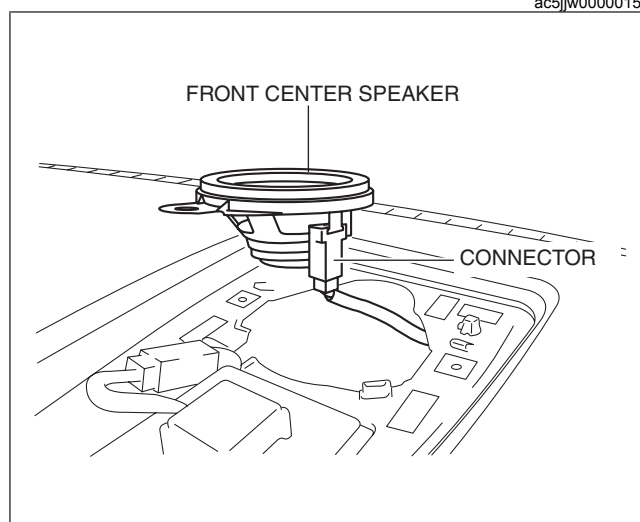

ac5jjw00000158