


PARKING SENSOR CONTROL MODULE REMOVAL/INSTALLATION


id092200023500

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
 - (1) Passenger-side front scuff plate (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
 - (2) Passenger-side front side trim (See FRONT SIDE TRIM REMOVAL/INSTALLATION.)
 - (3) Glove compartment (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
 - (4) Decoration panel (See DECORATION PANEL REMOVAL/INSTALLATION.)
 - (5) Passenger-side lower panel (See LOWER PANEL REMOVAL/INSTALLATION.)
3. Spread the clip tabs using snap ring pliers and pull out the clip from the stud bolt.

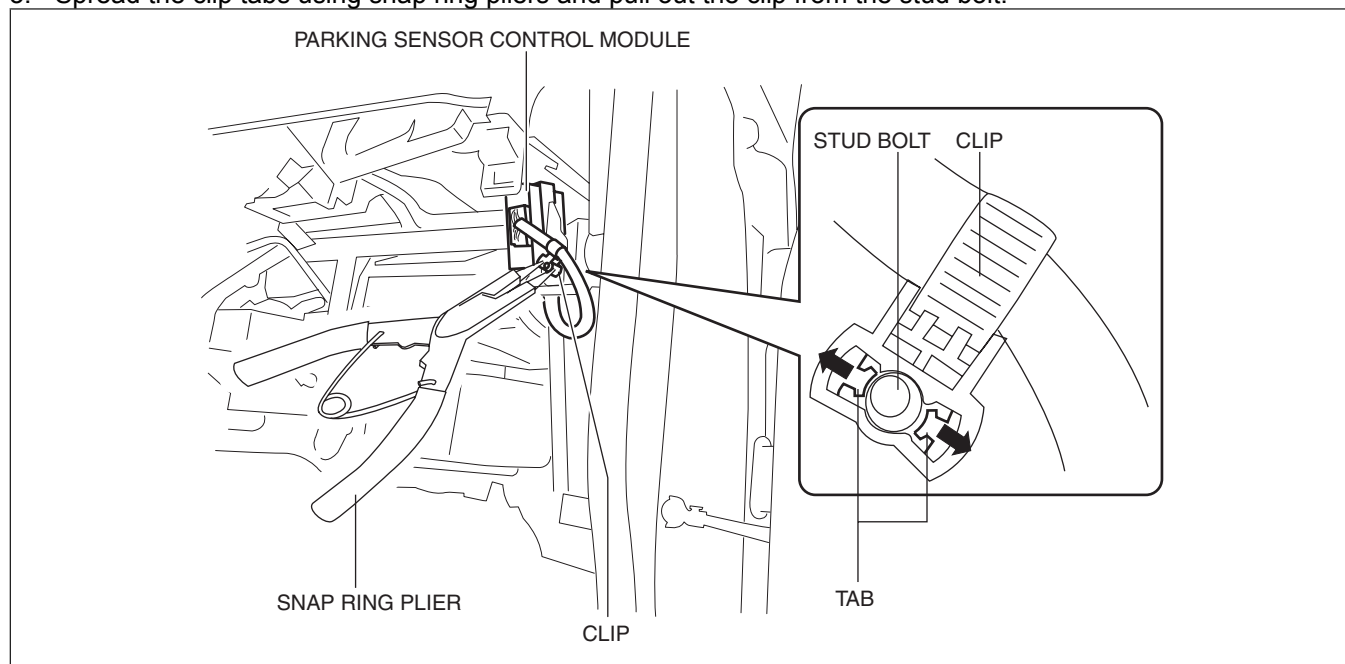


ac5wzw00001060

4. Disconnect the connector.
5. Remove the nut.

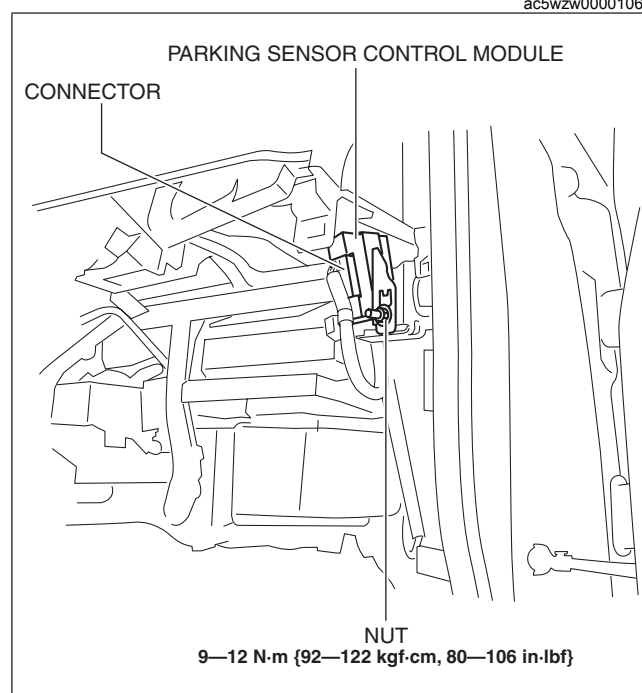

ac5wzw00003783

6. Lift up the parking sensor control module in the direction of the arrow (1) shown in the figure to detach the hook from the dashboard.

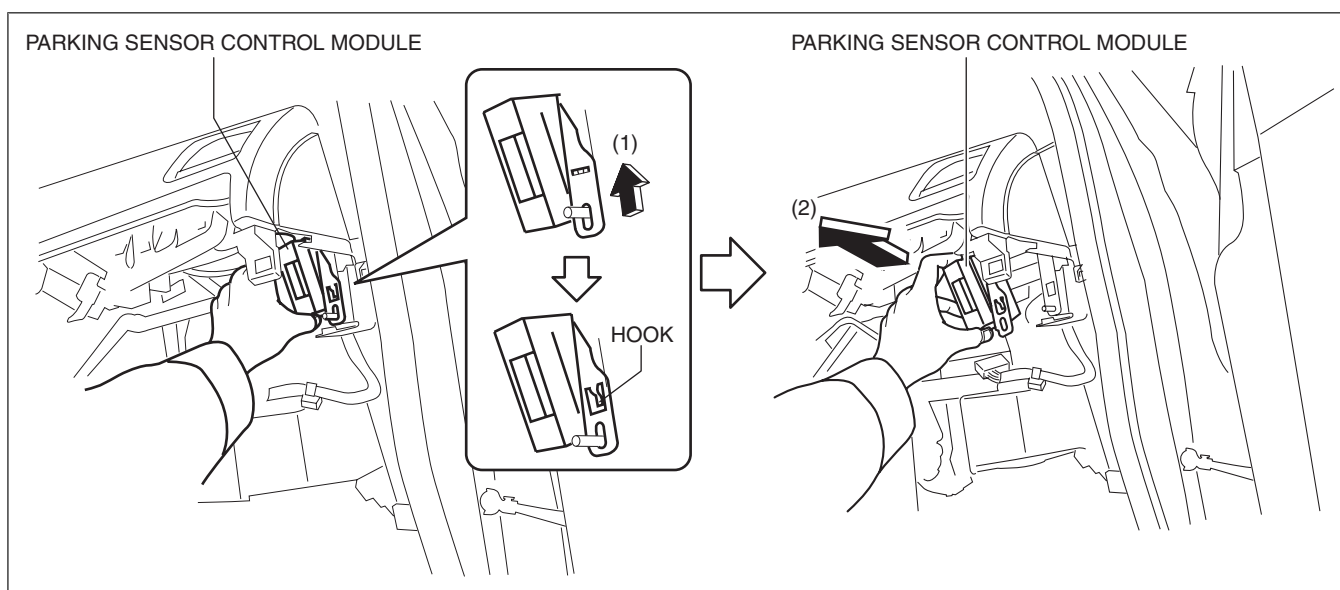

ac5jjw00000261

7. Remove the parking sensor control module in the direction of the arrow (2) shown in the figure.
8. Install in the reverse order of removal.