


AMBIENT TEMPERATURE SENSOR INSPECTION [FULL-AUTO AIR CONDITIONER]

id0740a1803300

1. Measure the temperature around the ambient temperature sensor and measure the resistance between the ambient temperature sensor terminal.
 - If the characteristics of the ambient temperature sensor are not as shown in the graph, replace the ambient temperature sensor.

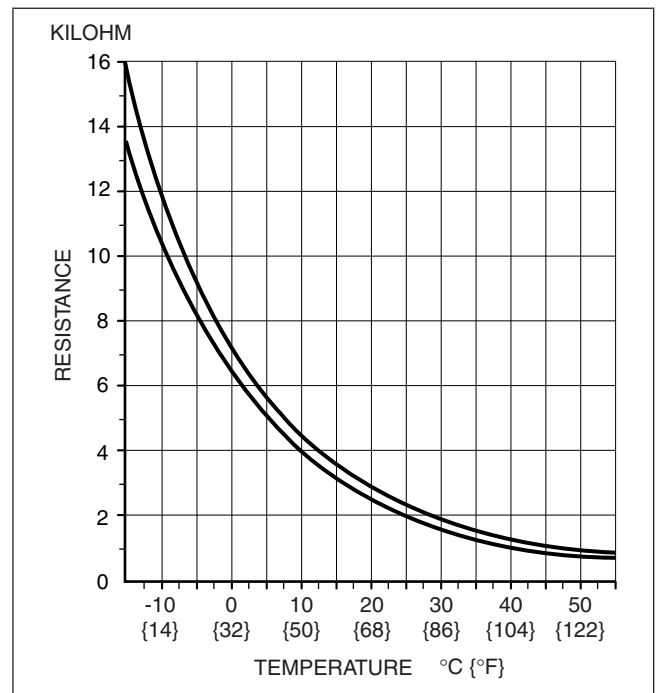

am3zzw00000769