


FRONT PARKING BRAKE CABLE REMOVAL/INSTALLATION

id041200801200

1. Remove the front console box. (See FRONT CONSOLE BOX REMOVAL/INSTALLATION.)
2. Remove the shift lever knob. (MTX) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [C66M-R, C66MX-R].) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [D66M-R, D66MX-R].)
3. Remove the shift panel. (See SHIFT PANEL REMOVAL/INSTALLATION.)
4. Remove the upper panel. (See UPPER PANEL REMOVAL/INSTALLATION.)
5. Remove the rear console. (See REAR CONSOLE REMOVAL/INSTALLATION.)
6. Remove in the order indicated in the table.
7. Install in the reverse order of removal.
8. After installation, inspect the parking brake lever stroke. (See PARKING BRAKE LEVER INSPECTION.)

L.H.D.

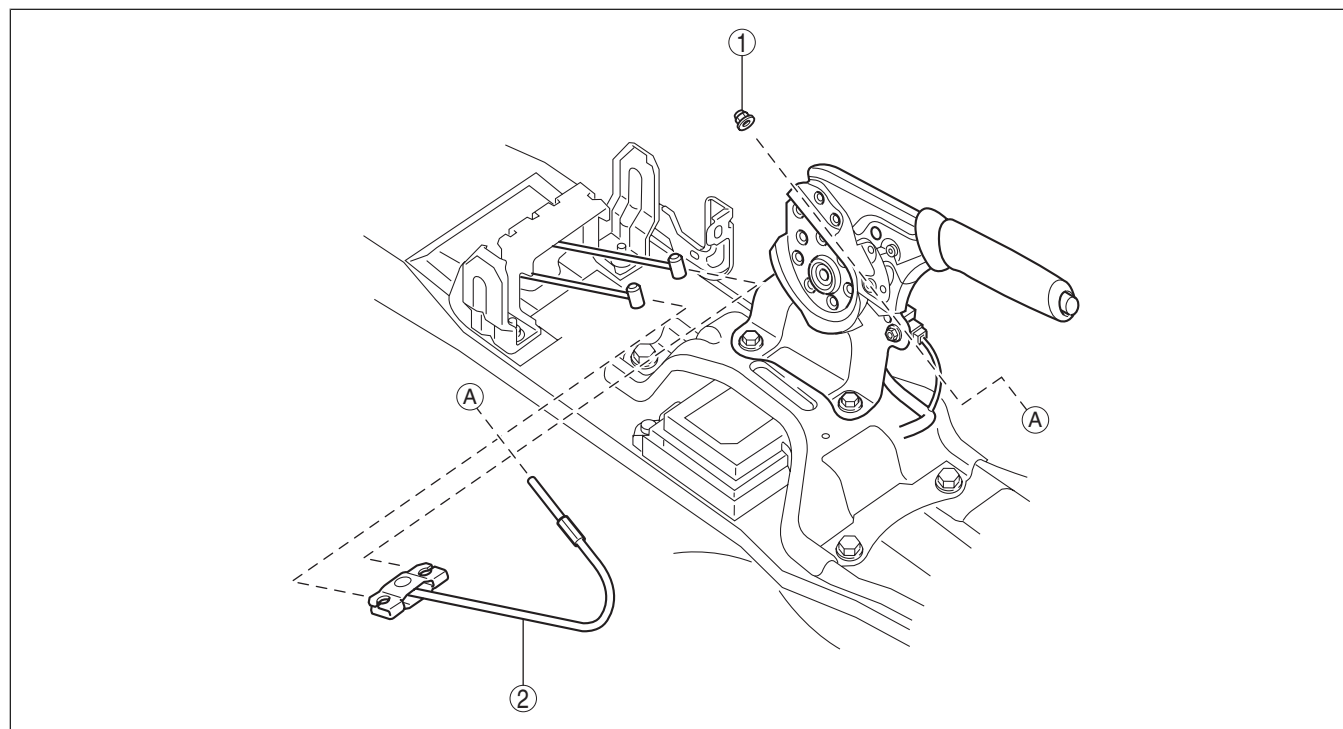


ac5wzw00000221

1	Adjusting nut
---	---------------

2	Front parking brake cable
---	---------------------------

R.H.D.

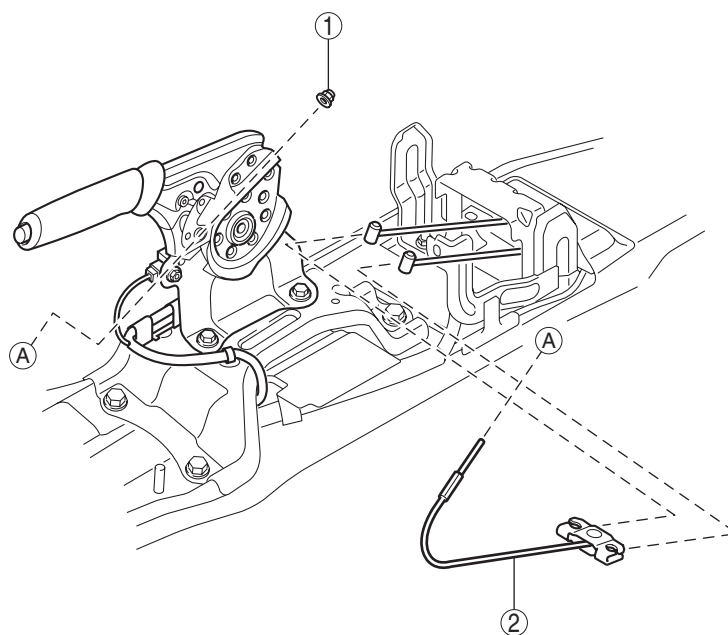

ac5wzw00000222

1	Adjusting nut
---	---------------

2	Front parking brake cable
---	---------------------------