


REAR WASHER HOSE REMOVAL/INSTALLATION


id091900801600

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the front over fender. (See FRONT OVER FENDER REMOVAL/INSTALLATION.)
3. Remove the mudguard (RH). (See MUDGUARD REMOVAL/INSTALLATION.)
4. Disconnect the rear washer hose A from the washer motor.
5. Remove the rear washer hose A from the washer tank hook.
6. Remove the rear washer hose A from clips A and B.
7. Disconnect the rear washer hose A from the joint pipe A and remove it.
8. Disconnect the rear washer hose B from the joint pipe A.

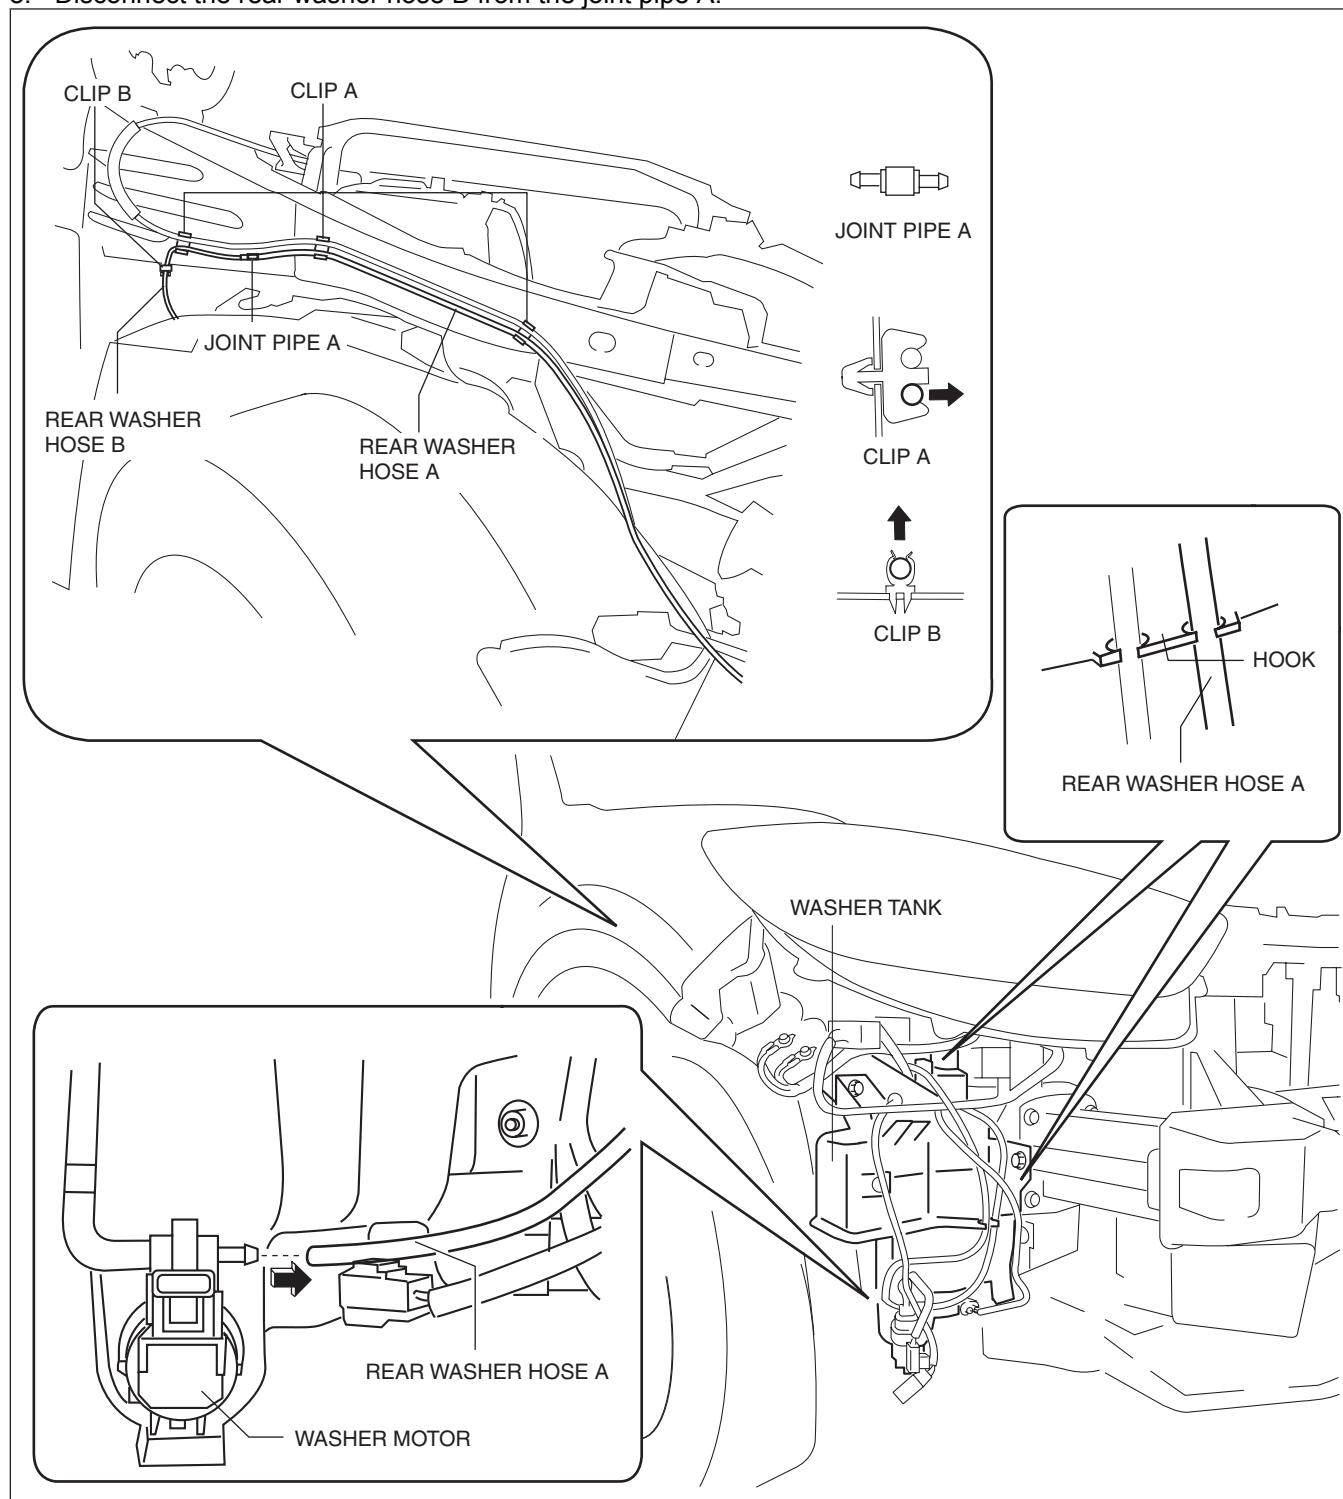


ac5wzw00002977

9. Remove the sunroof seaming welt. (with sunroof) (See SUNROOF UNIT REMOVAL/INSTALLATION.)
10. Remove the A pillar trim. (See A-PILLAR TRIM REMOVAL/INSTALLATION.)
11. Disconnect the rear washer hose B from the joint pipe B and remove it.
12. Disconnect the rear washer hose C from the joint pipe B and remove it.
13. Remove the following parts:
 - (1) Front map light (See MAP LIGHT REMOVAL/INSTALLATION.)
 - (2) Sunvisor (See SUNVISOR REMOVAL/INSTALLATION.)
 - (3) Front scuff plate (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
 - (4) Rear scuff plate (See REAR SCUFF PLATE REMOVAL/INSTALLATION.)
 - (5) B-pillar lower trim (See B-PILLAR LOWER TRIM REMOVAL/INSTALLATION.)
 - (6) Front seat belt adjusting cover (See FRONT SEAT BELT REMOVAL/INSTALLATION.)
 - (7) Front seat belt upper anchor installation bolt (See FRONT SEAT BELT REMOVAL/INSTALLATION.)
 - (8) B-pillar upper trim (See B-PILLAR UPPER TRIM REMOVAL/INSTALLATION.)
 - (9) Assist handle (See ASSIST HANDLE REMOVAL/INSTALLATION.)
 - (10) Trunk board (See TRUNK BOARD REMOVAL/INSTALLATION.)
 - (11) Trunk end trim (See TRUNK END TRIM REMOVAL/INSTALLATION.)
 - (12) Trunk side trim (See TRUNK SIDE TRIM REMOVAL/INSTALLATION.)
 - (13) D-pillar trim (See D-PILLAR TRIM REMOVAL/INSTALLATION.)
 - (14) C-pillar trim (See C-PILLAR TRIM REMOVAL/INSTALLATION.)
 - (15) Headliner (See HEADLINER REMOVAL/INSTALLATION.)
14. Remove the tape and clips shown in the figure.

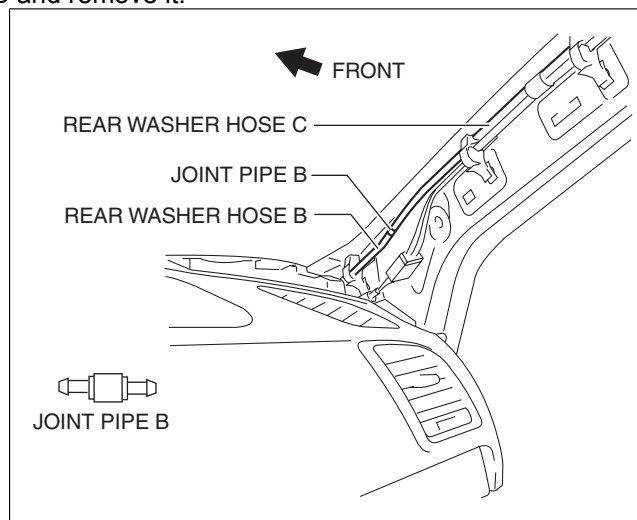


ac5wzw00001625

Without sunroof

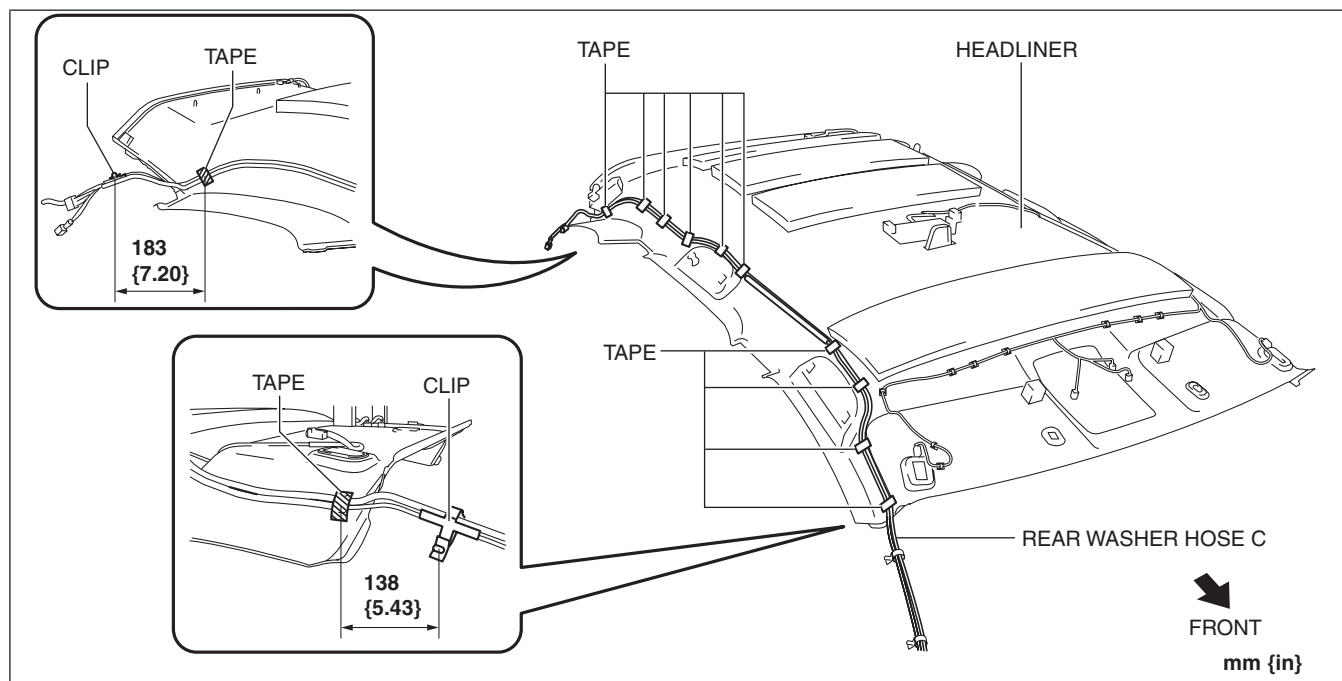


ac5wzw00001626

With sunroof

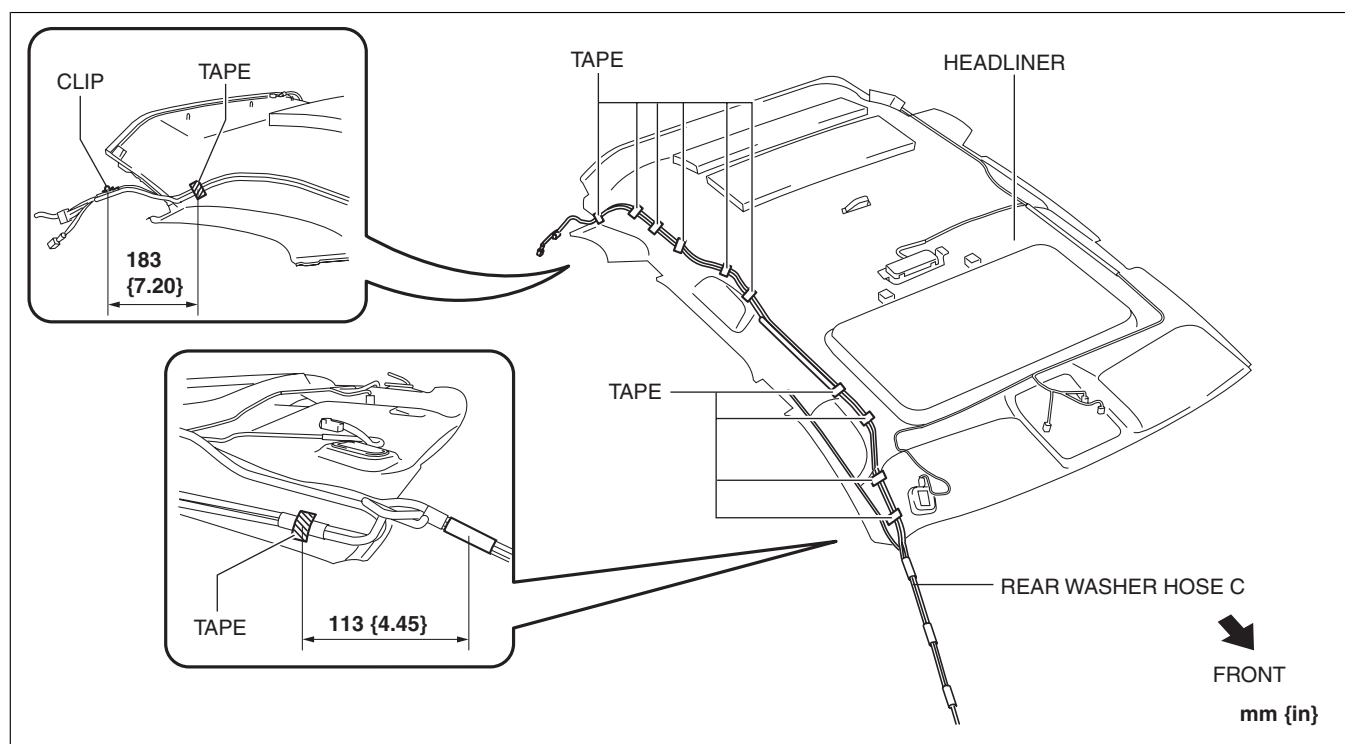


ac5wzw00001627

15. Disconnect the rear washer hose C from the joint pipe C and remove it.
16. Disconnect the rear washer hose D from the joint pipe C.
17. Remove the liftgate upper trim. (See LIFTGATE UPPER TRIM REMOVAL/INSTALLATION.)

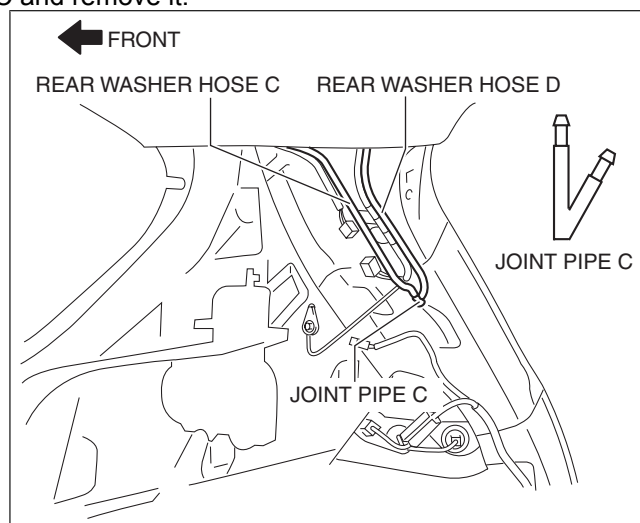


ac5wzw00001628

18. Partially peel the liftgate grommet in the direction of arrow (1) shown in the figure, and remove the liftgate grommet from the liftgate grommet inner.

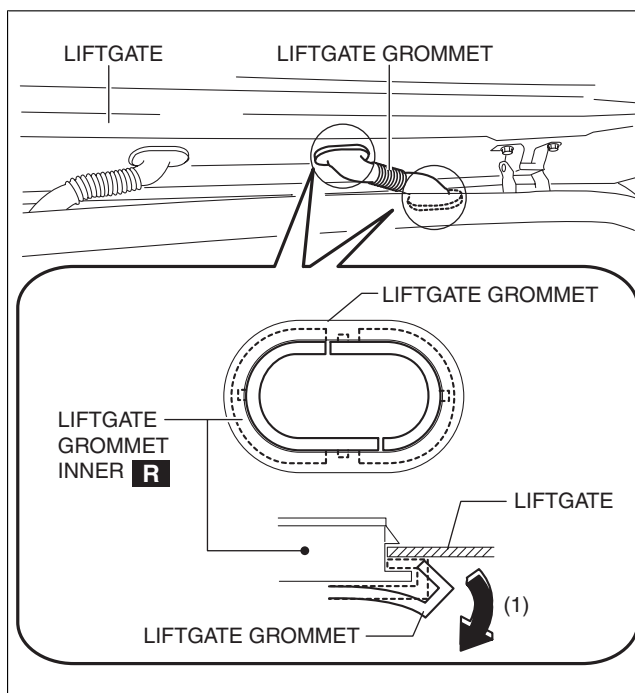


ac5wzw00004636

19. Using a tape-wrapped precision flathead screwdriver, press the liftgate grommet inner tabs in the directions of arrows (2) and (3) shown in the figure and remove each liftgate grommet inner from the liftgate and vehicle side in the direction of arrow (4).

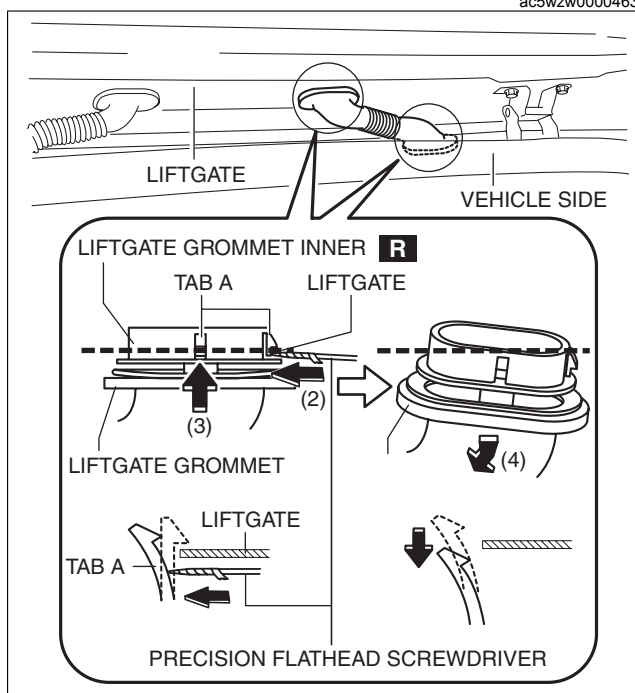

ac5jjw00001537

20. Disconnect the rear washer hose D from the rear washer nozzle and remove it.
21. Install in the reverse order of removal.

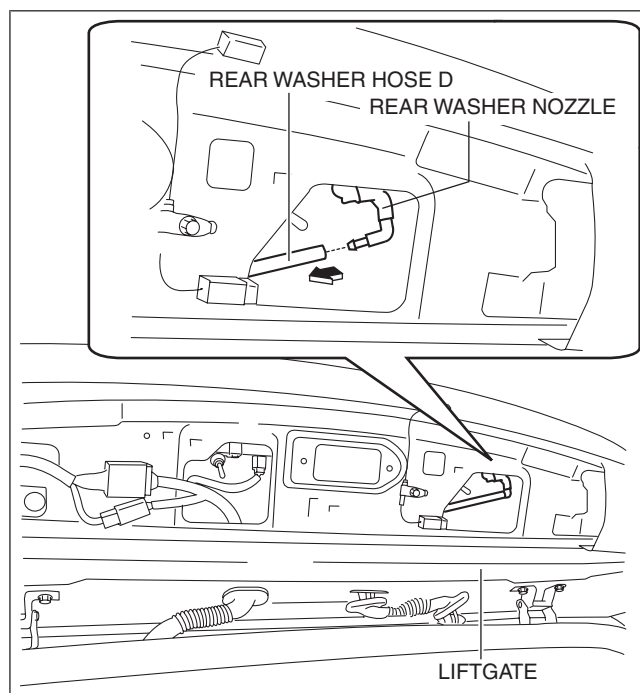

ac5wzw00001630