


## VACUUM CHAMBER INSPECTION [SKYACTIV-D 2.2]

id0113z7705700

1. Remove the vacuum chamber. (See VACUUM CHAMBER REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)
2. Apply negative pressure (**-94 kPa {-705 mmHg, -28 inHg}**) on the port A for one minute to check for the leakage of negative pressure.
  - If there is air leakage, replace the vacuum chamber. (See VACUUM CHAMBER REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)

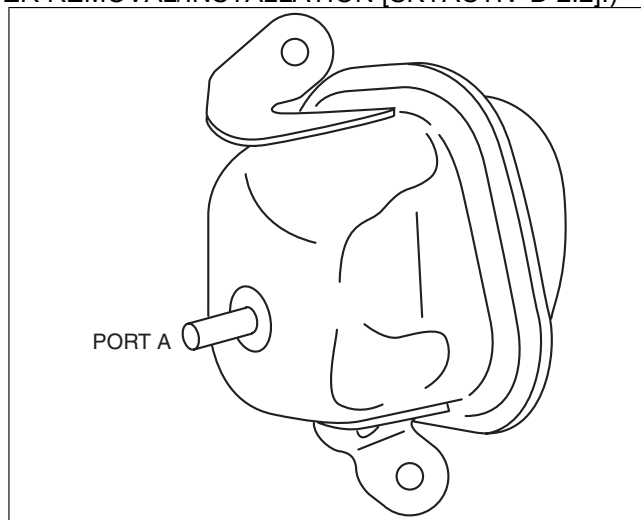

ac5wzw00004892