


PLUG HOLE PLATE REMOVAL/INSTALLATION [SKYACTIV-G 2.0]

id0110h2803900

Caution


- If the rubber on only one side of the plug hole plate front is lifted up, it could damage the adapter at the location shown in the figure. When removing the plug hole plate, lift up the rubbers at the same time.

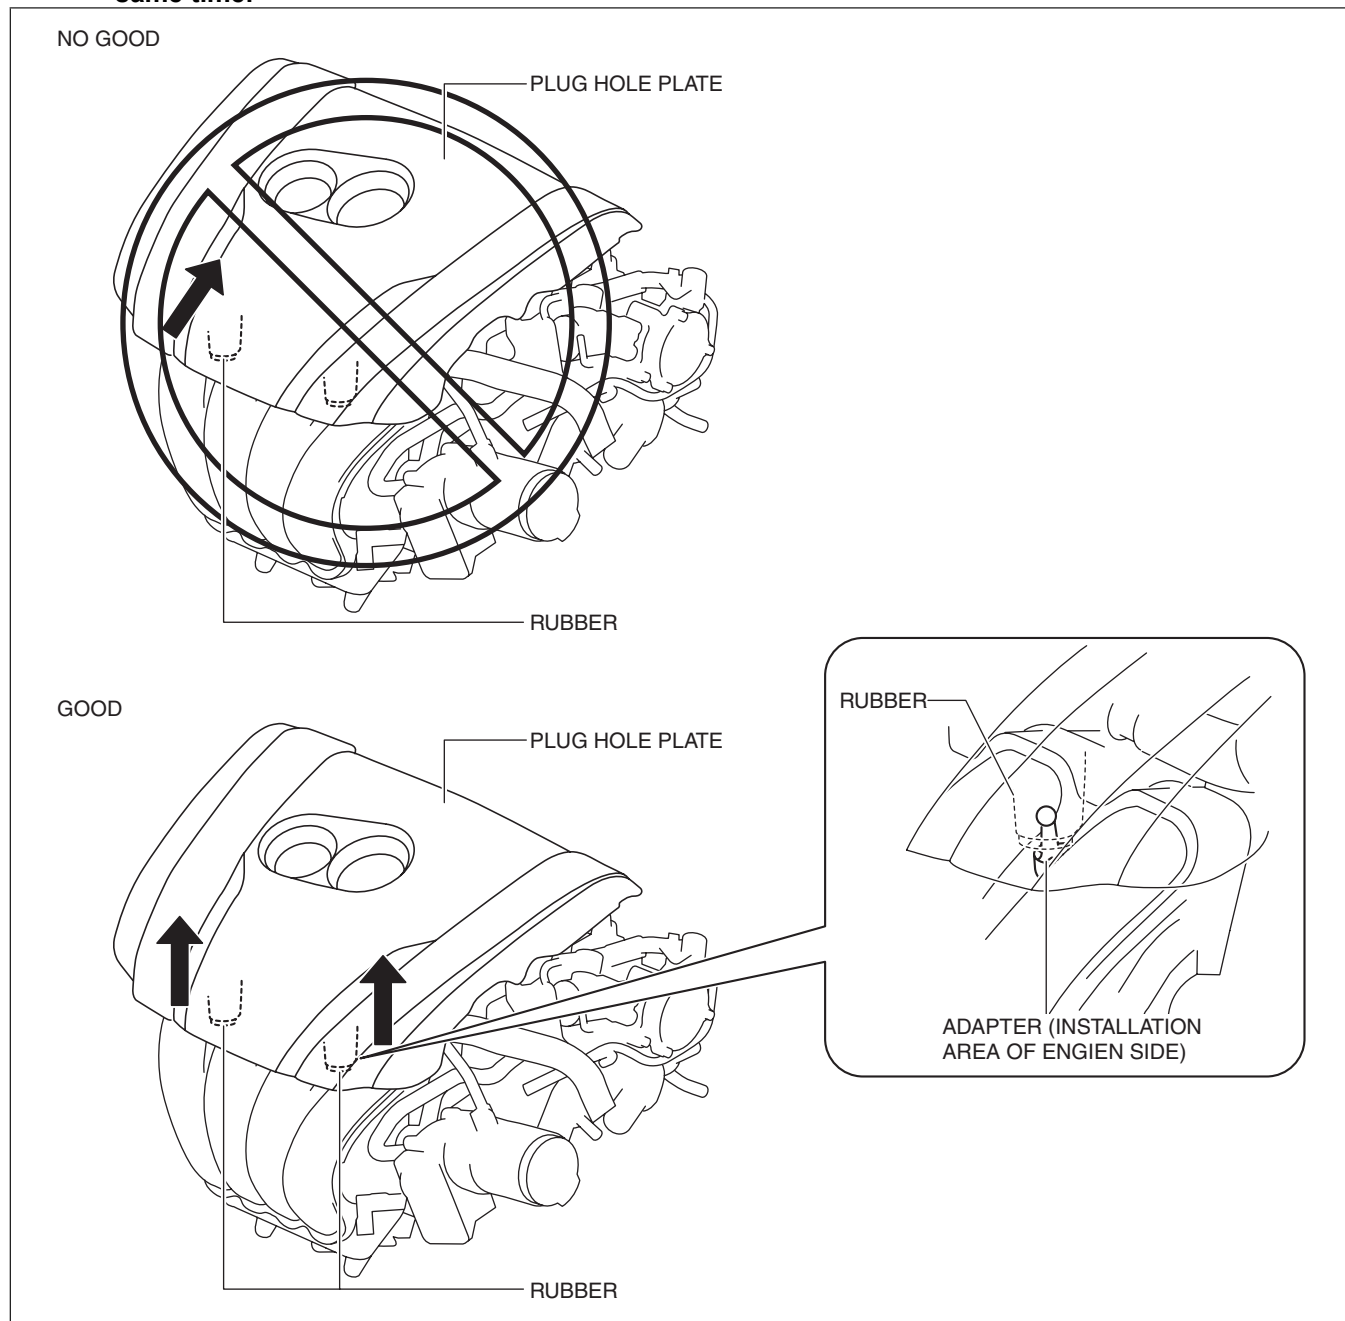

ac5wzw00005852


Removal

1. Pull up the front part of the plug hole plate at the same time and remove the rubber from the adapter on the engine side.

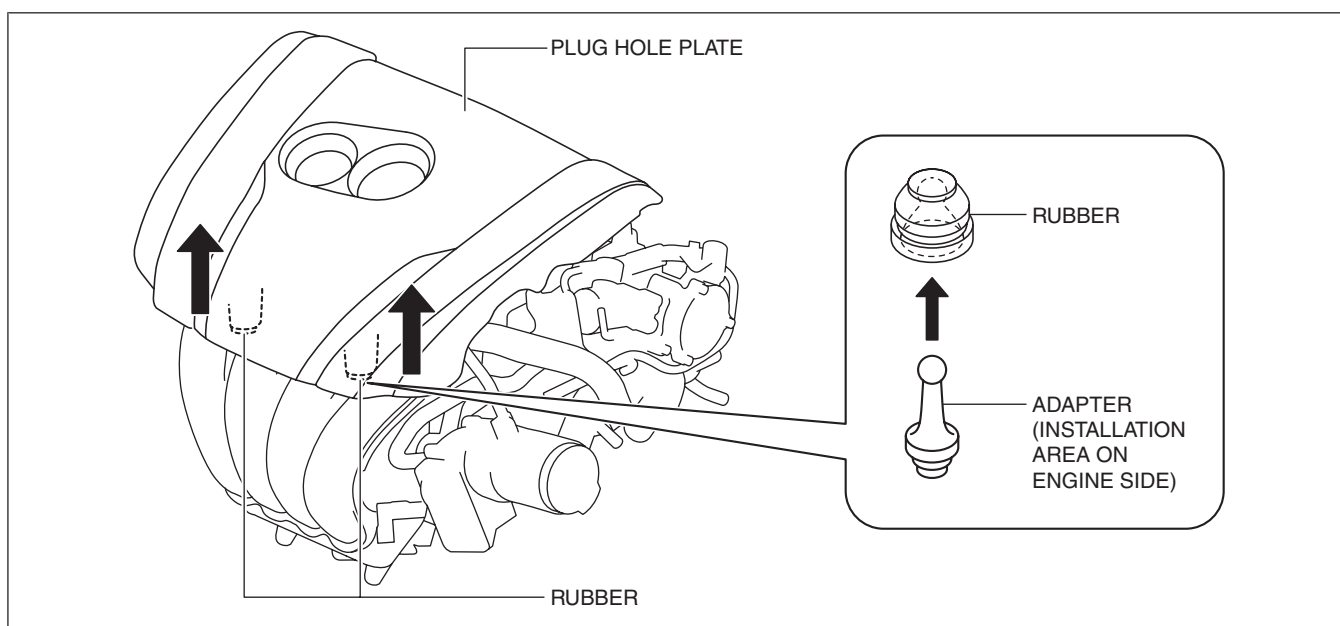

ac5uuw00000520


2. Pull up the plug hole plate in the order shown in the figure and remove the adapter from the rubber on the engine side.

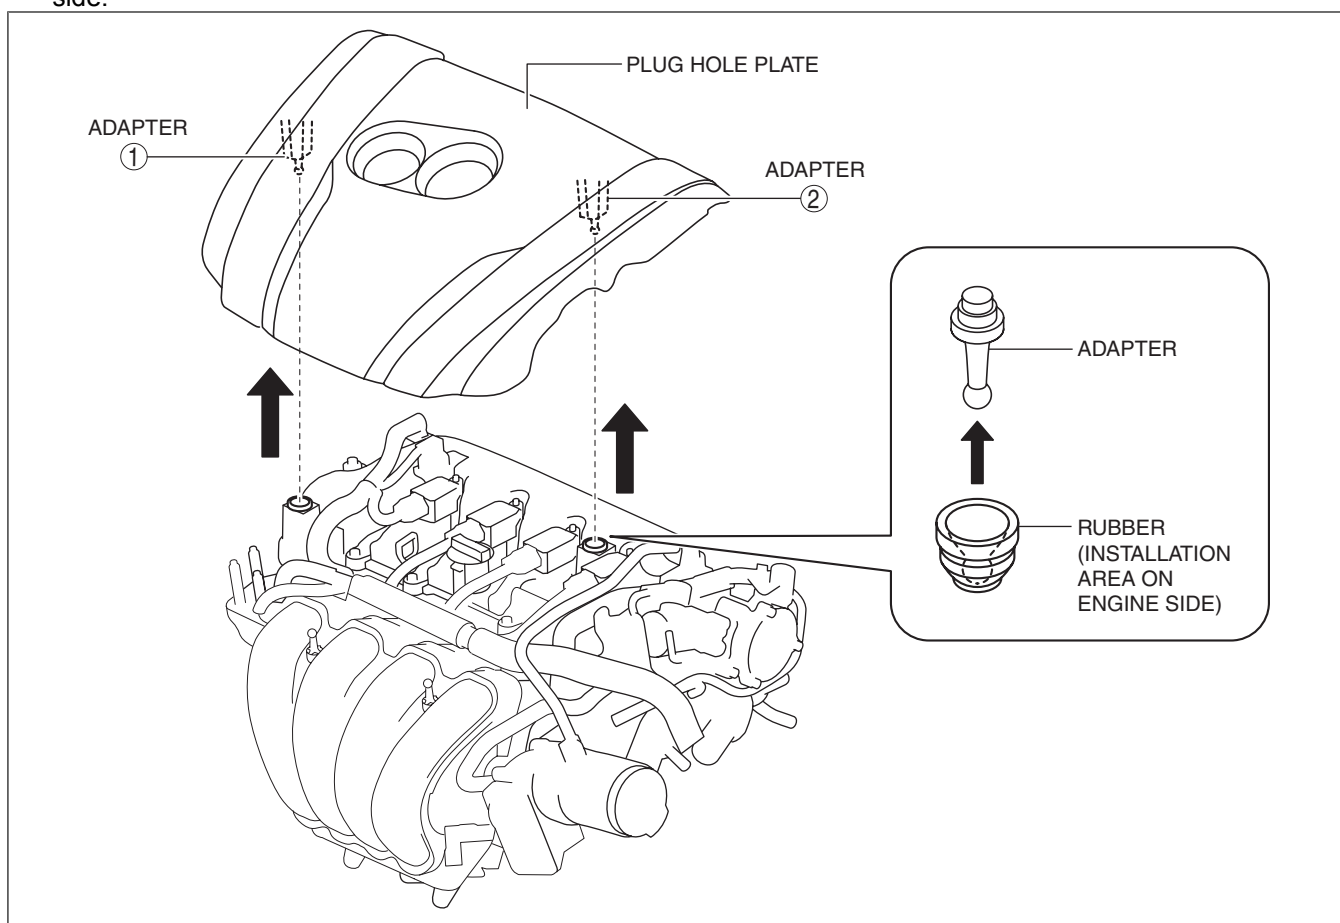

ac5uuw00000521


Installation

1. Press the plug hole plate in the order shown in the figure to insert the adapter to the rubber on the engine side.

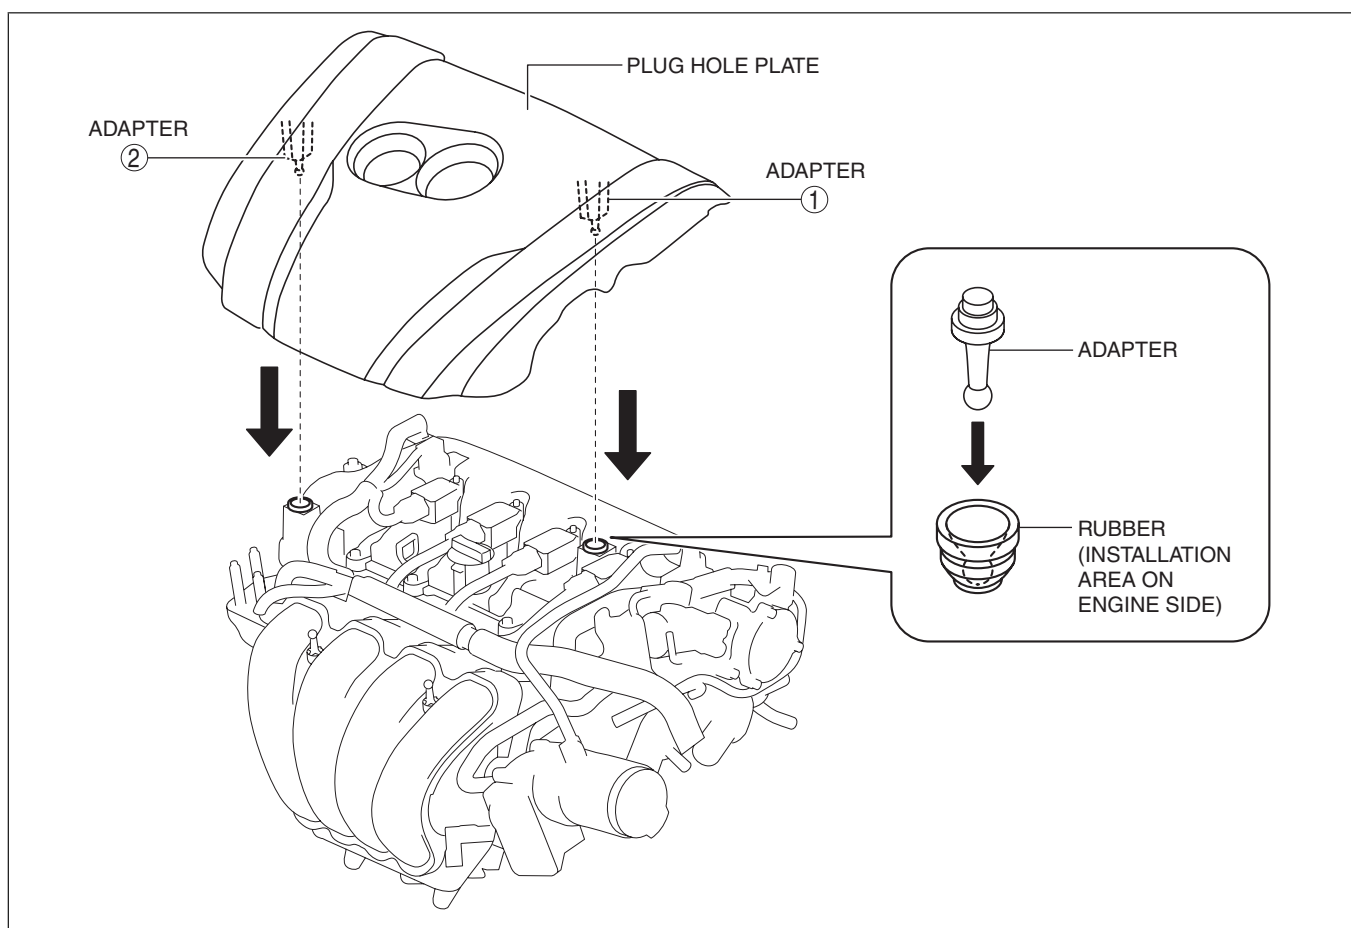

ac5uuw00000522

2. Press the front part of the plug hole plate at the same time to insert the rubber to the adapter on the engine side.

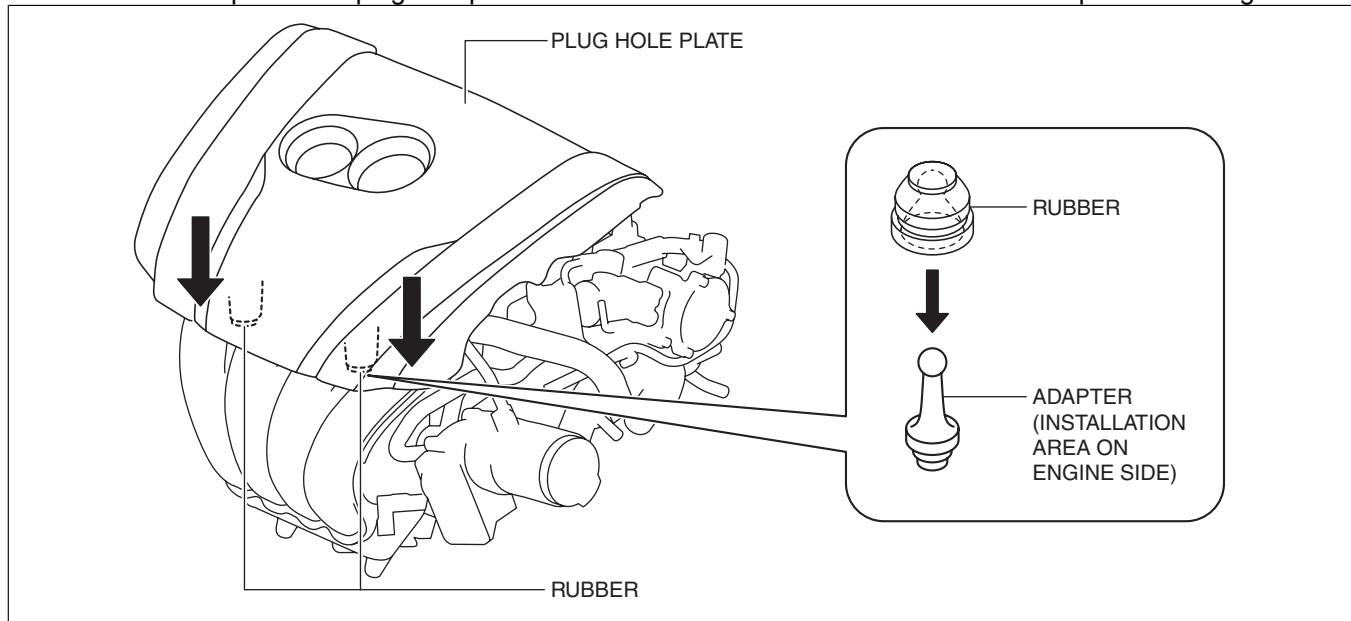

ac5uuw00000523