


BRAKE HOSE (REAR) REMOVAL/INSTALLATION

id041100190400

1. Remove in the order indicated in the table.
2. Install in the reverse order of removal.
3. After installation, add brake fluid, bleed the air, and inspect for fluid leakage. (See BRAKE FLUID AIR BLEEDING.)

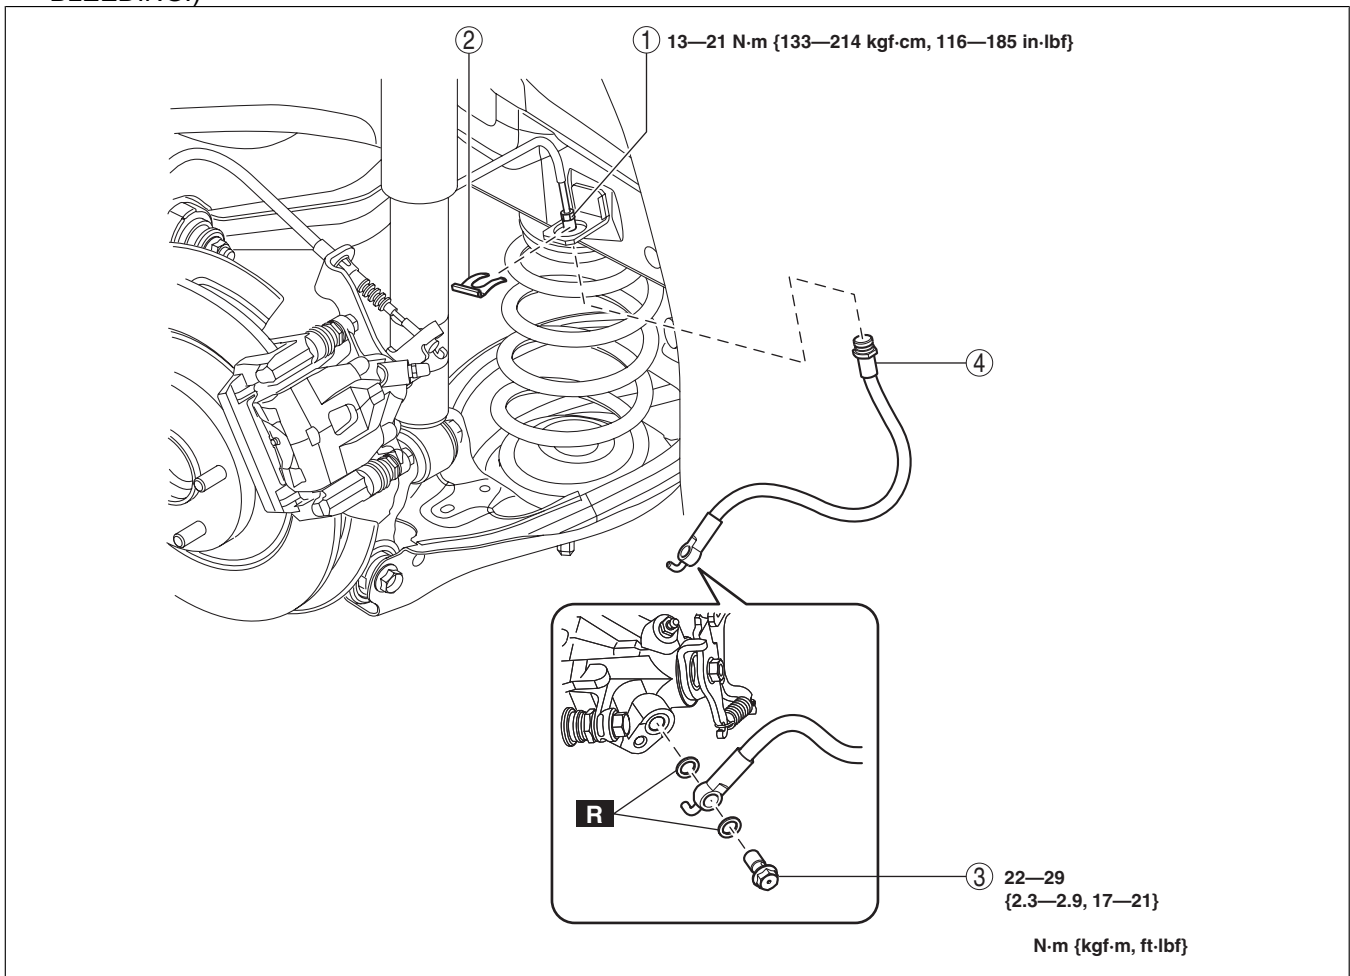

ac5wzw00000184

| | |
|---|------------|
| 1 | Brake pipe |
| 2 | Clip |
| 3 | Bolt |

| | |
|---|------------|
| 4 | Brake hose |
|---|------------|