


## SECURITY AND LOCKS LOCATION INDEX

id091400510000

### Locks and Openers

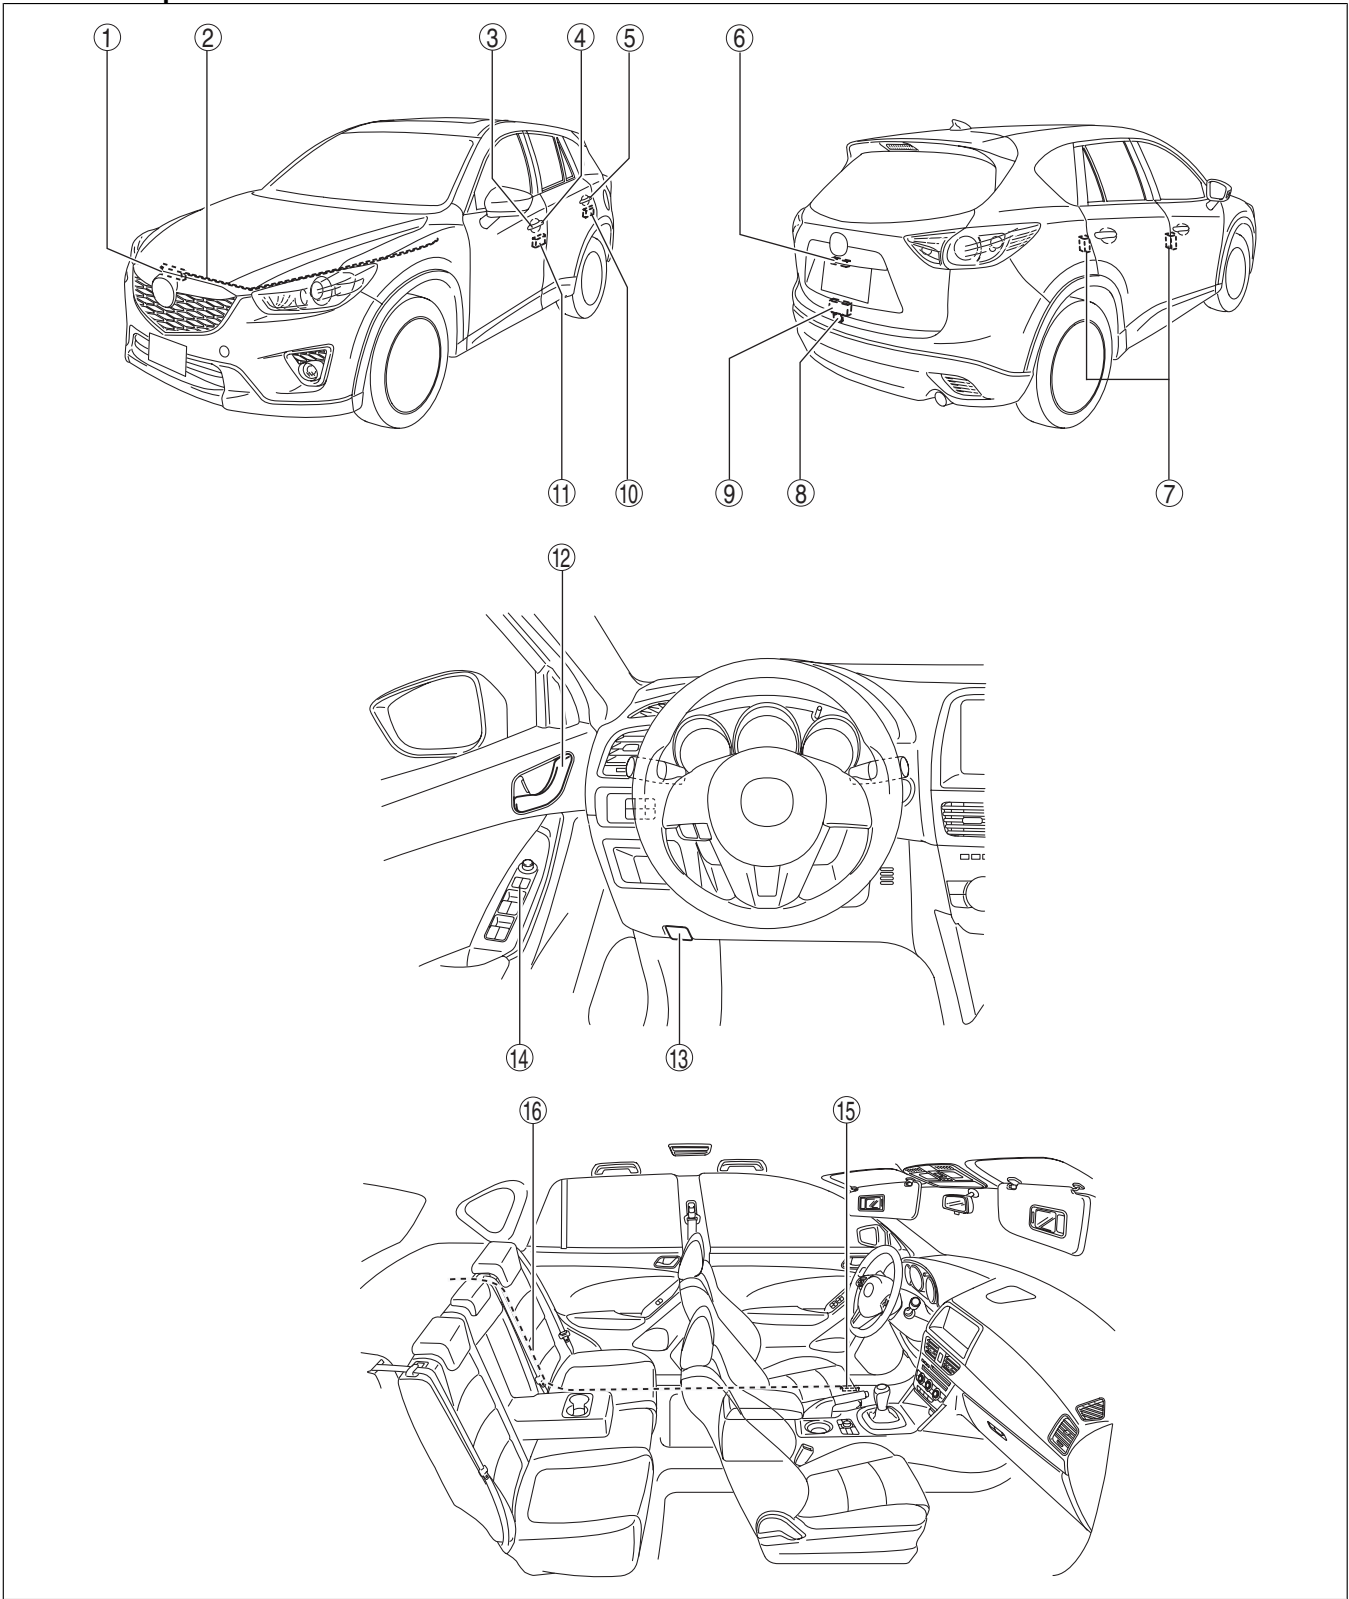

ac5jjw00000445


1	Bonnet latch (See BONNET LATCH AND RELEASE LEVER REMOVAL/INSTALLATION.)
2	Bonnet release cable (See BONNET RELEASE CABLE REMOVAL/INSTALLATION.)

3	Front outer handle (See FRONT OUTER HANDLE REMOVAL/ INSTALLATION.)
---	--

4	Front door key cylinder (See FRONT DOOR KEY CYLINDER REMOVAL/INSTALLATION.) (See FRONT DOOR KEY CYLINDER SWITCH INSPECTION.)
5	Rear outer handle (See REAR OUTER HANDLE REMOVAL/INSTALLATION.)
6	Liftgate opener switch (See LIFTGATE OPENER SWITCH REMOVAL/INSTALLATION.) (See LIFTGATE OPENER SWITCH INSPECTION.)
7	Door lock striker (See DOOR LOCK STRIKER REMOVAL/INSTALLATION.)
8	Liftgate lock striker (See LIFTGATE LOCK STRIKER REMOVAL/INSTALLATION.)
9	Liftgate latch and lock actuator (See LIFTGATE LATCH AND LOCK ACTUATOR REMOVAL/INSTALLATION.) (See LIFTGATE LATCH AND LOCK ACTUATOR INSPECTION.) (See LIFTGATE LOCK ACTUATOR INSPECTION.)
10	Rear door latch and lock actuator (See REAR DOOR LATCH AND LOCK ACTUATOR REMOVAL/INSTALLATION.) (See REAR DOOR LATCH AND LOCK ACTUATOR INSPECTION.) (See REAR DOOR LOCK ACTUATOR INSPECTION.) (See REAR DOOR LATCH SWITCH INSPECTION.) (See DOOR LOCK-LINK SWITCH INSPECTION.)

11	Front door latch and lock actuator (See FRONT DOOR LATCH AND LOCK ACTUATOR REMOVAL/INSTALLATION.) (See FRONT DOOR LATCH AND LOCK ACTUATOR INSPECTION.) (See FRONT DOOR LOCK ACTUATOR INSPECTION.) (See REAR DOOR LATCH SWITCH INSPECTION.) (See DOOR LOCK-LINK SWITCH INSPECTION.)
12	Inner handle (See INNER HANDLE REMOVAL/INSTALLATION.)
13	Bonnet release lever (See BONNET LATCH AND RELEASE LEVER REMOVAL/INSTALLATION.)
14	Door lock switch (With door lock switch) (See DOOR LOCK SWITCH REMOVAL/INSTALLATION.) (See DOOR LOCK SWITCH INSPECTION.)
15	Fuel-filler lid opener lever (See FUEL-FILLER LID OPENER AND LEVER REMOVAL/INSTALLATION.)
16	Fuel-filler lid opener cable (See FUEL-FILLER LID OPENER CABLE REMOVAL/INSTALLATION.)

## Advanced Keyless Entry System / Push Button Start System / Immobilizer System

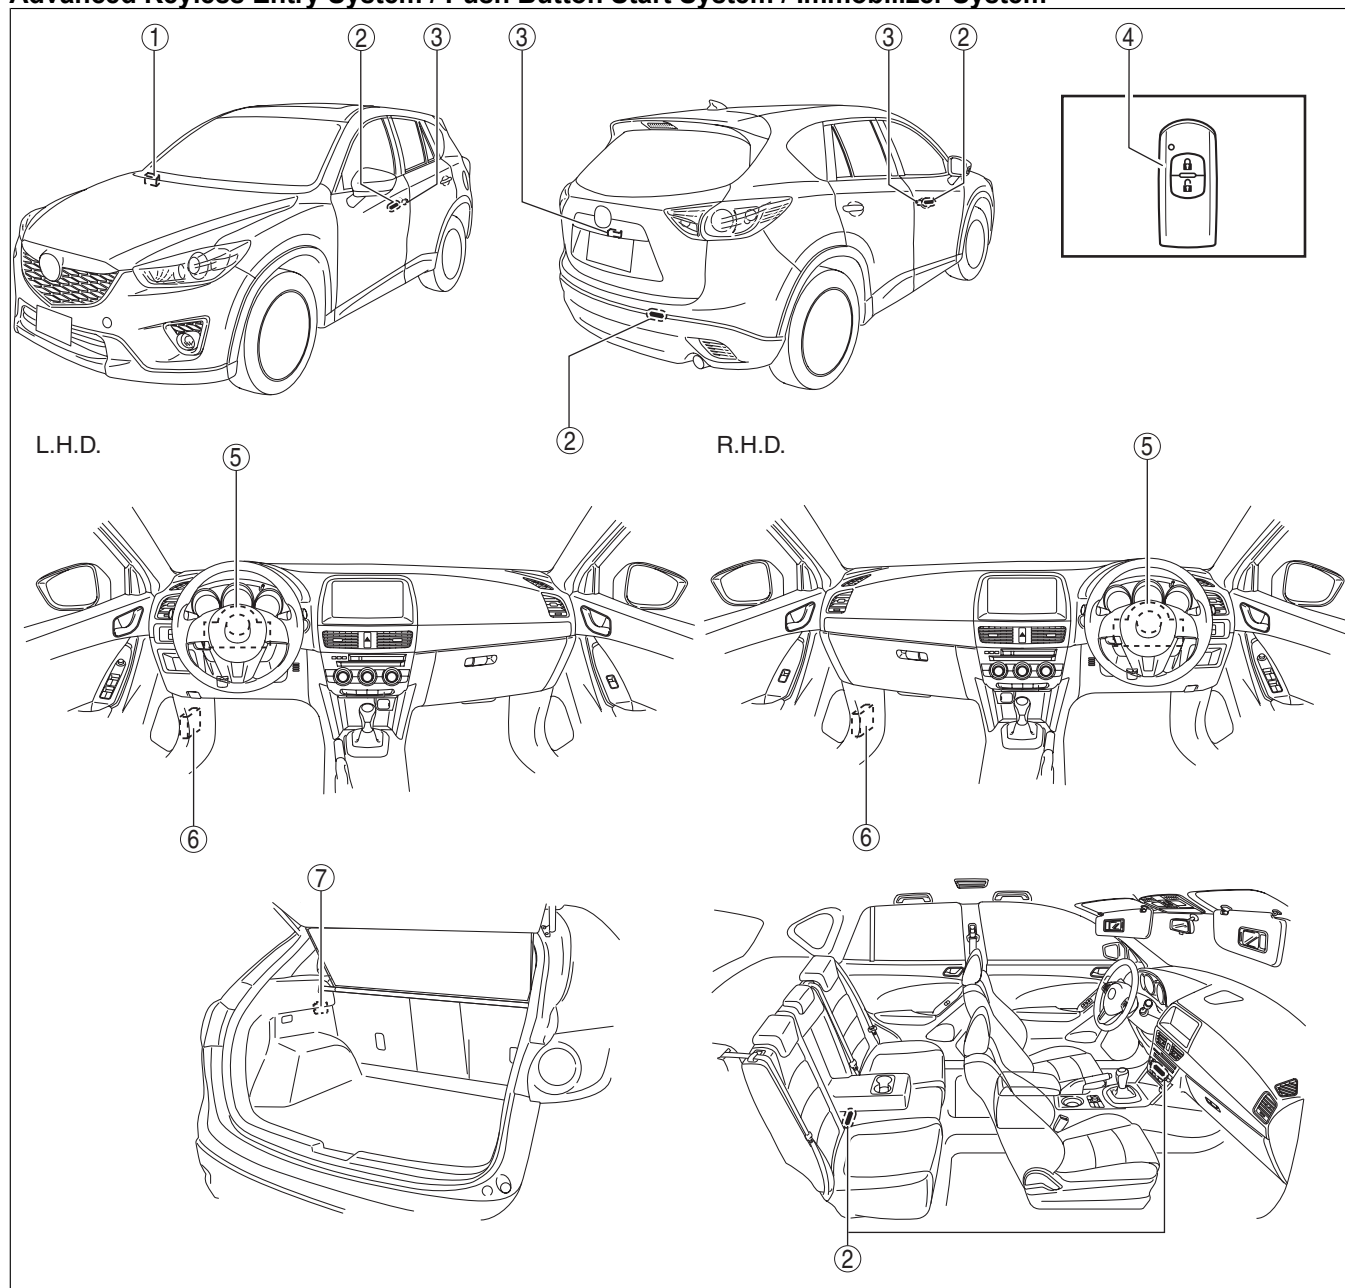

ac5wzw00000004


1	Keyless beeper (See KEYLESS BEEPER REMOVAL/ INSTALLATION.) (See KEYLESS BEEPER INSPECTION.)
2	Keyless antenna (See KEYLESS ANTENNA REMOVAL/ INSTALLATION.)
3	Request switch (See REQUEST SWITCH REMOVAL/ INSTALLATION.) (See REQUEST SWITCH INSPECTION.)

4	Remote transmitter (See REMOTE TRANSMITTER DISASSEMBLY/ASSEMBLY.) (See REMOTE TRANSMITTER ID CODE REGISTRATION.) (See CLEARING REMOTE TRANSMITTER.) (See REMOTE TRANSMITTER BATTERY VOLTAGE INSPECTION.)
---	---

5	Start stop unit (See START STOP UNIT REMOVAL/ INSTALLATION.) (See START STOP UNIT INSPECTION.) (See START STOP UNIT CONFIGURATION (USING READ/WRITE FUNCTION).) (See START STOP UNIT CONFIGURATION (USING AS-BUILT DATA).) (See SECURITY AND LOCKS PERSONALIZATION FEATURES SETTING PROCEDURE.)
---	---

6	LF control unit (See LF CONTROL UNIT REMOVAL/ INSTALLATION.) (See LF CONTROL UNIT INSPECTION.)
7	Keyless receiver (See KEYLESS RECEIVER REMOVAL/ INSTALLATION.) (See KEYLESS RECEIVER INSPECTION.)

### Keyless entry system / Push Button Start System / immobilizer system

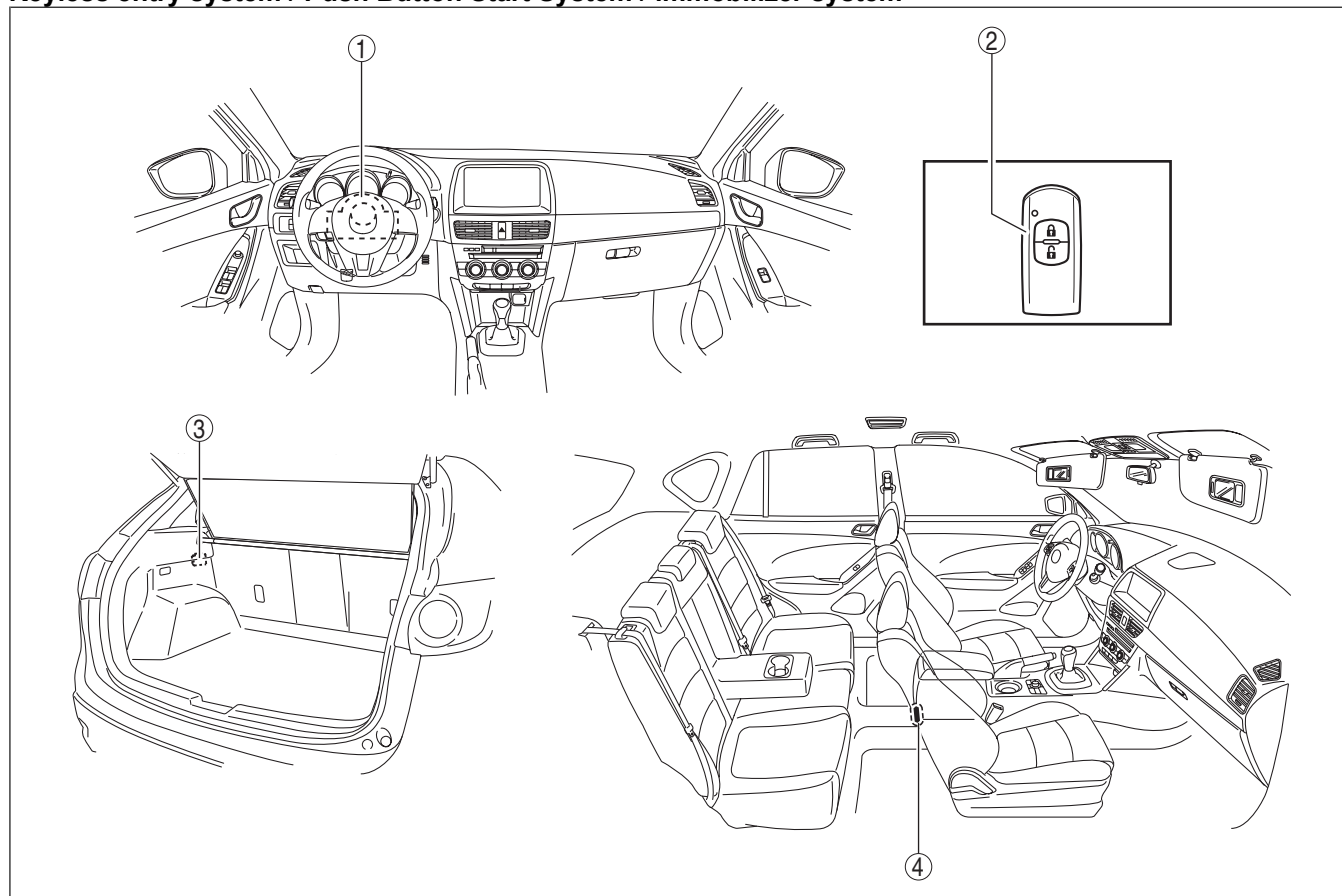


ac5wzw00000005

1	Start stop unit (See START STOP UNIT REMOVAL/ INSTALLATION.) (See START STOP UNIT INSPECTION.) (See START STOP UNIT CONFIGURATION (USING READ/WRITE FUNCTION).) (See START STOP UNIT CONFIGURATION (USING AS-BUILT DATA).) (See SECURITY AND LOCKS PERSONALIZATION FEATURES SETTING PROCEDURE.)
2	Remote transmitter (See REMOTE TRANSMITTER DISASSEMBLY/ASSEMBLY.) (See REMOTE TRANSMITTER ID CODE REGISTRATION.) (See CLEARING REMOTE TRANSMITTER.) (See REMOTE TRANSMITTER BATTERY VOLTAGE INSPECTION.)

3	Keyless receiver (See KEYLESS RECEIVER REMOVAL/ INSTALLATION.) (See KEYLESS RECEIVER INSPECTION.)
4	Keyless antenna (See KEYLESS ANTENNA REMOVAL/ INSTALLATION.)

# **Theft-deterrent System** **With intruder sensor**

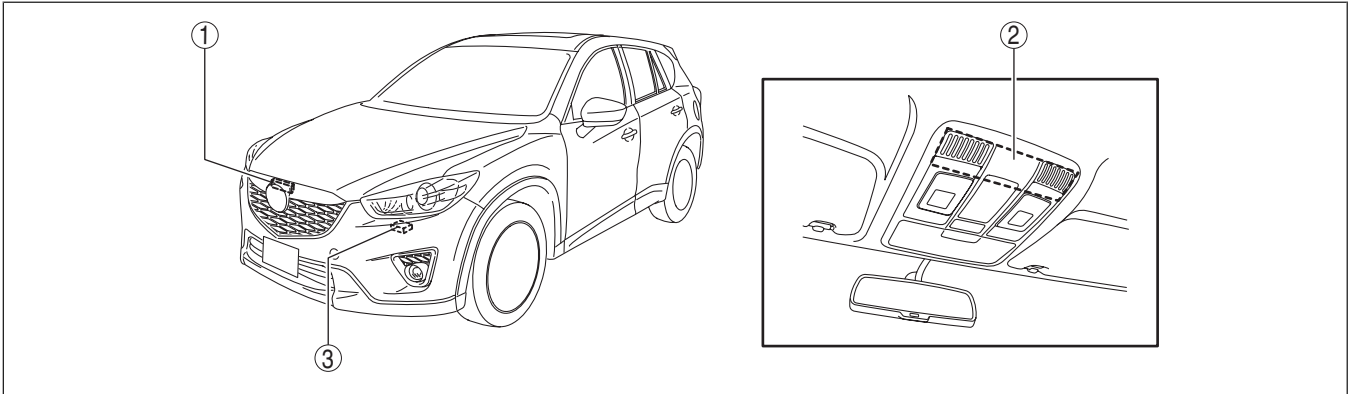


ac5wzw00002471

1	Bonnet latch switch (See BONNET LATCH SWITCH INSPECTION.)
2	Intruder sensor (See INTRUDER SENSOR REMOVAL/ INSTALLATION.) (See INTRUDER SENSOR INSPECTION.)

3	Theft-deterrent siren (See THEFT-DETERRENT SIREN REMOVAL/INSTALLATION.) (See THEFT-DETERRENT SIREN INSPECTION.)
---	---

## **Without intruder sensor**

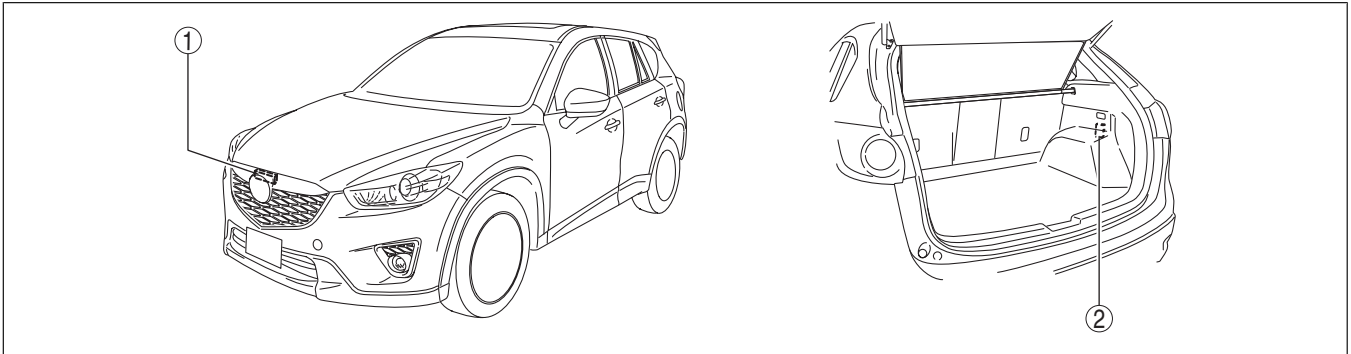

ac5wzw00002472

1	Bonnet latch switch (See BONNET LATCH SWITCH INSPECTION.)
2	Theft-deterrent horn (See THEFT-DETERRENT HORN REMOVAL/INSTALLATION.) (See THEFT-DETERRENT HORN INSPECTION.)