


## DOOR LOCK STRIKER REMOVAL/INSTALLATION

id091400511600

1. Remove the screws, and then remove the door lock striker.
2. Install in the reverse order of removal.
3. Adjust the door. (See DOOR ADJUSTMENT.)

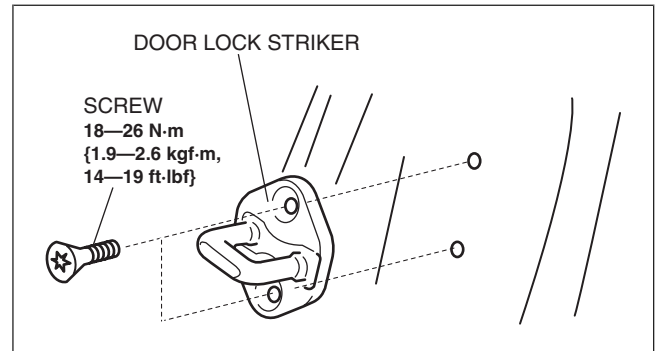

ac5wzw00000349