


WIPER/WASHER SYSTEM LOCATION INDEX

id091900800100

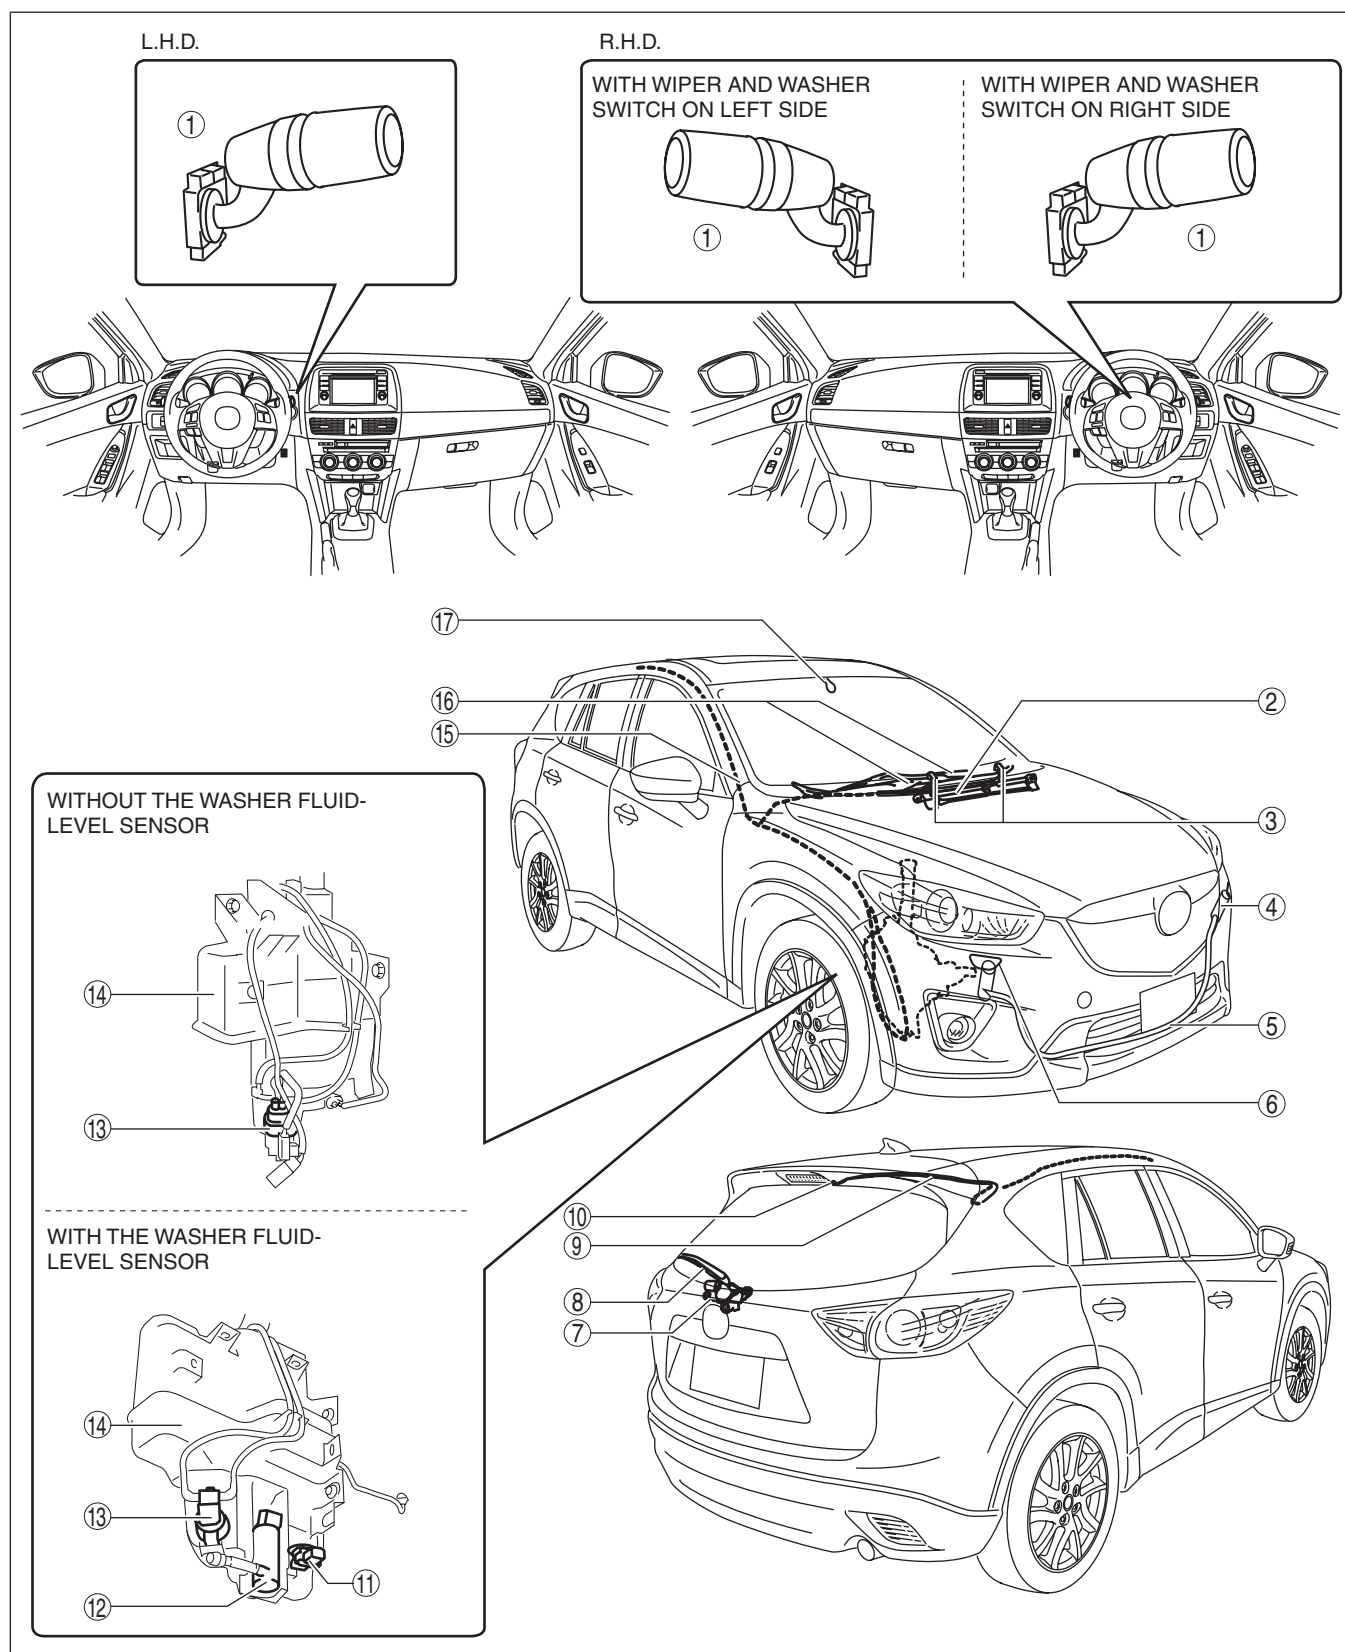

<p>1 Wiper and washer switch (See WIPER AND WASHER SWITCH REMOVAL/INSTALLATION.) (See WINDSHIELD WIPER AND WASHER SWITCH INSPECTION.) (See REAR WIPER AND WASHER SWITCH INSPECTION.)</p>	<p>2 Windshield wiper motor (See WINDSHIELD WIPER MOTOR AND LINK REMOVAL/INSTALLATION.) (See WINDSHIELD WIPER MOTOR INSPECTION.)</p>
--	--

ac5wzw00001684

3	Windshield washer nozzle (See WINDSHIELD WASHER NOZZLE REMOVAL/INSTALLATION.) (See WINDSHIELD WASHER NOZZLE ADJUSTMENT.)
4	Headlight cleaner actuator (with headlight cleaner system) (See HEADLIGHT CLEANER ACTUATOR REMOVAL/INSTALLATION.)
5	Headlight cleaner hose (with headlight cleaner system) (See HEADLIGHT CLEANER HOSE REMOVAL/INSTALLATION.)
6	Headlight cleaner cover (with headlight cleaner system) (See HEADLIGHT CLEANER COVER REMOVAL/INSTALLATION.)
7	Rear wiper motor (with rear wiper system) (See REAR WIPER MOTOR REMOVAL/INSTALLATION.) (See REAR WIPER MOTOR INSPECTION.)
8	Rear wiper arm and blade (with rear wiper system) (See REAR WIPER ARM AND BLADE REMOVAL/INSTALLATION.) (See REAR WIPER ARM AND BLADE ADJUSTMENT.)
9	Rear washer hose (with rear wiper system) (See REAR WASHER HOSE REMOVAL/INSTALLATION.)
10	Rear washer nozzle (with rear wiper system) (See REAR WASHER NOZZLE REMOVAL/INSTALLATION.) (See REAR WASHER NOZZLE ADJUSTMENT.)
11	Washer fluid-level sensor (with washer fluid-level sensor) (See WASHER FLUID-LEVEL SENSOR REMOVAL/INSTALLATION.) (See WASHER FLUID-LEVEL SENSOR INSPECTION.)
12	Headlight cleaner motor (with headlight cleaner system) (See HEADLIGHT CLEANER MOTOR REMOVAL/INSTALLATION.) (See HEADLIGHT CLEANER MOTOR INSPECTION.)
13	Washer motor (See WASHER MOTOR REMOVAL/INSTALLATION.) (See WASHER MOTOR INSPECTION.)
14	Washer tank (See WASHER TANK REMOVAL/INSTALLATION.)
15	Windshield washer hose (See WINDSHIELD WASHER HOSE REMOVAL/INSTALLATION.)
16	Windshield wiper arm and blade (See WINDSHIELD WIPER ARM AND BLADE REMOVAL/INSTALLATION.) (See WINDSHIELD WIPER ARM AND BLADE ADJUSTMENT.)

17	Rain sensor (with auto wiper system) (See RAIN SENSOR REMOVAL/INSTALLATION.) (See RAIN SENSOR INITIALIZATION SETTING.) (See WIPER/WASHER SYSTEM PERSONALIZATION FEATURES SETTING PROCEDURE.)
----	---