

DOWN SWITCH INSPECTION [GW6A-EL, GW6AX-EL]


id051712600600

Continuity Inspection

Note


- The down switch is built into the selector lever component.

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the front console. (See FRONT CONSOLE REMOVAL/INSTALLATION.)
3. Disconnect the selector lever component connector.

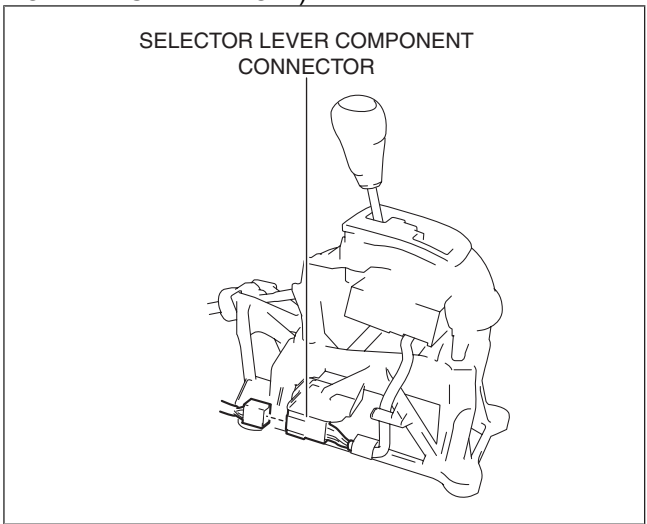

ac5wzw00000788

4. Verify that the continuity between selector lever component terminals D and J.
 - If not as verified, replace the selector lever component. (See AUTOMATIC TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION.)

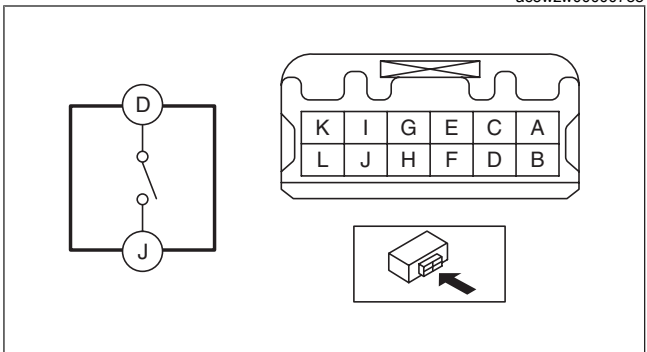

ac5wzw00000789

Down switch specification

Test condition	Continuity
Selector lever is in the M position (–) side position.	Continuity
Selector lever is not in the M position (–) side position.	No continuity