


ENGINE OIL LEVEL INSPECTION [SKYACTIV-D 2.2]

id0111s6800500

1. Position the vehicle on level ground.
2. Warm up the engine.
3. Stop the engine and allow **at least 5 min** before continuing.
4. Remove the dipstick, wipe it cleanly, and reinstall it fully.
5. Remove the dipstick and verify that the oil level is between the X and L marks on the dipstick.
 - If the oil level is below or near the L mark, add engine oil. (See ENGINE OIL REPLACEMENT [SKYACTIV-D 2.2].)
 - If the oil level is close to or exceeds the X mark, replace the engine oil. (See ENGINE OIL REPLACEMENT [SKYACTIV-D 2.2].)
6. Insert the oil level gauge completely until it attaches to the cylinder head cover.

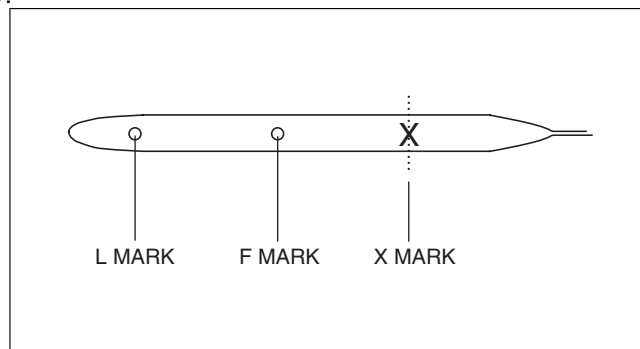

ac5wzw00004836