


VACUUM HOSE REMOVAL/INSTALLATION

id041100801600


L.H.D.

1. Remove the engine cover. (SKYACTIV-D 2.2) (See ENGINE COVER REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)
2. Pinch open the clamp using pliers and disconnect the vacuum hose.

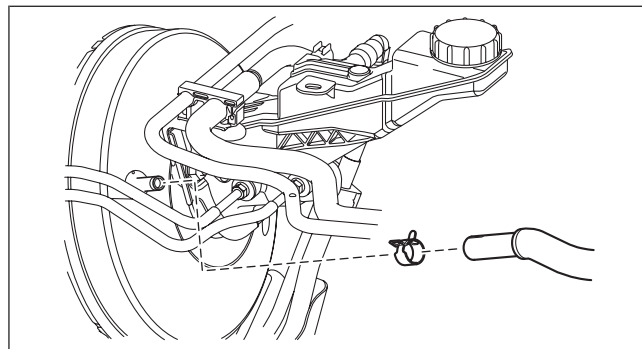


ac5wzw00000210

3. Pinch open the clamp using pliers and disconnect the vacuum hose. (SKYACTIV-G 2.0, SKYACTIV-G 2.5)

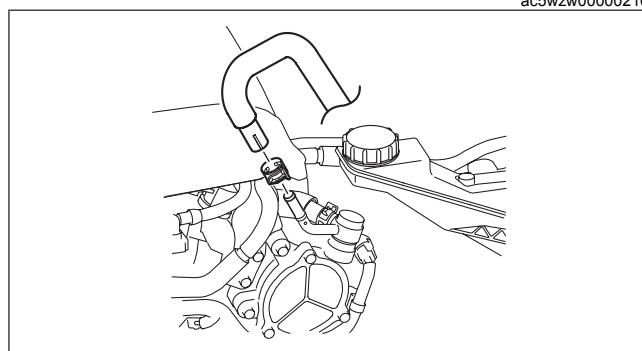

ac5wzw00000211


4. Detach the vacuum hose from the clip. (SKYACTIV-D 2.2)
5. Pinch open the clamp using pliers and disconnect the vacuum hose. (SKYACTIV-D 2.2)
6. Remove the vacuum hose.
7. Install in the reverse order of removal.

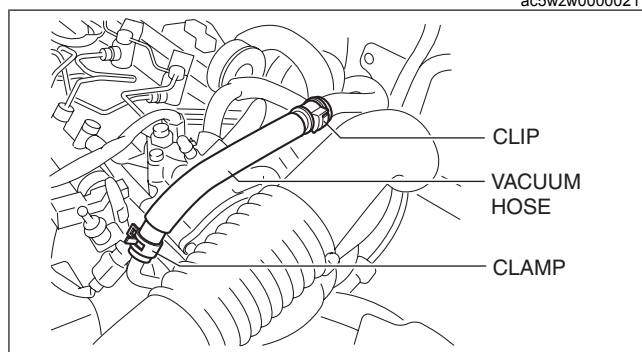

ac5wzw00004506


R.H.D.

1. Remove the engine cover. (SKYACTIV-D 2.2) (See ENGINE COVER REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)
2. Pinch open the clamp using pliers and disconnect the vacuum hose.

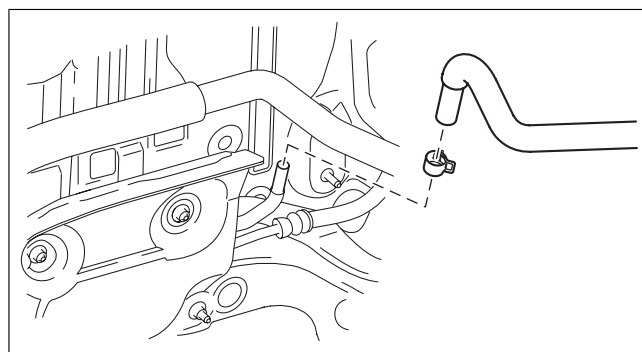


ac5wzw00000212

3. Pinch open the clamp using pliers and disconnect the vacuum hose. (SKYACTIV-G 2.0, SKYACTIV-G 2.5)

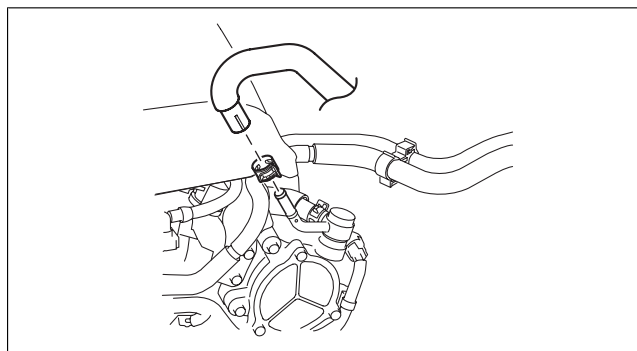

ac5wzw00000213

4. Detach the vacuum hose from the clip. (SKYACTIV-D 2.2)
5. Pinch open the clamp using pliers and disconnect the vacuum hose. (SKYACTIV-D 2.2)
6. Remove the vacuum hose.
7. Install in the reverse order of removal.

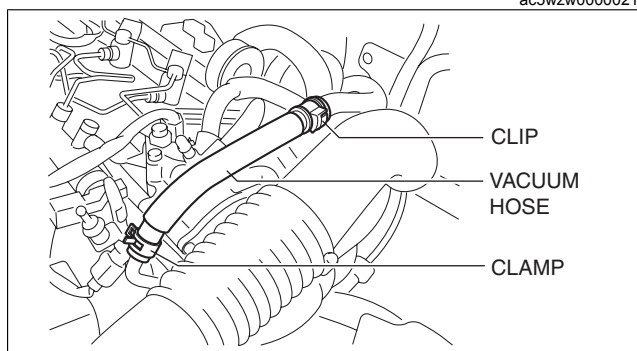

ac5wzw00004506