


## WIPER AND WASHER SWITCH REMOVAL/INSTALLATION

id091900800200

### Note

- If the ignition has been switched OFF (LOCK) with the driver's door closed, the wiper and washer switch cannot be removed because the steering will be locked and the service hole cannot be accessed.


1. Switch the ignition ON (engine off or on).
2. Open the driver's door.
3. Switch the ignition OFF (LOCK).
4. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
5. Remove the column cover. (See COLUMN COVER REMOVAL/INSTALLATION.)
6. Rotate the steering wheel in the direction of the arrow shown in the figure to the angle where the service hole is visible.

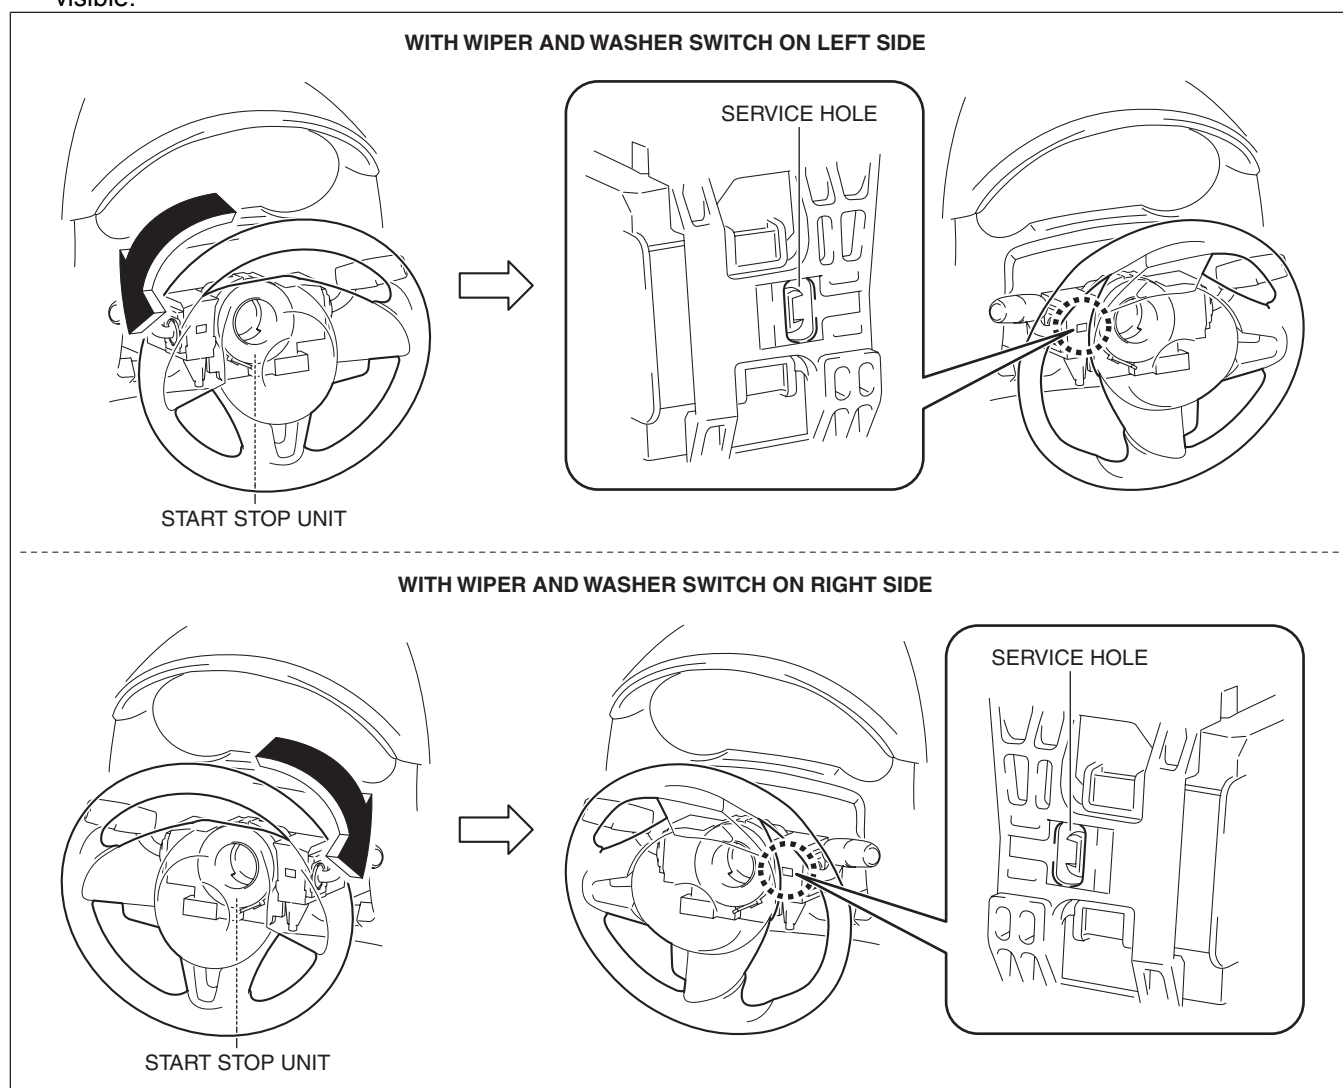


7. Insert a tape-wrapped flathead screwdriver into the service hole in the position shown in the figure.

ac5wzw00001685

WITH WIPER AND WASHER SWITCH ON LEFT SIDE

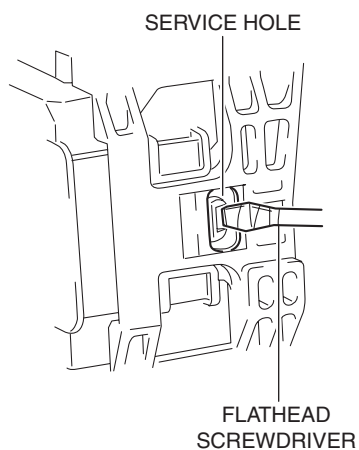


WITH WIPER AND WASHER SWITCH ON RIGHT SIDE

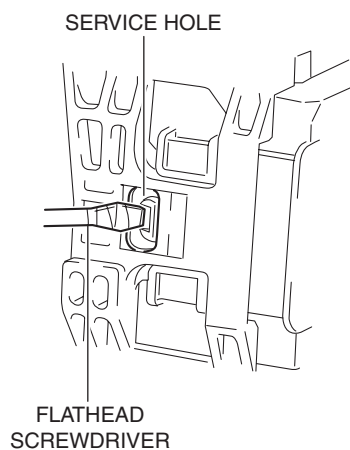


ac5wzw00001647

8. While pressing the wiper and washer switch tab in the direction of the arrow (1) shown in the figure using a flathead screwdriver, pull out the wiper and washer switch in the direction of the arrow (2) shown in the figure to detach the wiper and washer switch tab and the start stop unit.

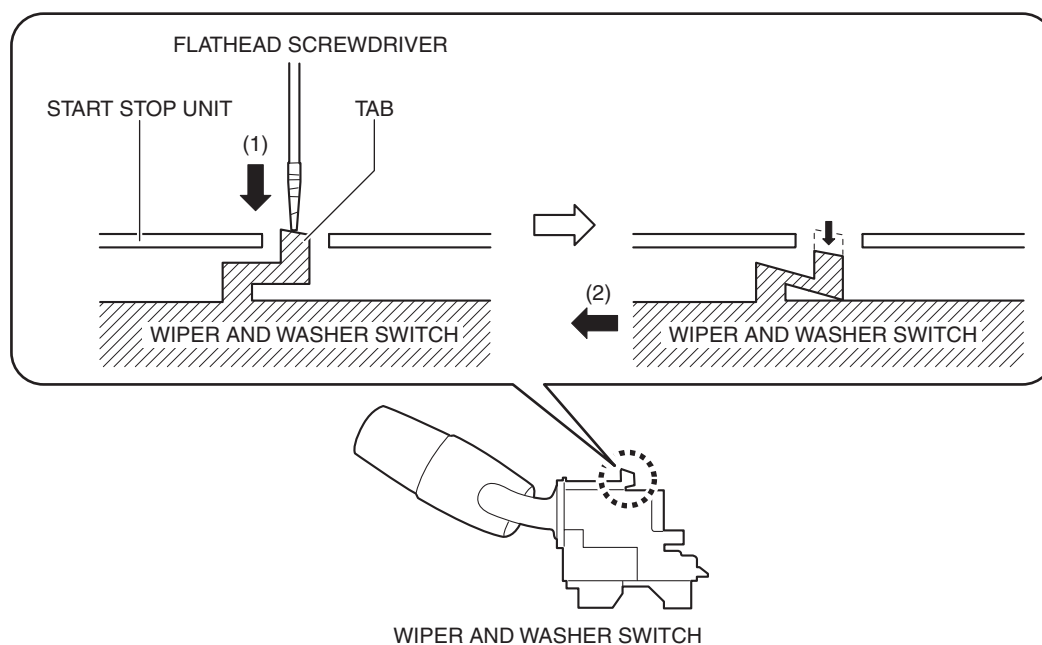

ac5wzw00001686

9. Remove the wiper and washer switch from the start stop unit.

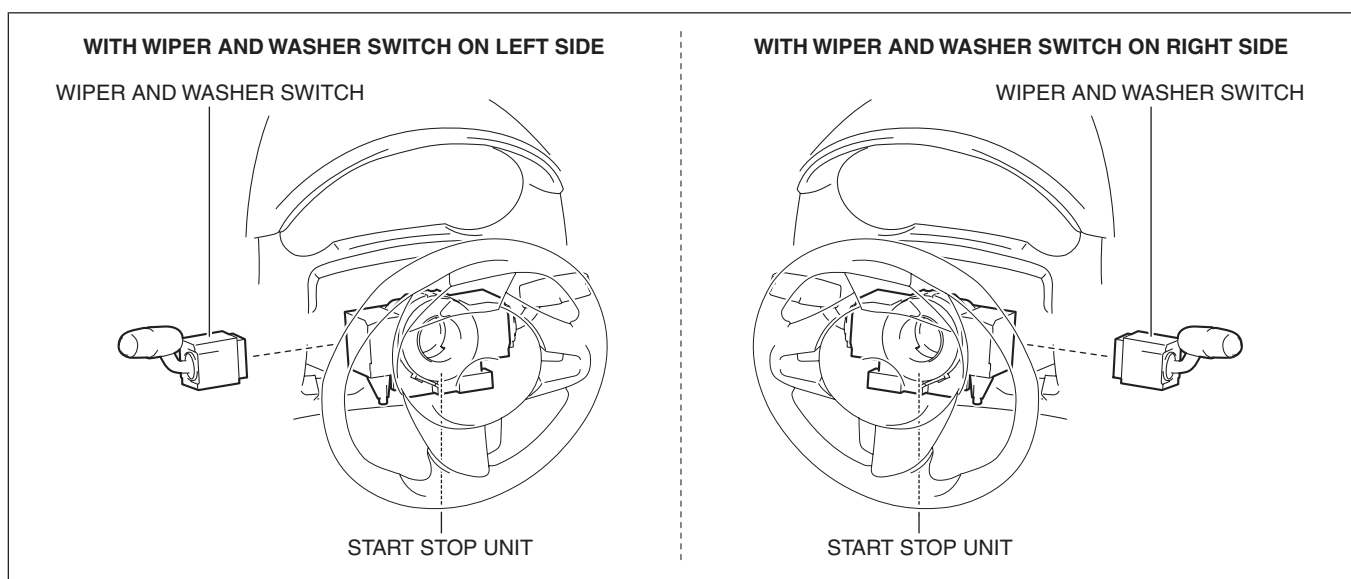

ac5wzw00001687

10. Install in the reverse order of removal.