


THEFT-DETERRENT HORN INSPECTION

id091400004900

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
 - (1) Trunk end trim (See TRUNK END TRIM REMOVAL/INSTALLATION.)
 - (2) Rear scuff plate (RH) (See REAR SCUFF PLATE REMOVAL/INSTALLATION.)
 - (3) Trunk side trim (RH) (See TRUNK SIDE TRIM REMOVAL/INSTALLATION.)
 - (4) Theft-deterrent horn (See THEFT-DETERRENT HORN REMOVAL/INSTALLATION.)
3. Apply battery positive voltage to horn terminal A, and connect the horn retaining bolt to ground as shown in the figure, and then verify that the horn sounds.
 - If the horn does not sound, replace the horn.

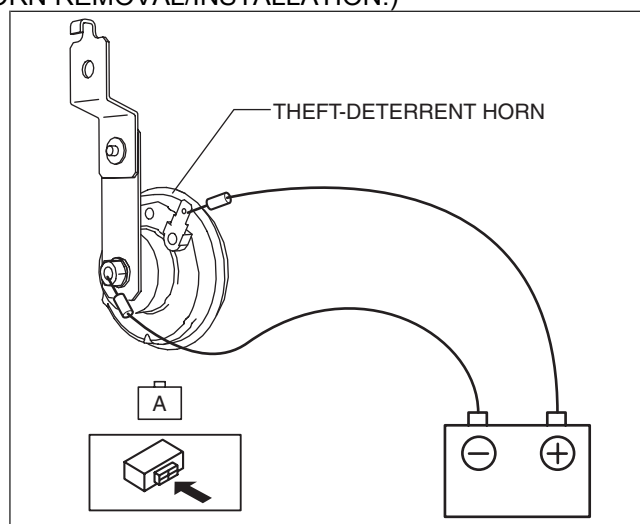

ac5jjw00001192