


Warning

- **Handling a side air bag improperly can accidentally operate (deploy) the air bag, which may seriously injure you. Read the service warnings in the Workshop Manual before handling the front seat (side air bag integrated). (See AIR BAG SYSTEM SERVICE WARNINGS.) (See AIR BAG SYSTEM SERVICE CAUTIONS.)**

L.H.D.

1. Switch the ignition off (LOCK).
2. Disconnect the negative battery cable and wait for **1 min or more**. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
3. Remove the front seat side cover. (See FRONT SEAT SIDE COVER REMOVAL/INSTALLATION.)
4. Remove the power seat switch. (See POWER SEAT SWITCH REMOVAL/INSTALLATION.)
5. Connect the power seat switch connector.
6. Inspect for continuity between the power seat switch connector terminals using an ohmmeter.
 - If not as specified, replace the power seat switch. (See POWER SEAT SWITCH REMOVAL/INSTALLATION.)

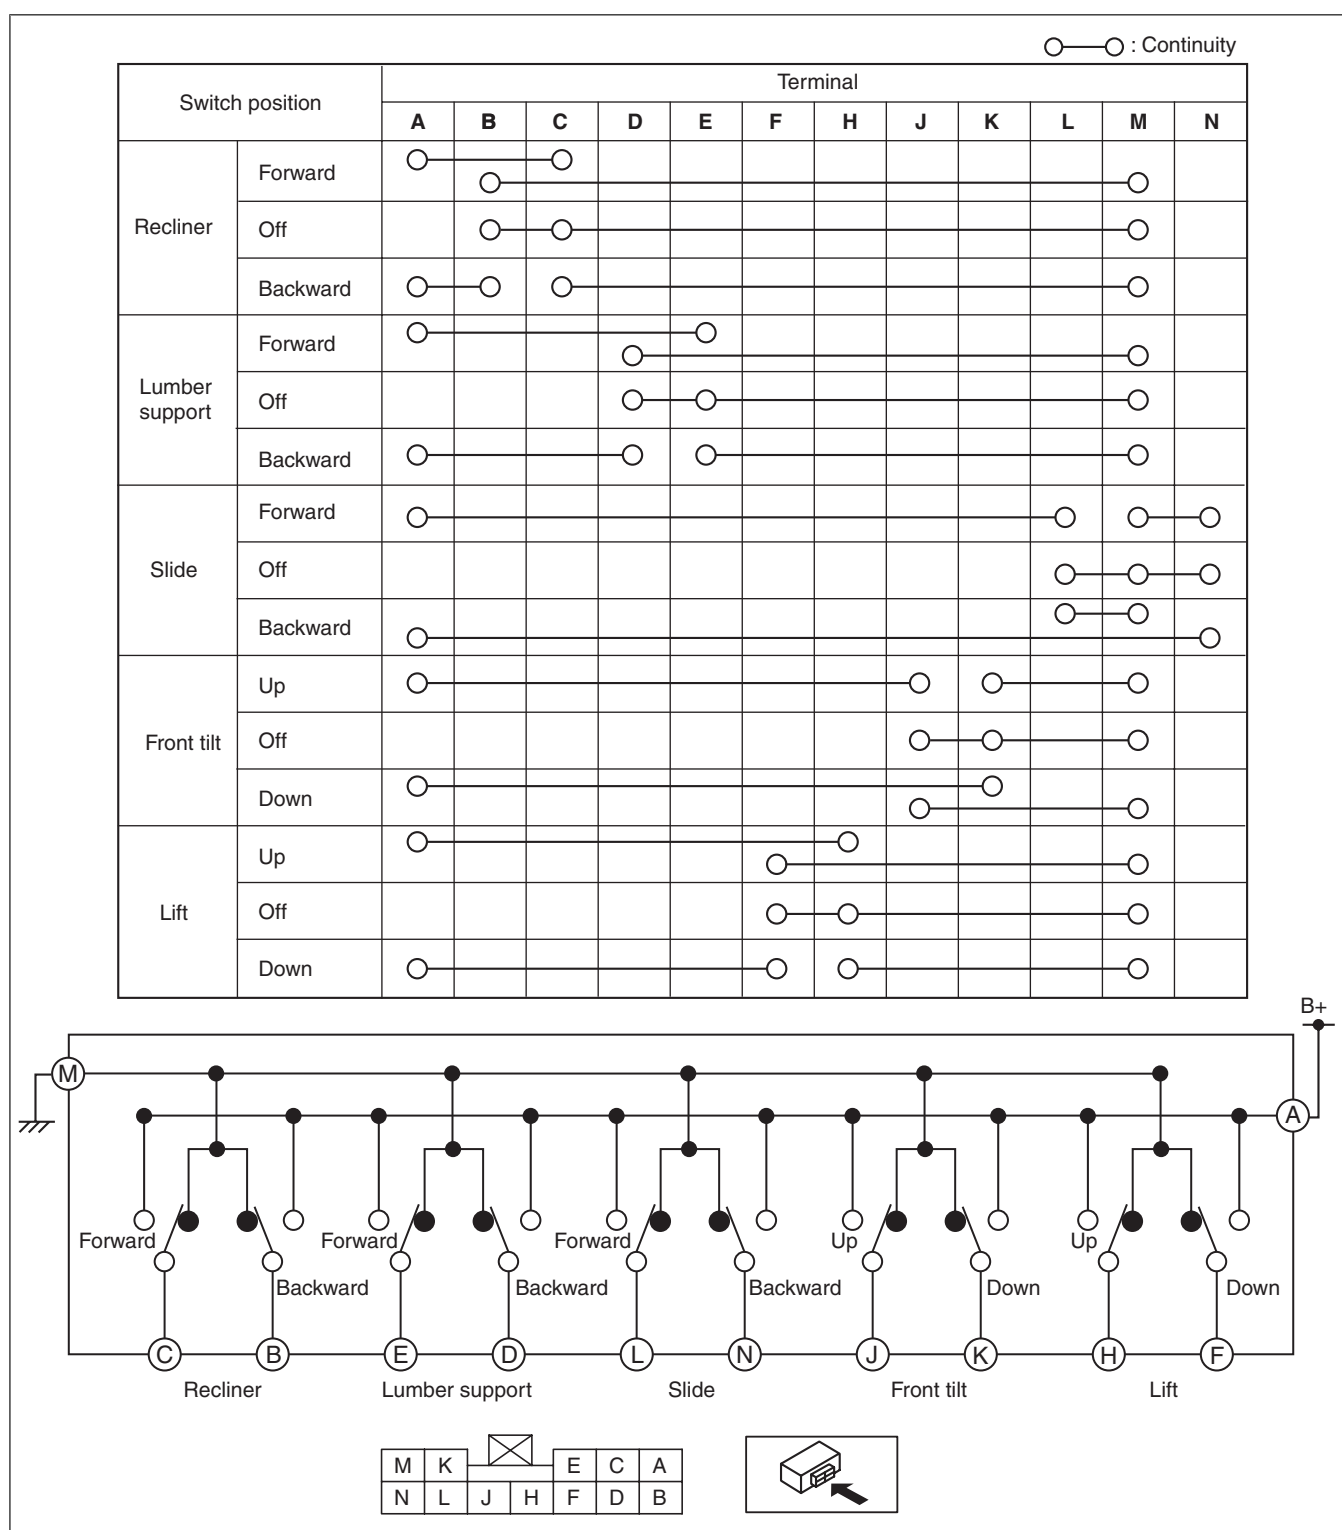


ac5uuw00002058

R.H.D.

1. Switch the ignition off (LOCK).
2. Disconnect the negative battery cable and wait for **1 min or more**. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
3. Remove the front seat side cover. (See FRONT SEAT SIDE COVER REMOVAL/INSTALLATION.)
4. Remove the power seat switch. (See POWER SEAT SWITCH REMOVAL/INSTALLATION.)
5. Connect the power seat switch connector.
6. Inspect for continuity between the power seat switch connector terminals using an ohmmeter.
 - If not as specified, replace the power seat switch. (See POWER SEAT SWITCH REMOVAL/INSTALLATION.)

○—○ : Continuity

Switch position		Terminal											
		A	B	C	D	E	F	H	J	K	L	M	N
Recliner	Forward	○	○	○								○	
	Off		○	○								○	
	Backward	○	○	○								○	
Lumber support	Forward	○			○	○						○	
	Off				○	○						○	
	Backward	○			○	○						○	
Slide	Forward	○										○	○
	Off											○	○
	Backward	○										○	○
Front tilt	Up	○							○	○		○	
	Off								○	○		○	
	Down	○							○	○		○	
Lift	Up	○					○	○				○	
	Off						○	○				○	
	Down	○					○	○				○	

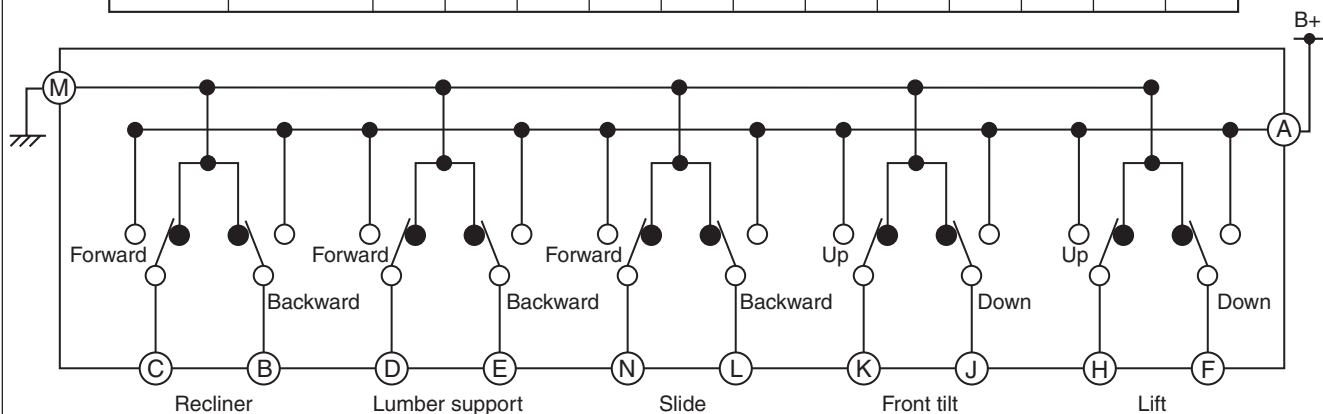

M	K			E	C	A
N	L	J	H	F	D	B

