


ANTENNA FEEDER NO.1 REMOVAL/INSTALLATION

id092000812200

L.H.D. (With Audio System)

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
 - (1) Side speaker grille (RH) (See SPEAKER GRILLE REMOVAL/INSTALLATION.)
 - (2) Tweeter (RH) (See TWEETER REMOVAL/INSTALLATION.)
 - (3) A-pillar trim (See A-PILLAR TRIM REMOVAL/INSTALLATION.)
 - (4) Passenger-side front scuff plate (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
 - (5) Passenger-side front side trim (See FRONT SIDE TRIM REMOVAL/INSTALLATION.)
 - (6) Glove compartment (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
 - (7) Decoration panel (See DECORATION PANEL REMOVAL/INSTALLATION.)
 - (8) Passenger-side lower panel (See LOWER PANEL REMOVAL/INSTALLATION.)
 - (9) Audio unit (See AUDIO UNIT REMOVAL/INSTALLATION.)
3. Remove clips A, B, C, D, E, and F.

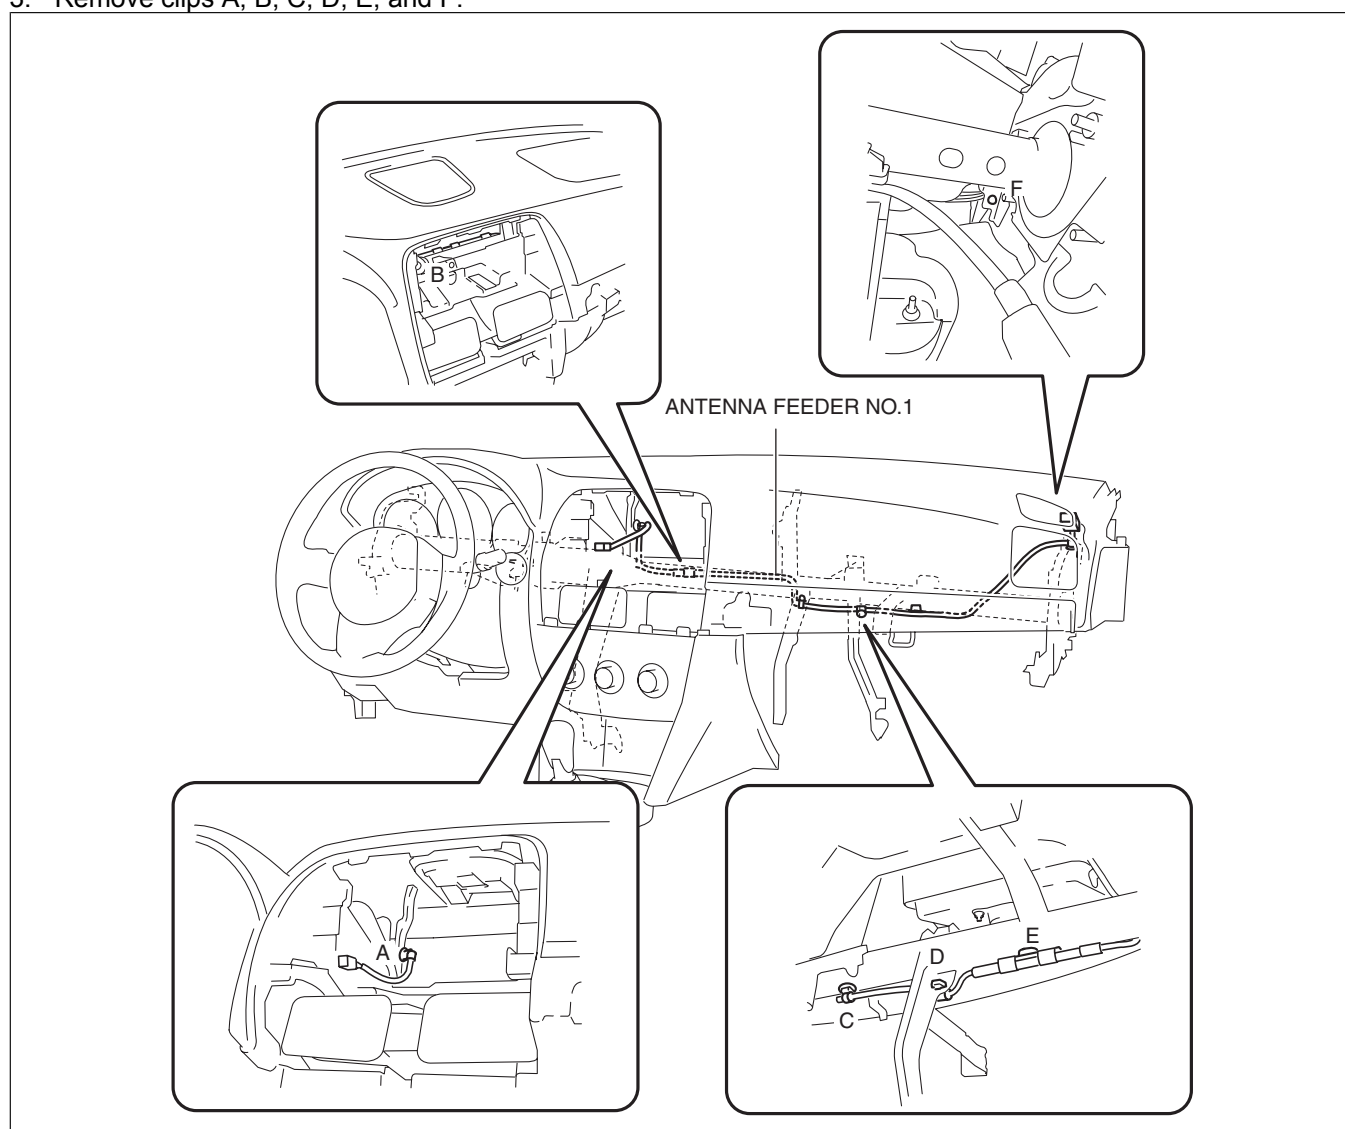


4. Remove antenna feeder No.1.
5. Install in the reverse order of removal.

L.H.D. (With Car-navigation System)

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)

ac5wzw00002793

-
2. Remove the following parts:
- (1) Center speaker grille (See SPEAKER GRILLE REMOVAL/INSTALLATION.)
 - (2) Front center speaker (with Bose®)/front center speaker dummy (without Bose®) (See FRONT CENTER SPEAKER REMOVAL/INSTALLATION.)
 - (3) GPS antenna (See GLOBAL POSITIONING SYSTEM (GPS) ANTENNA REMOVAL/INSTALLATION.)
 - (4) Side speaker grille (RH) (See SPEAKER GRILLE REMOVAL/INSTALLATION.)
 - (5) Tweeter (RH) (See TWEETER REMOVAL/INSTALLATION.)
 - (6) A-pillar trim (See A-PILLAR TRIM REMOVAL/INSTALLATION.)
 - (7) Front scuff plate (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
 - (8) Front side trim (See FRONT SIDE TRIM REMOVAL/INSTALLATION.)
 - (9) Car-navigation unit (See CAR-NAVIGATION UNIT REMOVAL/INSTALLATION.)
 - (10) Switch panel (See SWITCH PANEL REMOVAL/INSTALLATION.)
 - (11) Decoration panel (See DECORATION PANEL REMOVAL/INSTALLATION.)
 - (12) Shift lever knob (MTX) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [C66M-R, C66MX-R].) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [D66M-R, D66MX-R].)
 - (13) Front console box (See FRONT CONSOLE BOX REMOVAL/INSTALLATION.)
 - (14) Shift panel (See SHIFT PANEL REMOVAL/INSTALLATION.)
 - (15) Upper panel (See UPPER PANEL REMOVAL/INSTALLATION.)
 - (16) Rear console (See REAR CONSOLE REMOVAL/INSTALLATION.)
 - (17) Side wall (See SIDE WALL REMOVAL/INSTALLATION.)
 - (18) Front console (See FRONT CONSOLE REMOVAL/INSTALLATION.)
 - (19) Bonnet release lever (See BONNET LATCH AND RELEASE LEVER REMOVAL/INSTALLATION.)
 - (20) Driver-side lower panel (See LOWER PANEL REMOVAL/INSTALLATION.)
 - (21) Glove compartment (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
 - (22) Passenger-side lower panel (See LOWER PANEL REMOVAL/INSTALLATION.)
 - (23) Audio unit (See AUDIO UNIT REMOVAL/INSTALLATION.)
3. Remove clips A, B, C, D, E, F, G, H, I, J and K.

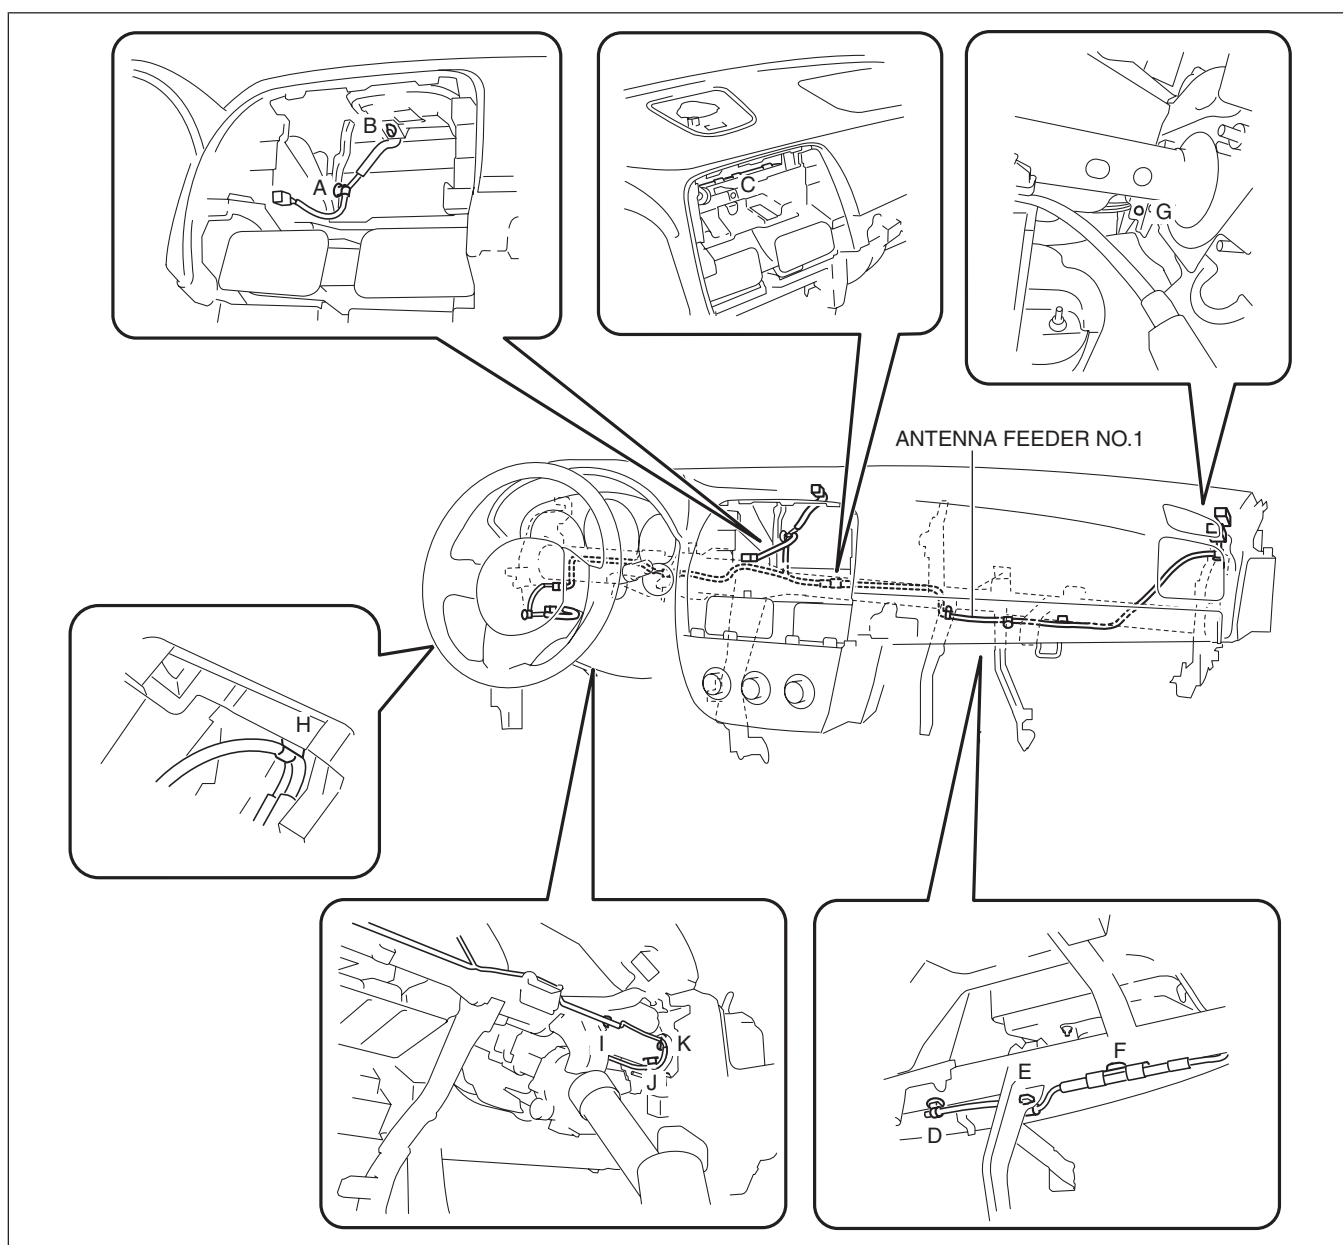


ac5wzw00002794

4. Remove antenna feeder No.1.
5. Install in the reverse order of removal.

R.H.D. (With Audio System)

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
 - (1) Side speaker grille (RH) (See SPEAKER GRILLE REMOVAL/INSTALLATION.)
 - (2) Tweeter (RH) (See TWEETER REMOVAL/INSTALLATION.)
 - (3) A-pillar trim (RH) (See A-PILLAR TRIM REMOVAL/INSTALLATION.)
 - (4) Decoration panel (See DECORATION PANEL REMOVAL/INSTALLATION.)
 - (5) Audio unit (See AUDIO UNIT REMOVAL/INSTALLATION.)
 - (6) Column upper cover (See COLUMN COVER REMOVAL/INSTALLATION.)
 - (7) Meter hood (See METER HOOD REMOVAL/INSTALLATION.)
 - (8) Instrument cluster (See INSTRUMENT CLUSTER REMOVAL/INSTALLATION.)
3. Remove clips A, B, C, D, E, F, and G.

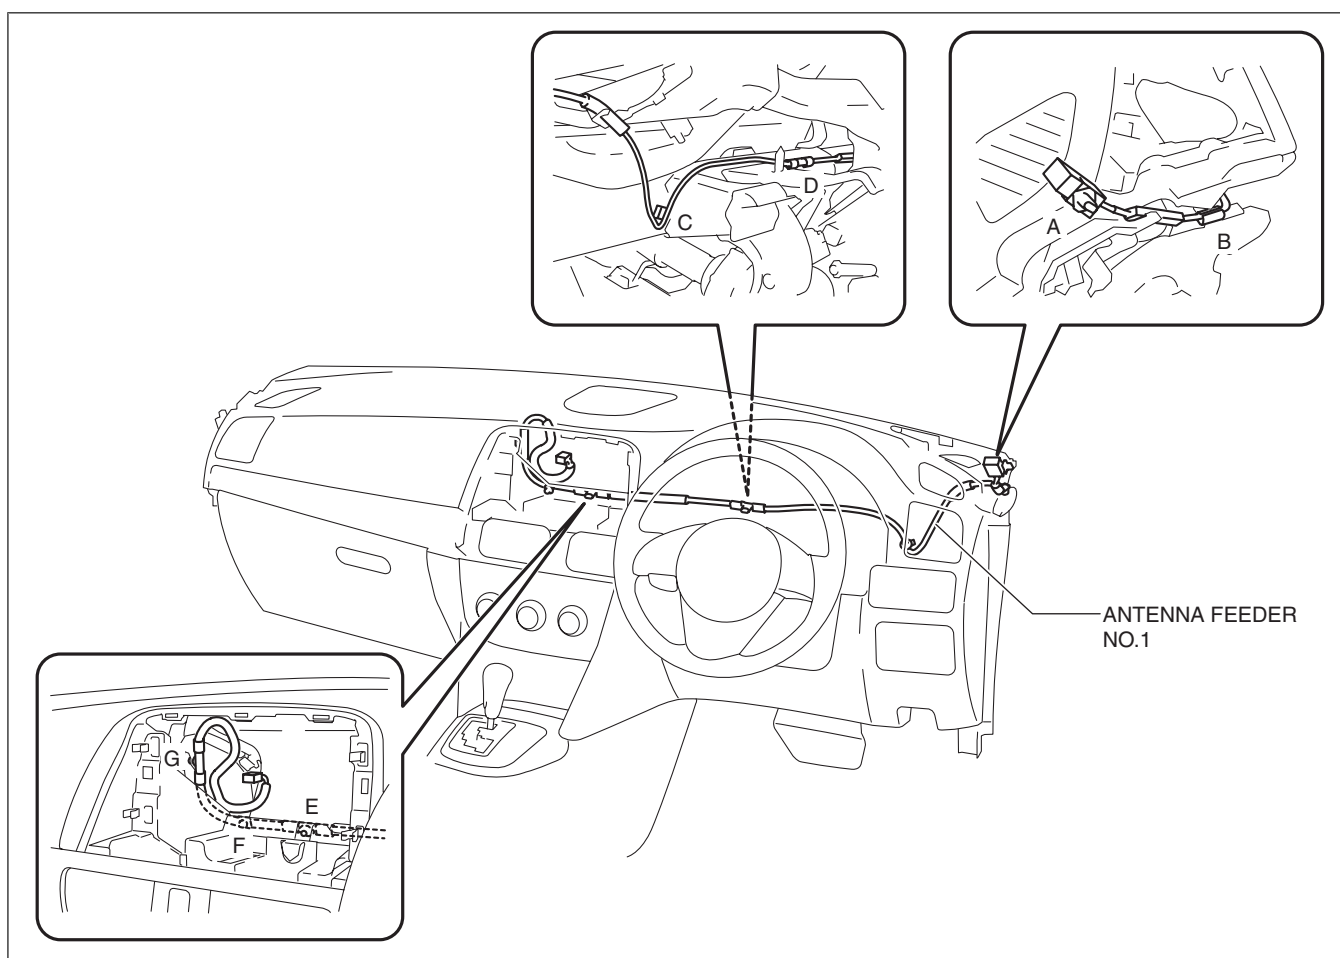


ac5wzw00002795

4. Remove antenna feeder No.1.
5. Install in the reverse order of removal.

R.H.D. (With Car-navigation System)

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
 - (1) Center speaker grille (See SPEAKER GRILLE REMOVAL/INSTALLATION.)
 - (2) Front center speaker (with Bose®)/front center speaker dummy (without Bose®) (See FRONT CENTER SPEAKER REMOVAL/INSTALLATION.)
 - (3) GPS antenna (See GLOBAL POSITIONING SYSTEM (GPS) ANTENNA REMOVAL/INSTALLATION.)
 - (4) Side speaker grille (RH) (See SPEAKER GRILLE REMOVAL/INSTALLATION.)
 - (5) Tweeter (RH) (See TWEETER REMOVAL/INSTALLATION)
 - (6) A-pillar trim (RH) (See A-PILLAR TRIM REMOVAL/INSTALLATION)
 - (7) Decoration panel (See DECORATION PANEL REMOVAL/INSTALLATION.)
 - (8) Audio unit (See AUDIO UNIT REMOVAL/INSTALLATION.)
 - (9) Car-navigation unit (See CAR-NAVIGATION UNIT REMOVAL/INSTALLATION.)
 - (10) Column upper cover (See COLUMN COVER REMOVAL/INSTALLATION.)
 - (11) Meter hood (See METER HOOD REMOVAL/INSTALLATION.)
 - (12) Instrument cluster (See INSTRUMENT CLUSTER REMOVAL/INSTALLATION.)
3. Remove clips A, B, C, D, E, F, G, H, I, and J.

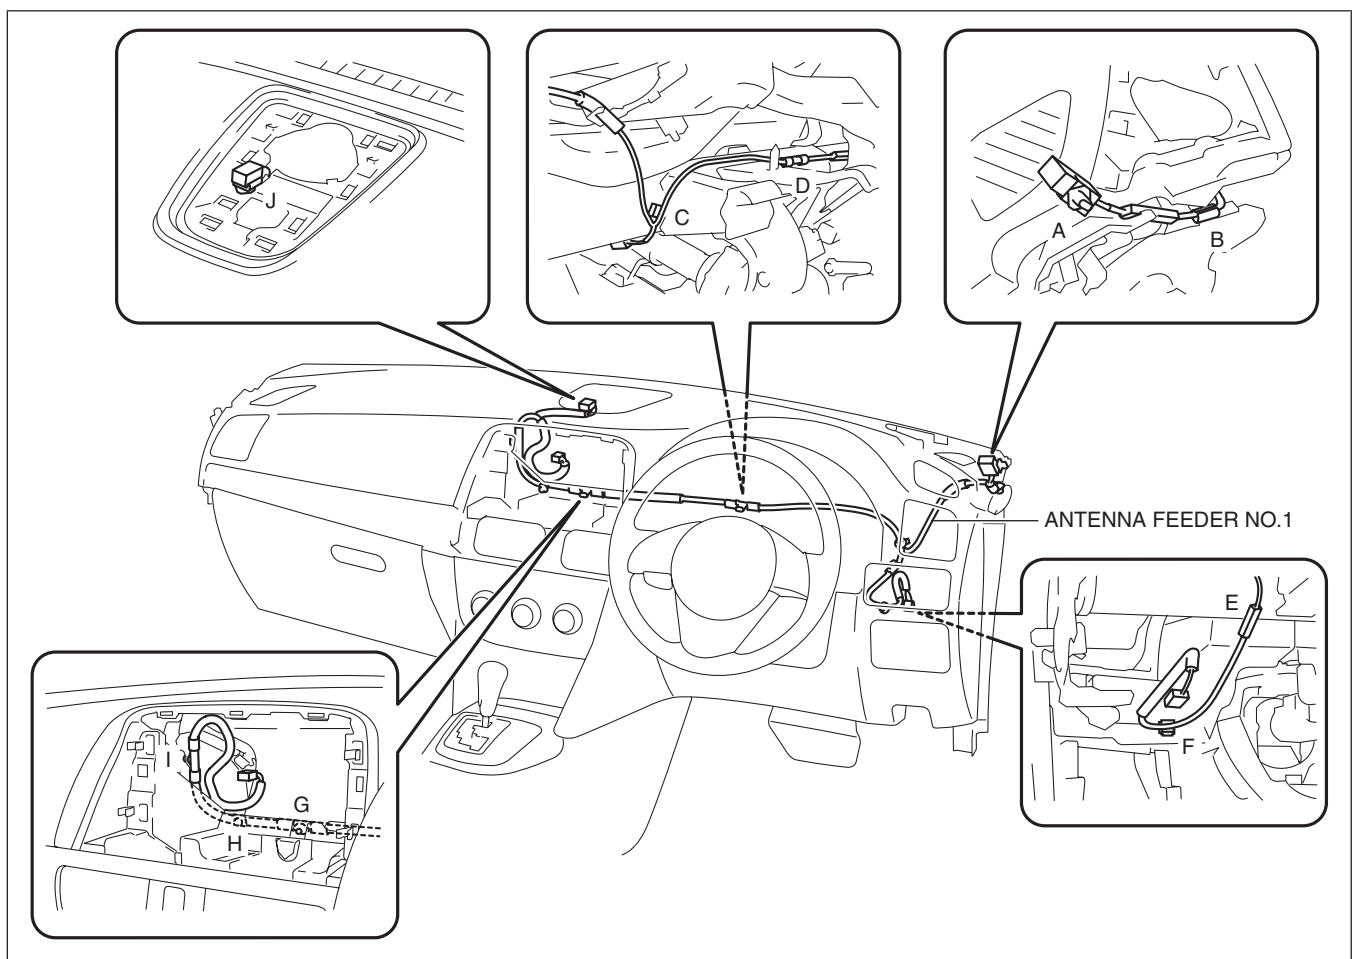

ac5wzw00002796

4. Remove antenna feeder No.1.
5. Install in the reverse order of removal.