

PRIMARY GEAR [FW6A-EL, FW6AX-EL]


id0517h2351900

Purpose/Function

- The primary gear transmits the drive force converted by the 3-piece planetary gear to the secondary gear.

Construction

- The primary gear is engaged with the front planetary carrier and rotates as a single unit.

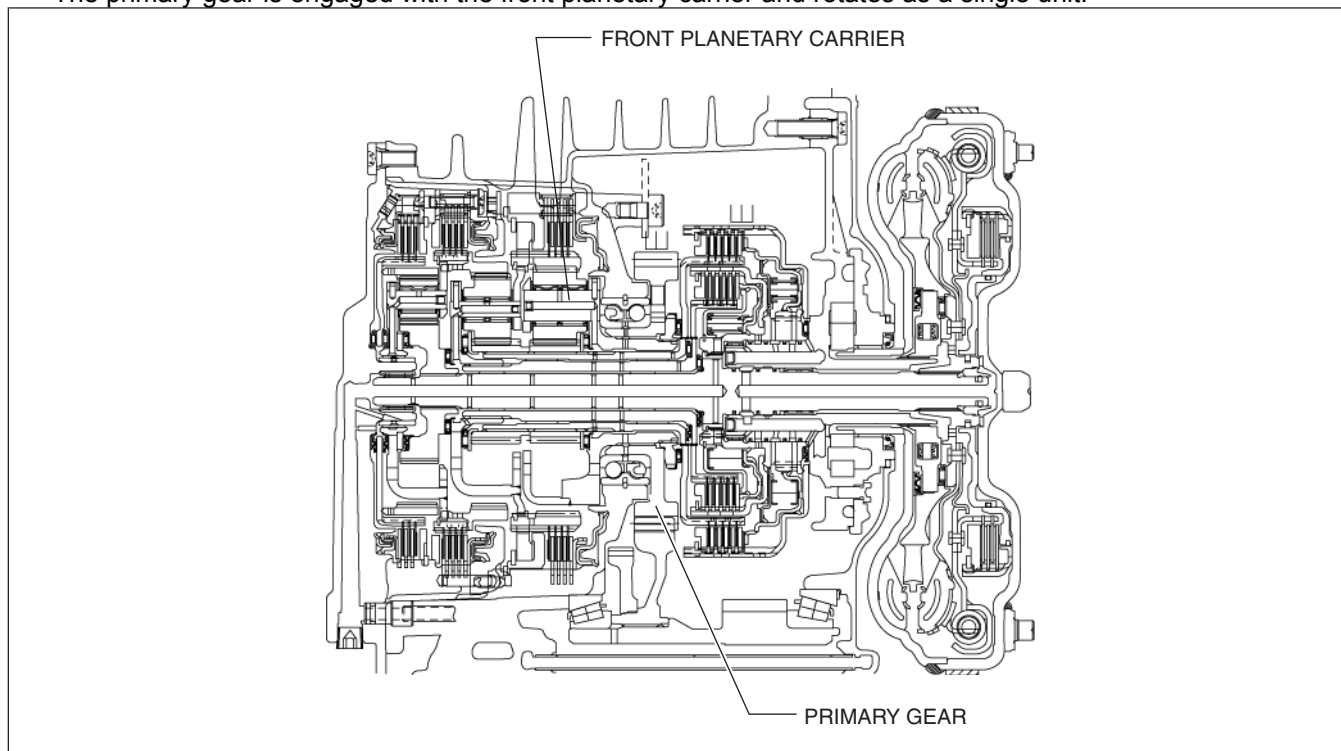

am3uun00002451