

## SHIFT SOLENOID NO.2 [GW6A-EL, GW6AX-EL]


id0517i2361200

### Purpose/Function

- Shift solenoid No.2 adjusts the hydraulic pressure in the 2-6 brake circuit based on the current demand from the TCM according to the vehicle conditions.

### Construction

- Shift solenoid No.2 is installed to the solenoid control valve body.
- Shift solenoid No.2 is a normal closed-type linear solenoid.

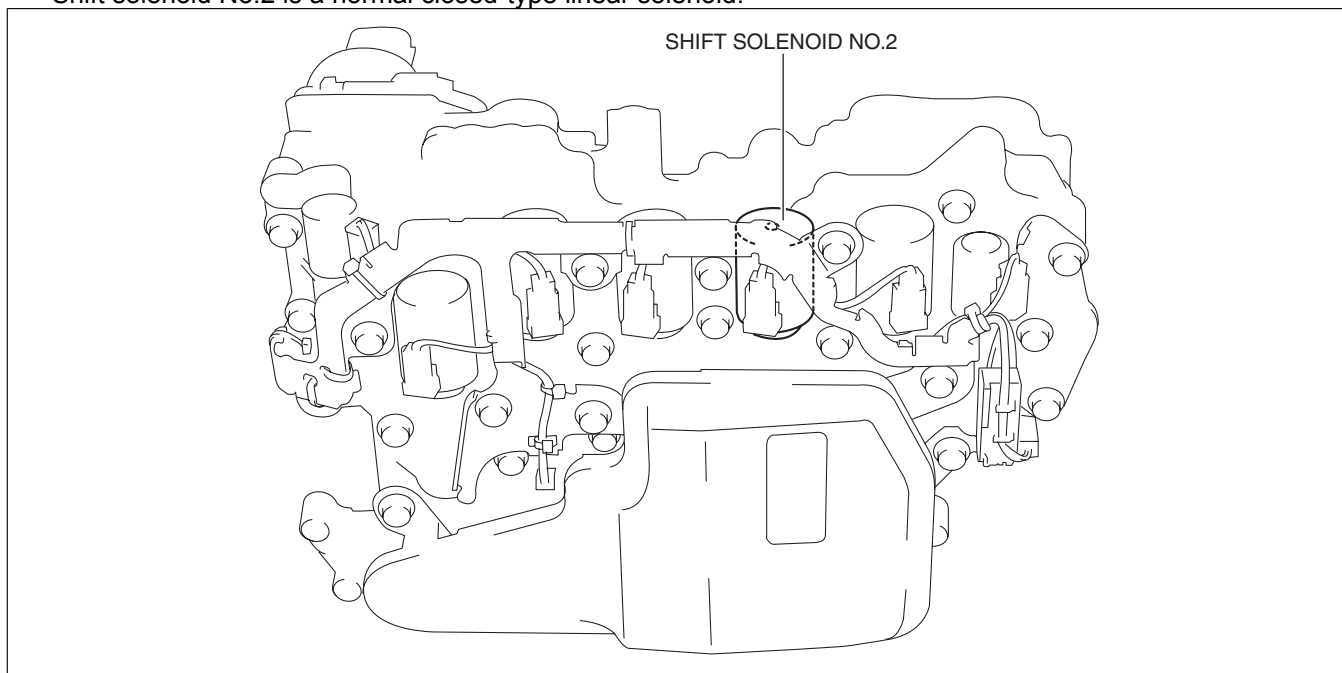

am3uun00002426

### Operation

- Adjusts the 2-6 brake pressure by increasing/decreasing the energization current to shift solenoid No.2 according to the signal from the TCM.