


GENERATOR DISASSEMBLY/ASSEMBLY [SKYACTIV-G 2.0, SKYACTIV-G 2.5]

id0117i0800400

Caution

- Melt the solder quickly, otherwise the diodes (rectifier) and regulator will be damaged by excessive heat.

1. Disassemble in the order indicated in the table.
2. Assemble in the reverse order of disassembly.

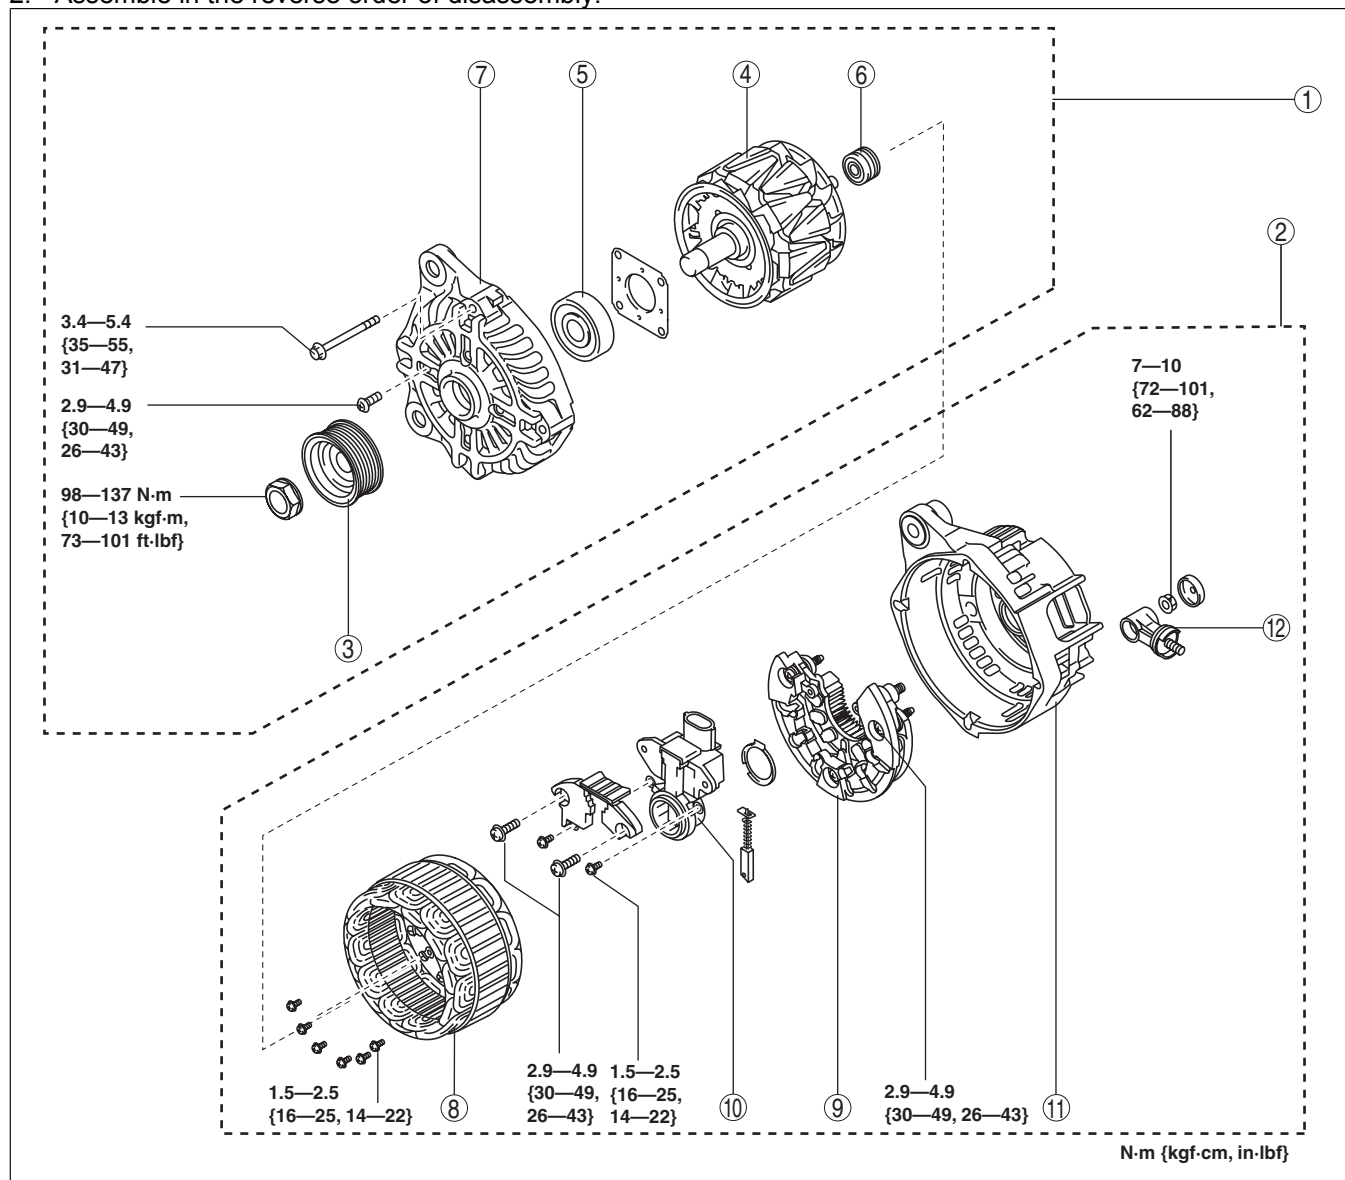

ac5wzw00002651

1	Rotor component
2	Stator coil component
3	Pulley
4	Rotor
5	Front bearing
6	Rear bearing
7	Front cover

8	Stator coil
9	Rectifier
10	Regulator component
11	Rear cover
12	Terminal B component