

## VACUUM CHAMBER [SKYACTIV-D 2.2]


id0113z7265300

### Purpose, Function

- Vacuum generated by the vacuum pump operation is stored to perform smooth boost control.

### Construction

- The vacuum chamber is installed to the cylinder block.

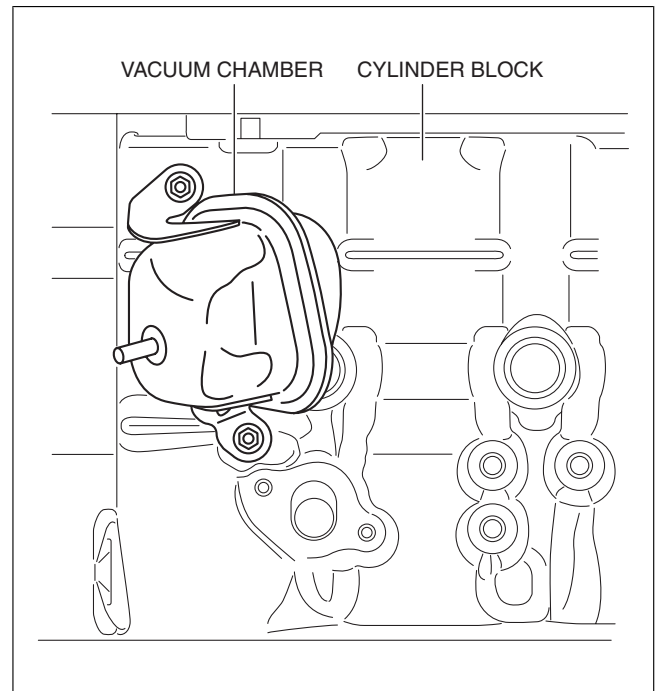

ac5wzn00002217