


FRONT PARKING SENSOR BUZZER INSPECTION

id092200030600

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
 - (1) Upper column cover (See COLUMN COVER REMOVAL/INSTALLATION.)
 - (2) Meter hood (See METER HOOD REMOVAL/INSTALLATION.)
 - (3) Instrument cluster (See INSTRUMENT CLUSTER REMOVAL/INSTALLATION.)
 - (4) Front parking sensor buzzer (See FRONT PARKING SENSOR BUZZER REMOVAL/INSTALLATION.)
3. Verify the continuity between front parking sensor buzzer terminals A and B.

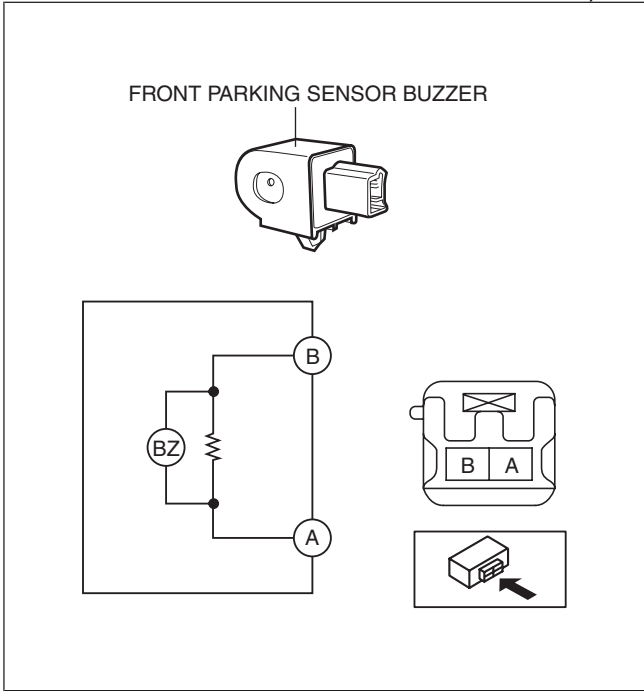

ac5wzw00003790

- If not as indicated in the table, replace the front parking sensor buzzer.

○—○ : Continuity

Test condition	Terminal	
	A	B
Under any condition	○—○	○—○

ac5wzw00005598