


TRUNK SIDE TRIM REMOVAL/INSTALLATION


id091700803100

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
 - (1) Trunk board (See TRUNK BOARD REMOVAL/INSTALLATION.)
 - (2) Trunk end trim (See TRUNK END TRIM REMOVAL/INSTALLATION.)
 - (3) Rear scuff plate (See REAR SCUFF PLATE REMOVAL/INSTALLATION.)
3. Pull up the cover A in the direction of arrow (1) shown in the figure.
4. Remove bolt B, then remove the cargo net hooks.

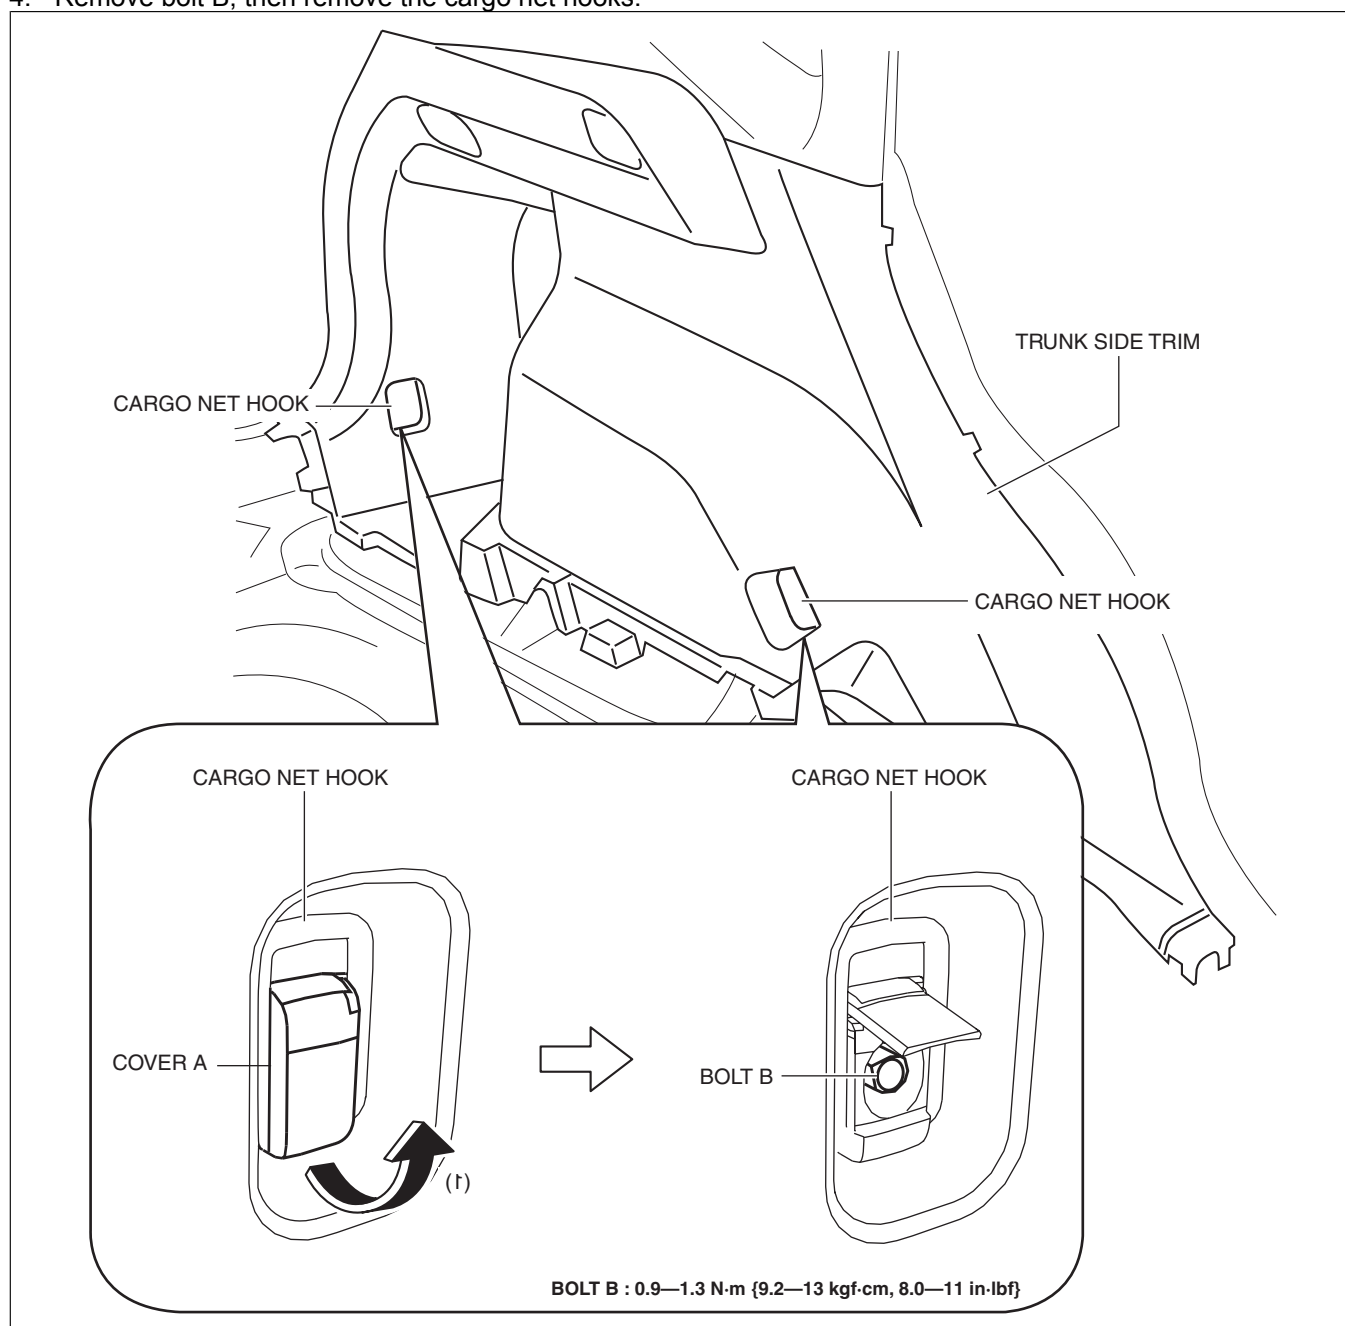


5. Move hooks C in the direction of arrow (2) shown in the figure using a tape-lapped flathead screwdriver.
6. Remove the cover D in the direction of arrow (3) shown in the figure.
7. Remove the screw E.

ac5wzw00004583

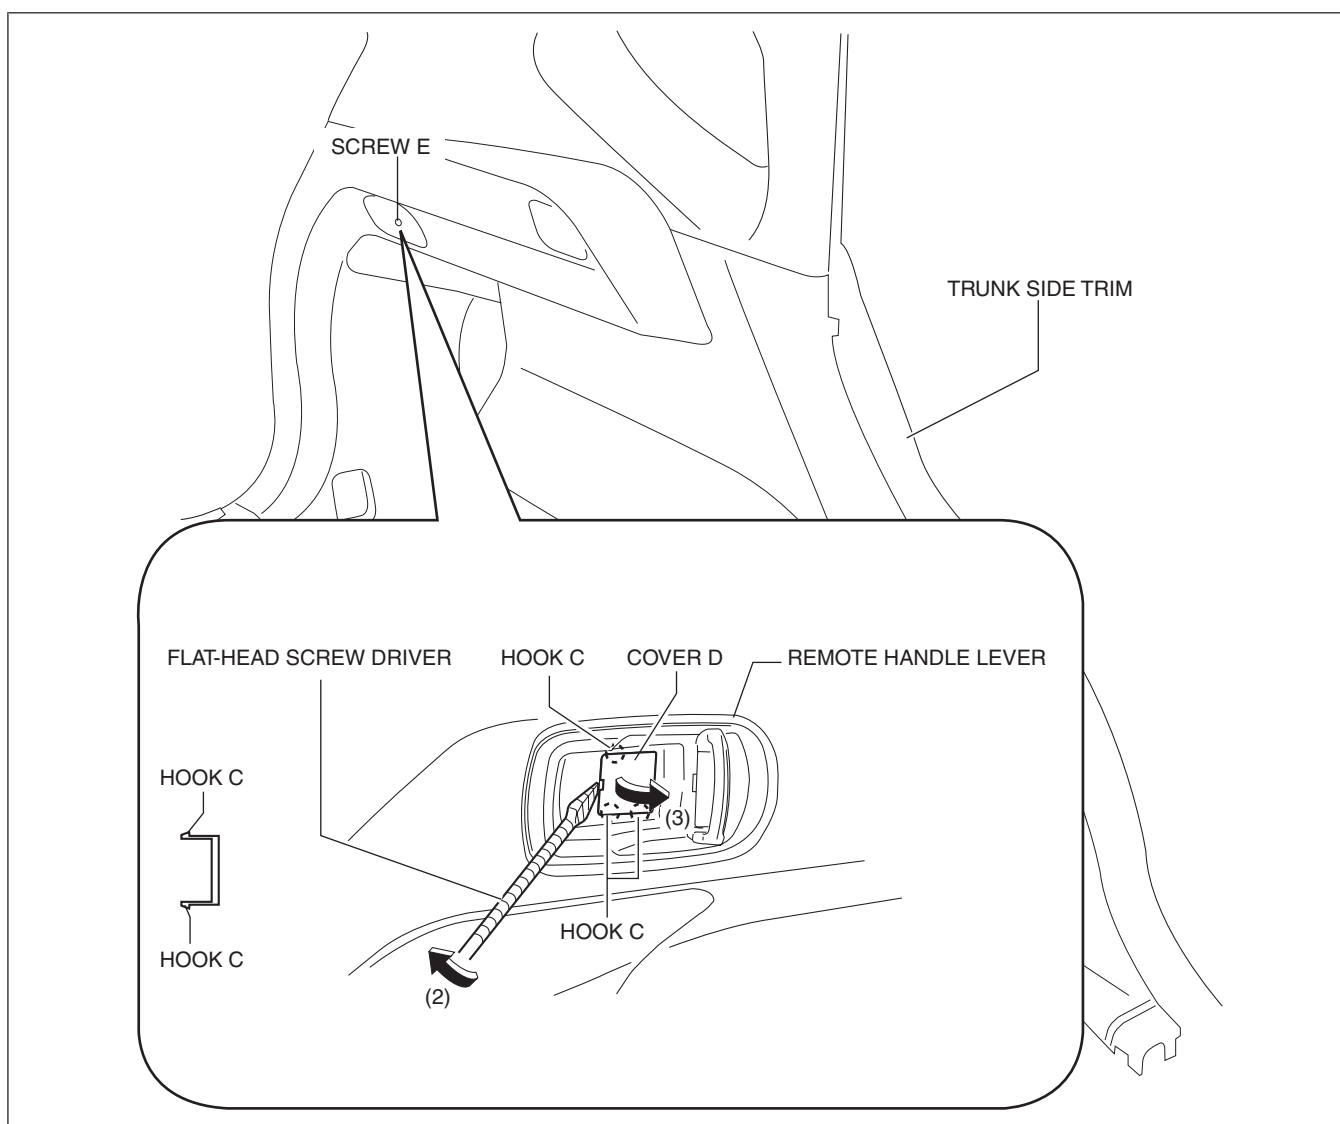


ac5wzw00004584

8. Remove the fastener F.
9. Remove the cap, then remove the screw G. (4:2:4 split type)

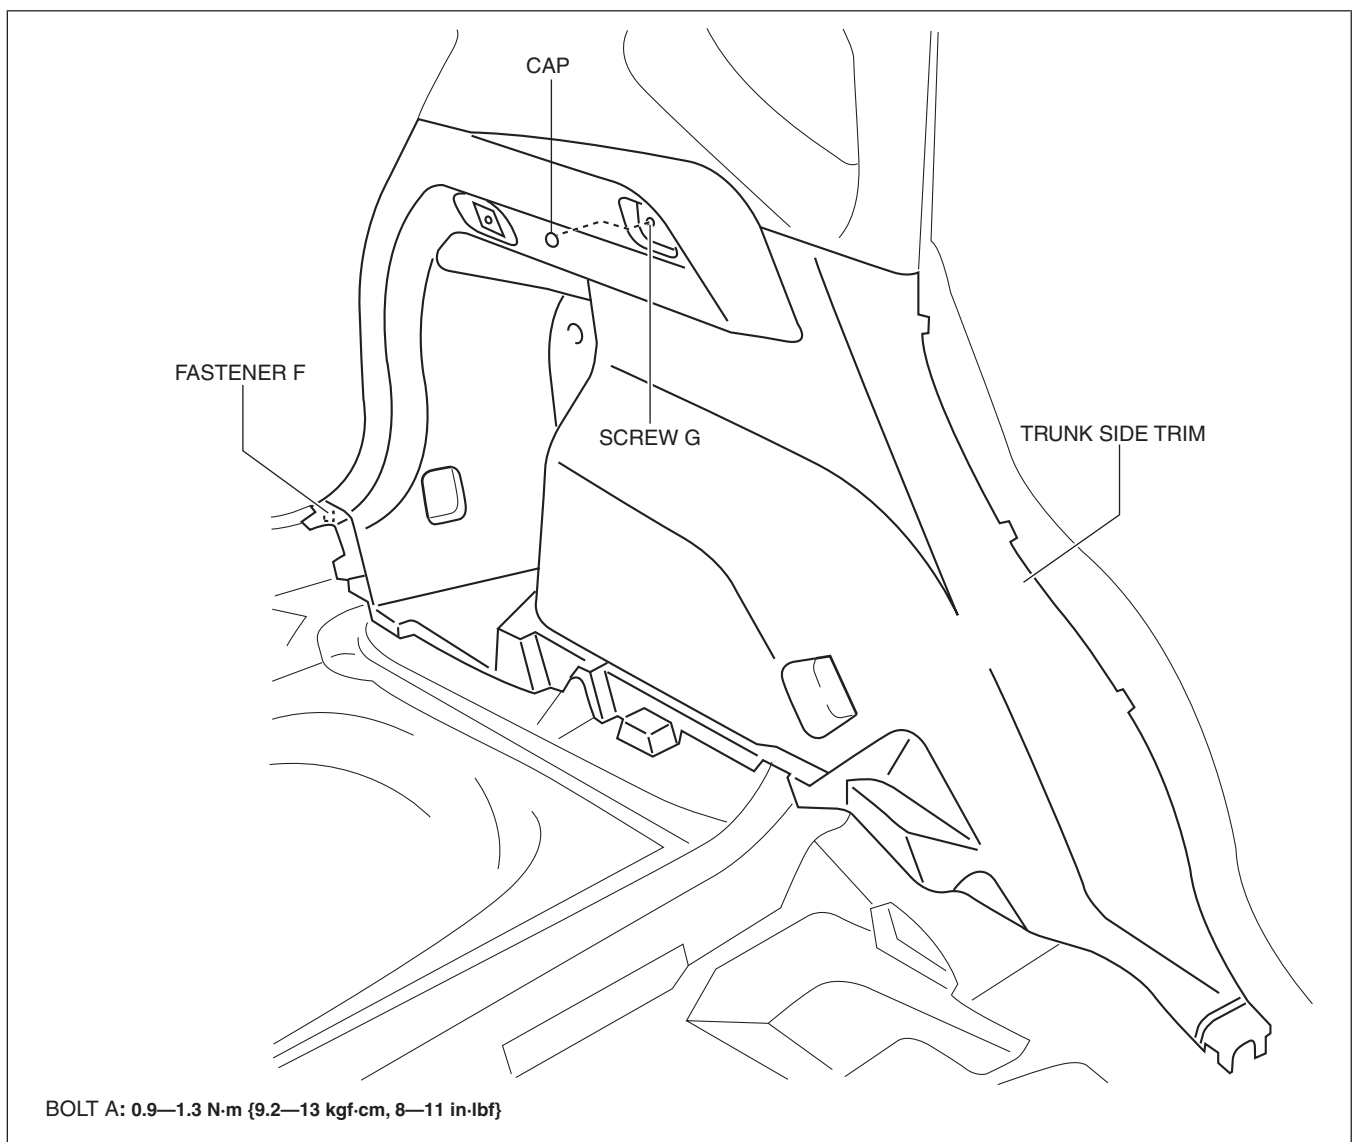


10. Hold D-pillar trim with your hands and pull the trunk side trim in the direction of the arrow (4), (5), (6), (7) and remove clips H, hooks I and pin J.

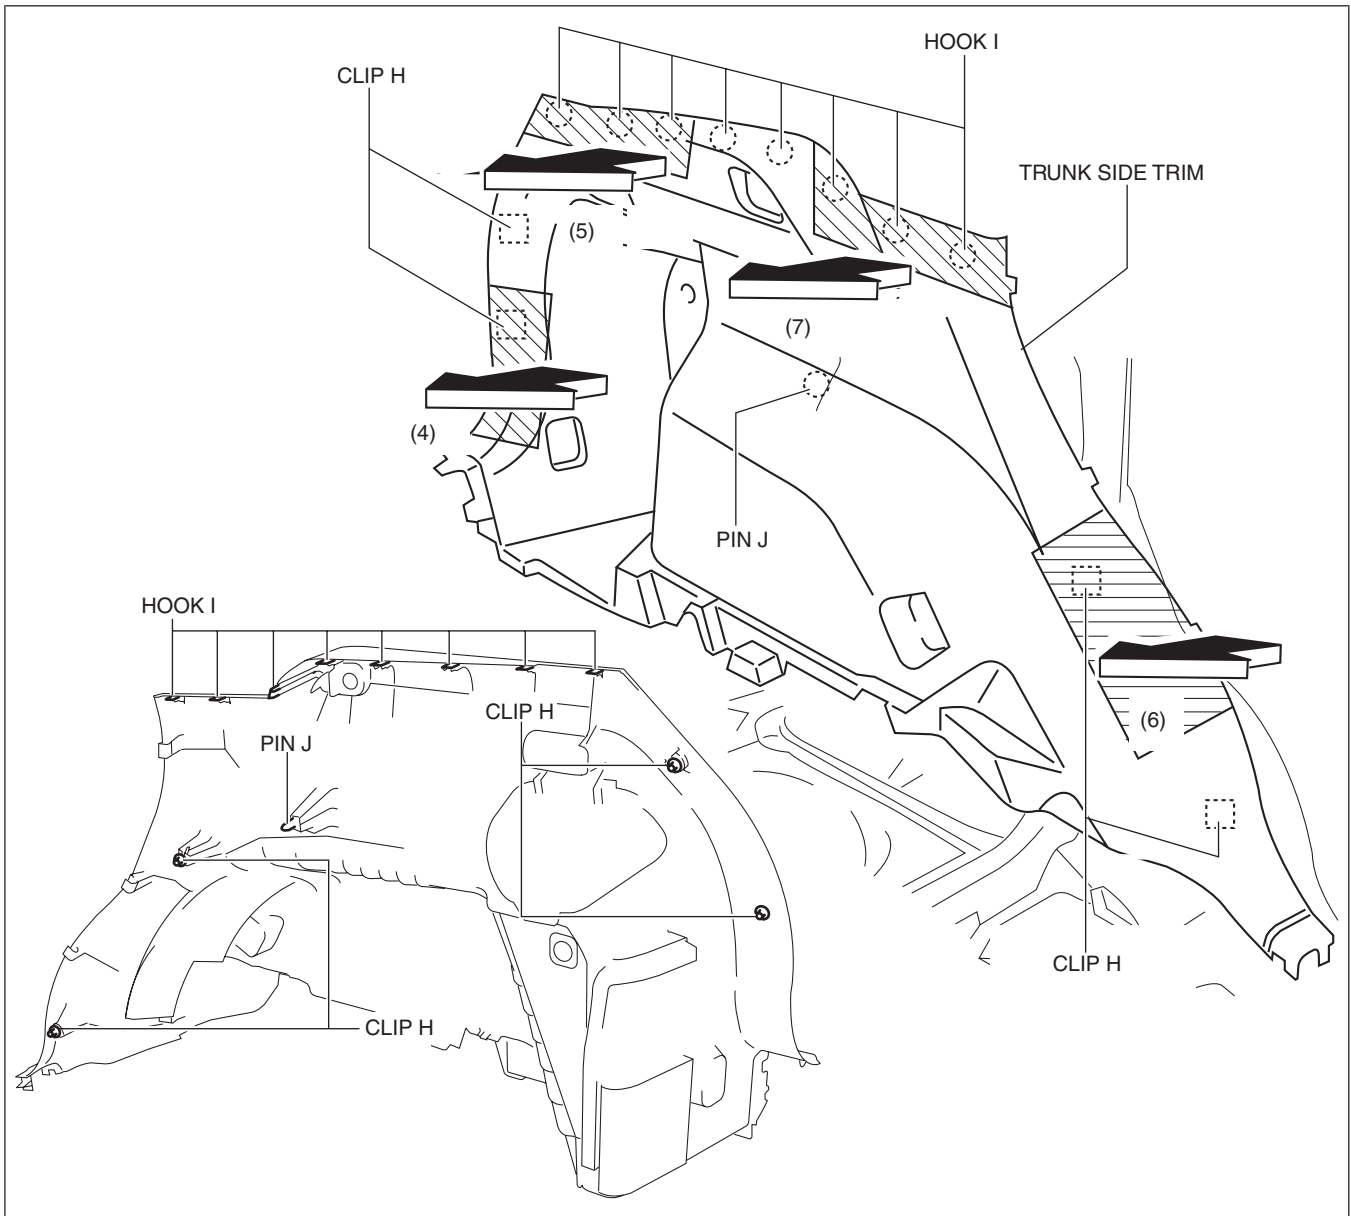

ac5wzw00004586

11. Set the remote handle lever out of the way. (4:2:4 split type)
12. Disconnect the connector. (cargo room light connector, rear accessory socket connector)
13. Install in the reverse order of removal.

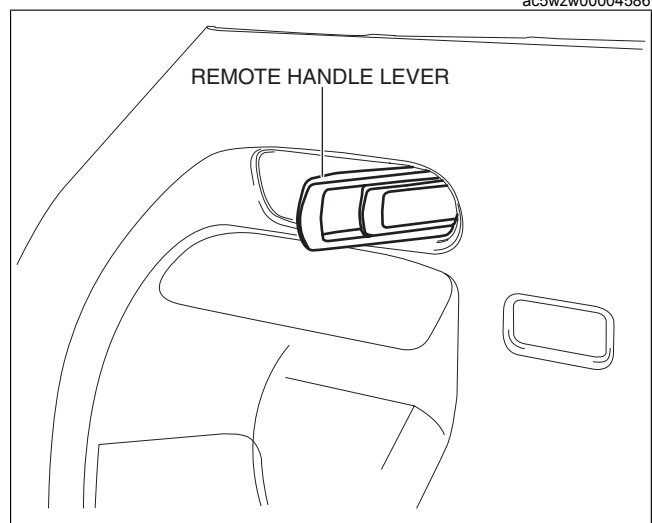

ac5wzw00002807