

REQUEST SWITCH

id091400109600

Purpose


- Transmits the request switch operation of the user to the LF control unit.

Function

- The request switch ON signal is sent to the LF control unit by operating the request switch.

Construction, Operation

- Installed on the outer handle of the driver-side/passenger side front door and liftgate garnish.
- While the request switch is pressed, the switch turns on (contact point: closed).

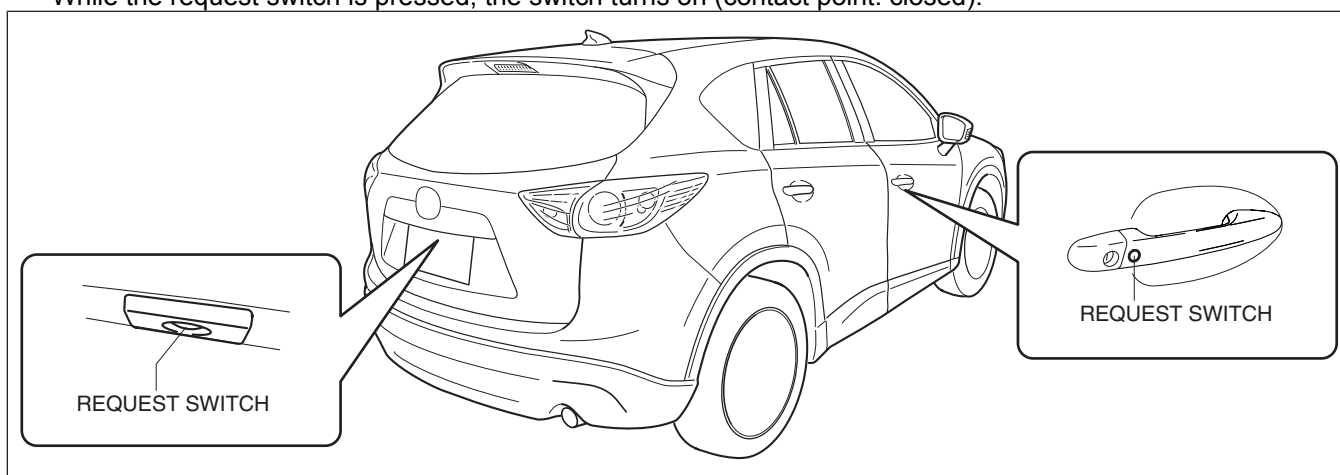

ac5wzn00000417

Fail-safe

- Function not equipped.