

M POSITION SWITCH [GW6A-EL, GW6AX-EL]


id0517i2360300

Purpose/Function

- The M position switch detects that the selector lever is in the M position.
- The M position switch signal is sent to the TCM via CAN, and is used for manual shift control and engine-transaxle integration control.

Construction


- The M position switch is installed to the selector lever.
- The M position switch is an on/off type switch.

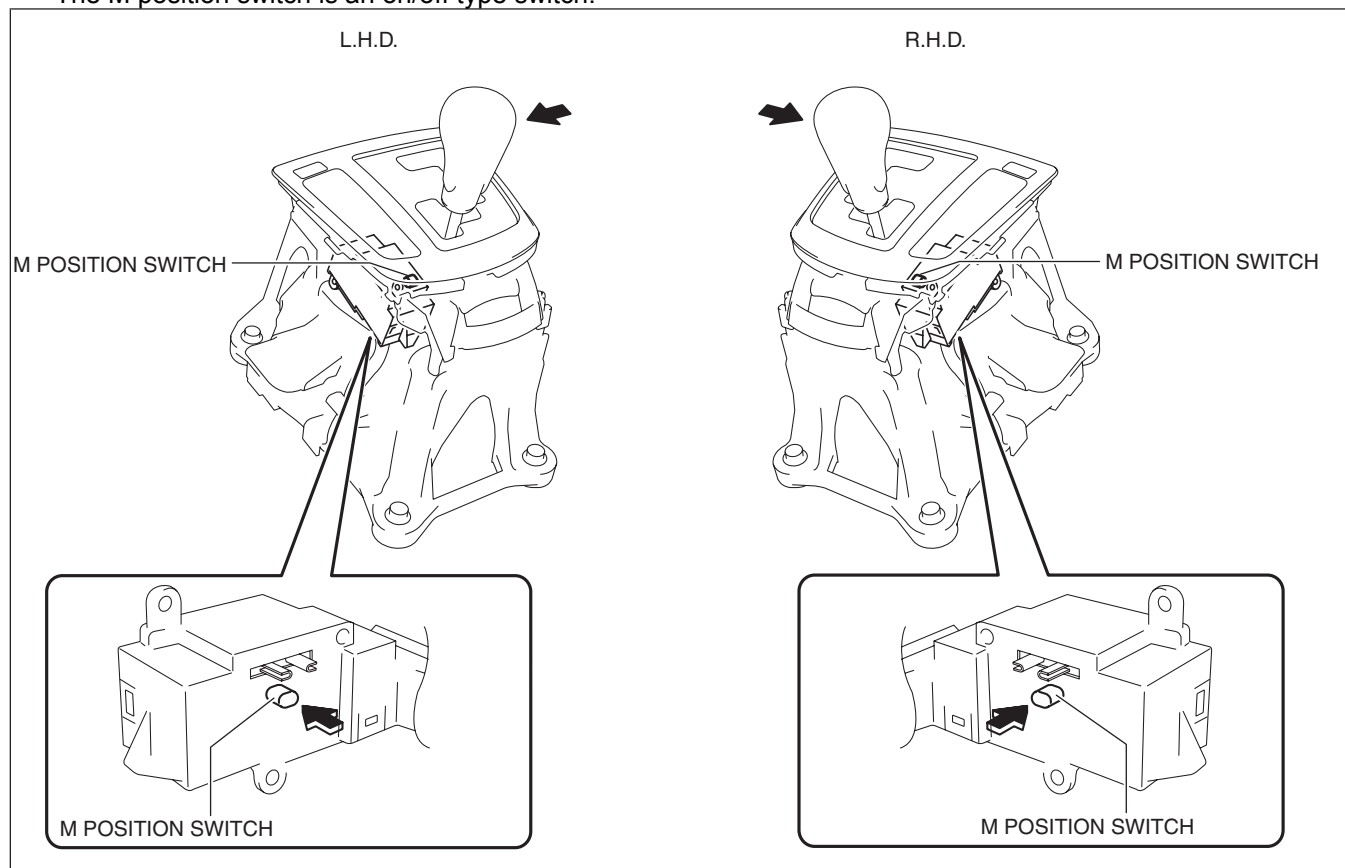

ac5wzn00000917

Operation

- When the selector lever is in the M position, the M position switch contact point closes.
- By opening and closing the M position switch contact point, the TCM detects that the selector lever is in the M position.

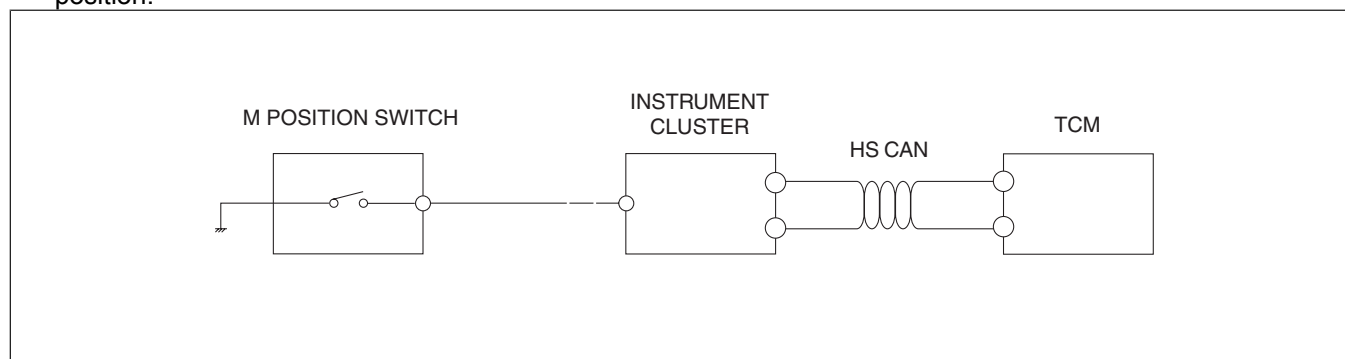

ac5uun00000562