


SPEAKER GRILLE REMOVAL/INSTALLATION

id091700960700


Center Speaker Grille

1. Insert a tape-wrapped flathead screwdriver into shown in the figure and remove hooks A in the direction of arrow (1).

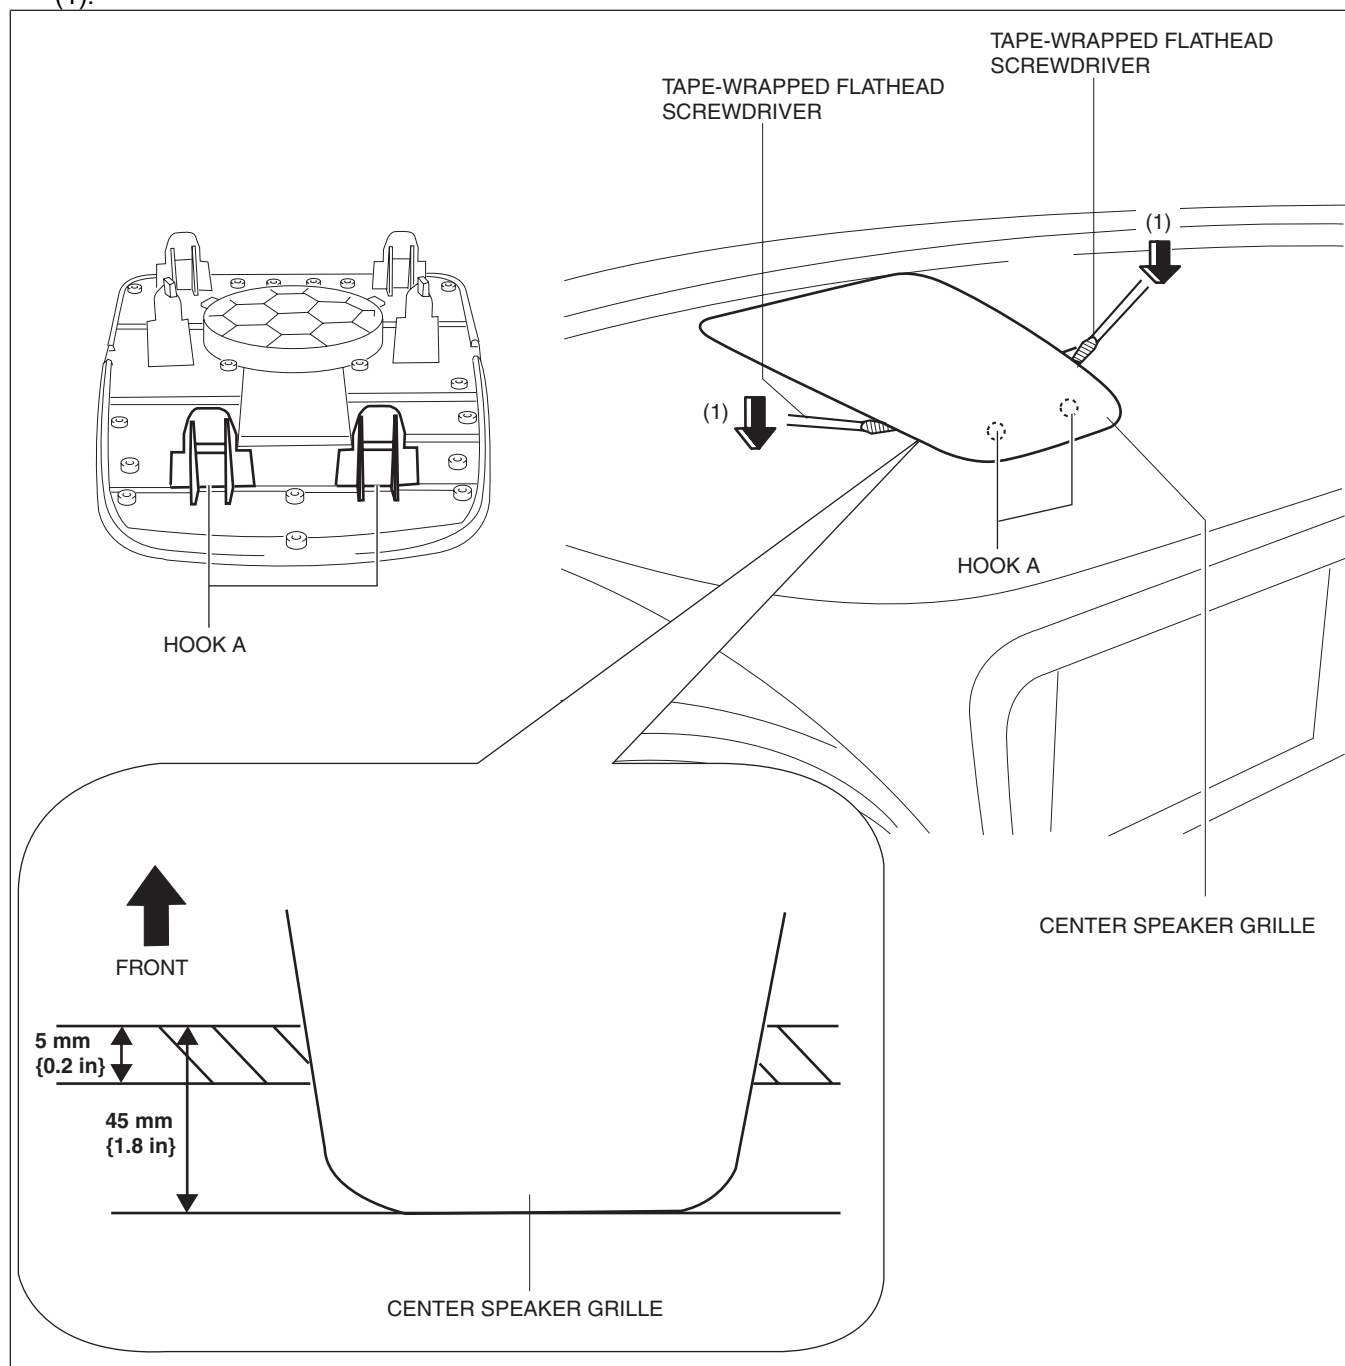

2. Take the shaded area shown in the figure, and remove the center speaker grille in the direction of arrow (2) while detaching hooks B.

ac5wzw00004619

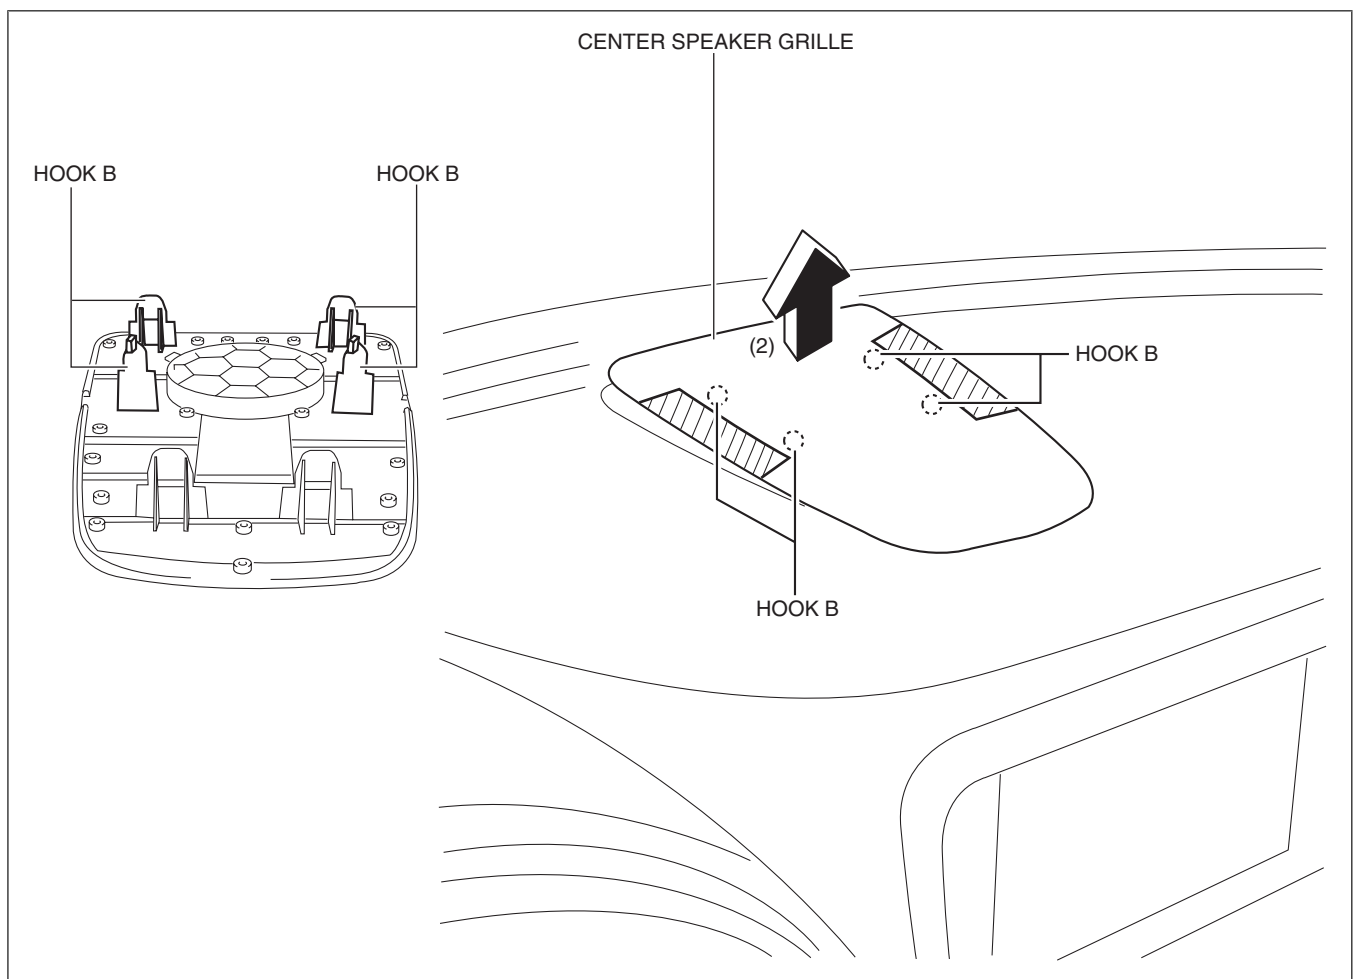


ac5wzw00004620

3. Install in the reverse order of removal.


Side Speaker Grille

1. Insert a tape-wrapped flathead screwdriver into the service hole and remove hooks A in the direction of arrow (1).

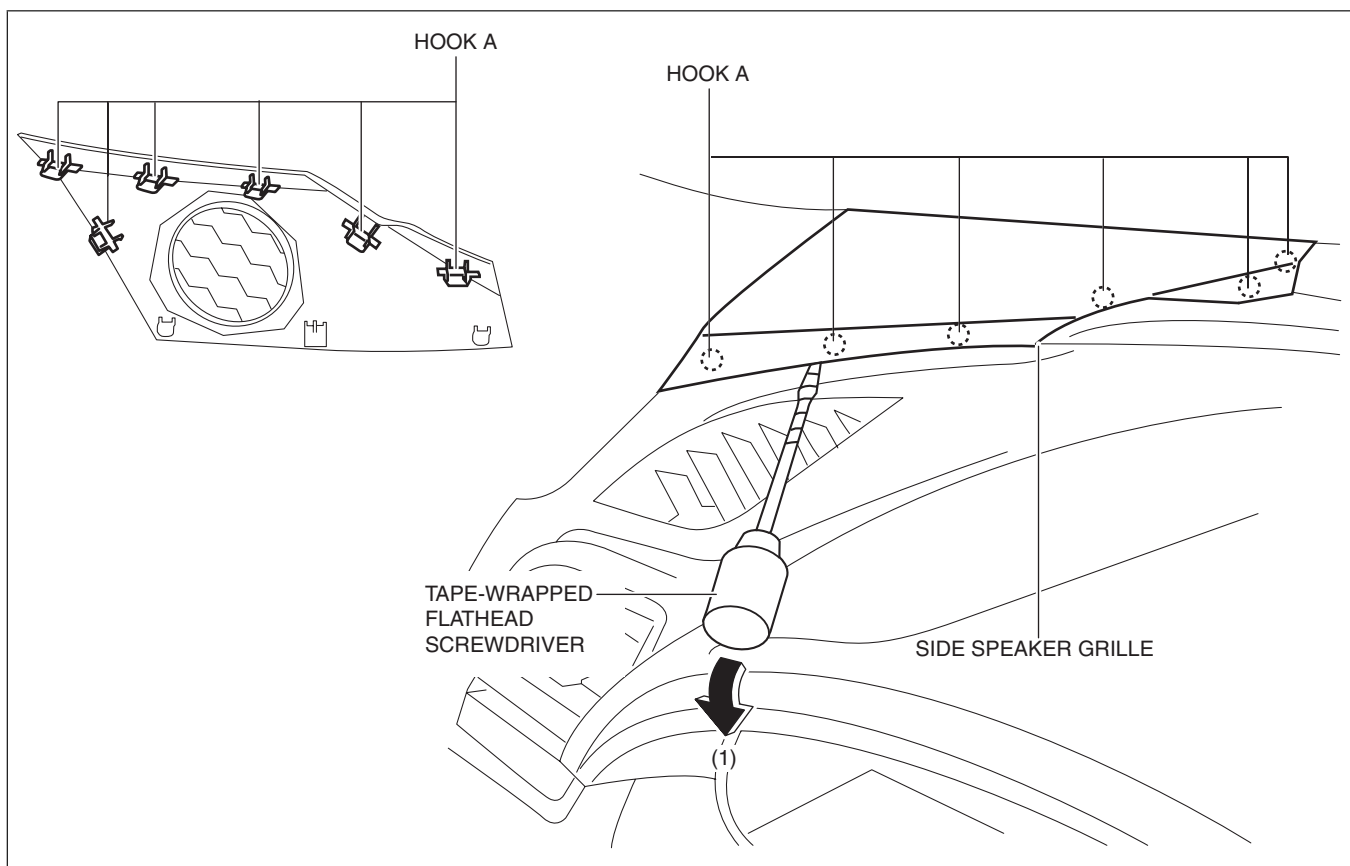

ac5wzw00005156

2. Pull the side speaker grille in the direction of the arrow (2), and remove the side speaker grille while detaching hooks B.

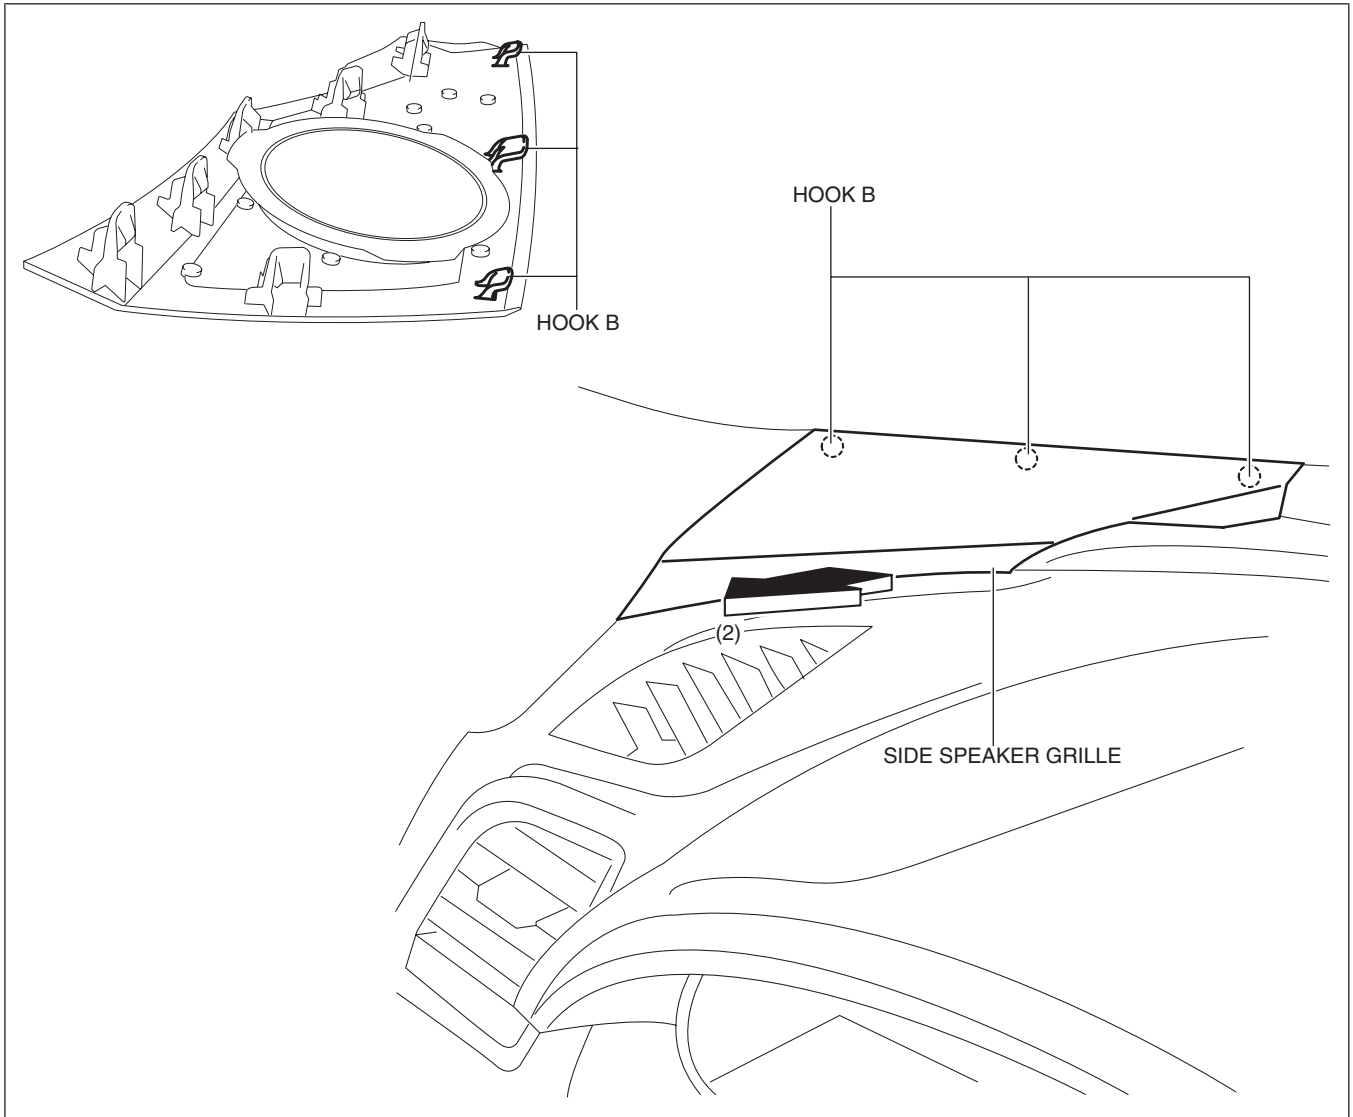

ac5wzw00003211

3. Install in the reverse order of removal.