



REAR BUCKLE REMOVAL/INSTALLATION

id081100800700


1. Switch the ignition to off.
2. Disconnect the negative battery cable and wait for **1 min or more**. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
3. Press the release switch, then disconnect the rear center seat belt and rear buckle.
4. Fold down the rear seat back.
5. Remove the trunk board. (See TRUNK BOARD REMOVAL/INSTALLATION.)

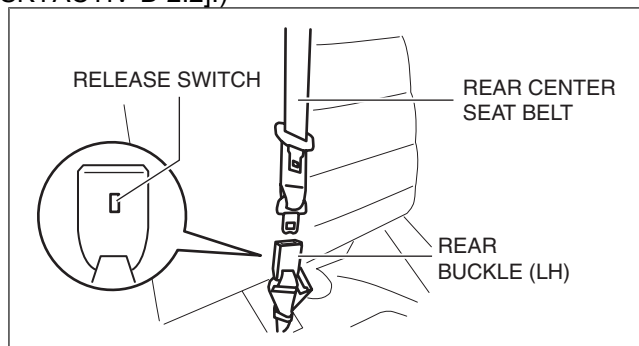

6. Disconnect the connector. (with rear seat belt reminder)

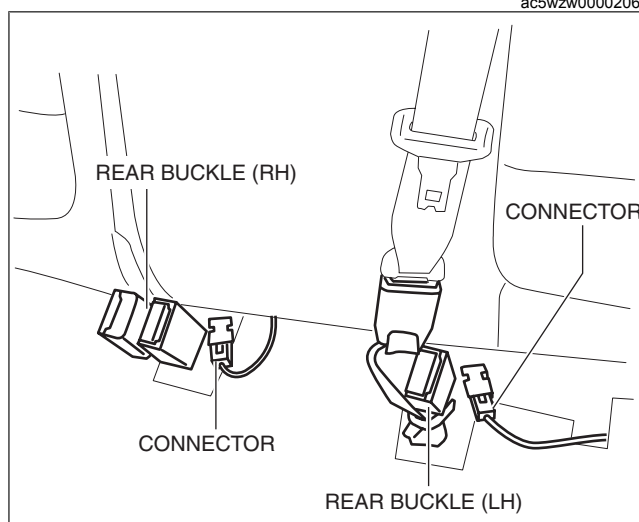


7. Remove the bolt.
8. Remove the rear buckle (RH) and rear buckle (LH).
9. Install in the reverse order of removal. (See Rear Buckle Installation Note.)

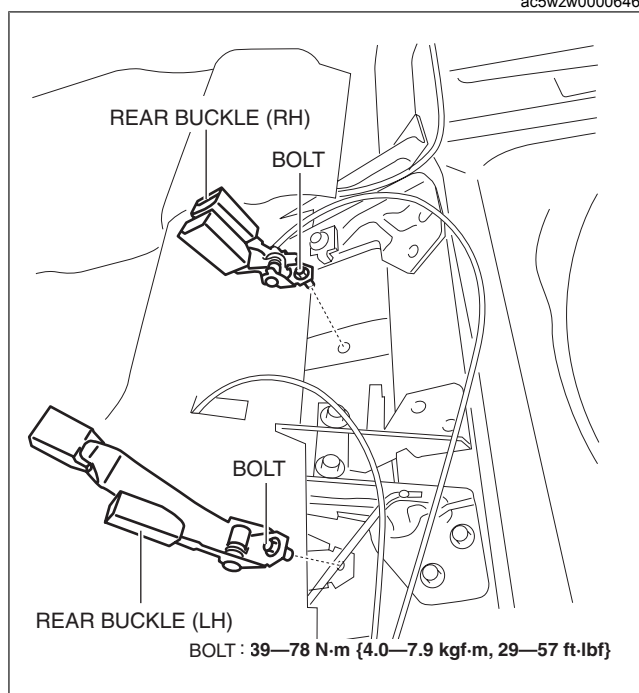

ac5wzw00002066

Rear Buckle Installation Note

1. After installing the rear center seat belt, place the release switch of the rear buckle so that it faces the vehicle's inner-side as shown in the figure.

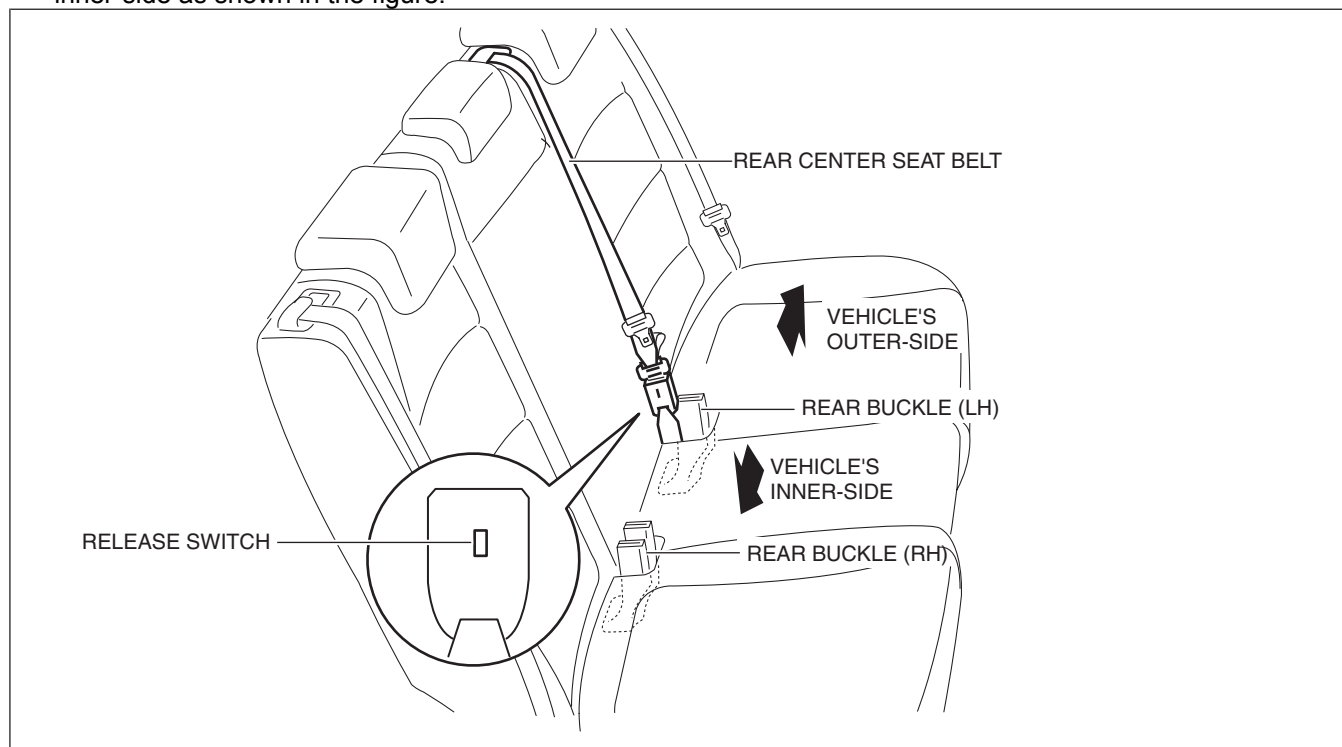

ac5wzw00002785