

BLOWER UNIT DISASSEMBLY/ASSEMBLY


id071100800600

Caution

- Apply only the specified grease to the link. Otherwise abnormal noise or improper operation may result.


1. Disassemble in the order indicated in the table.

L.H.D.

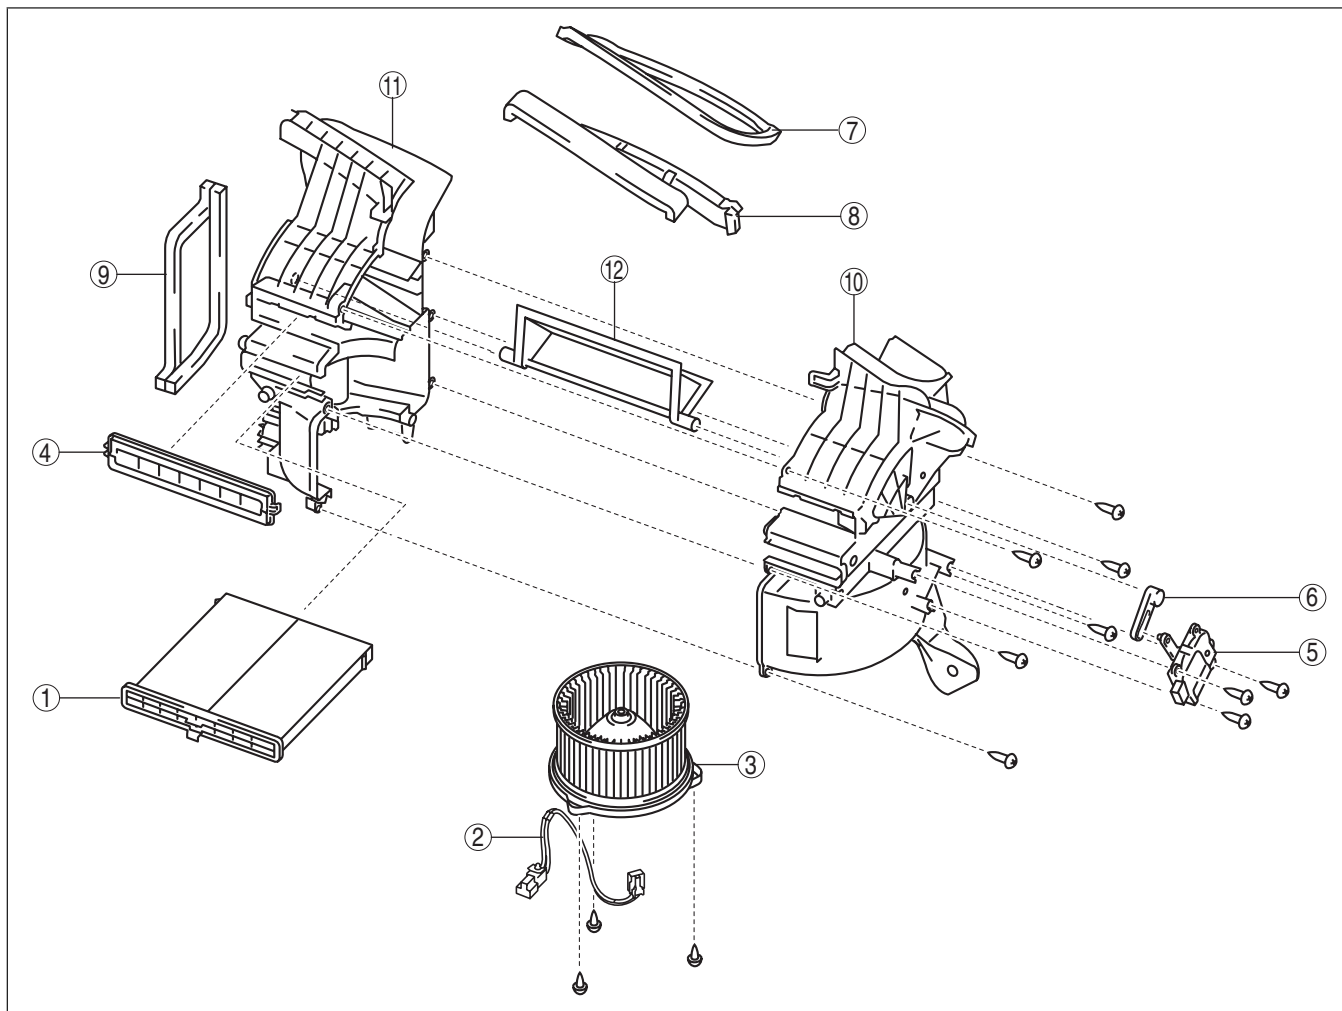

ac5wzw00001798

R.H.D.

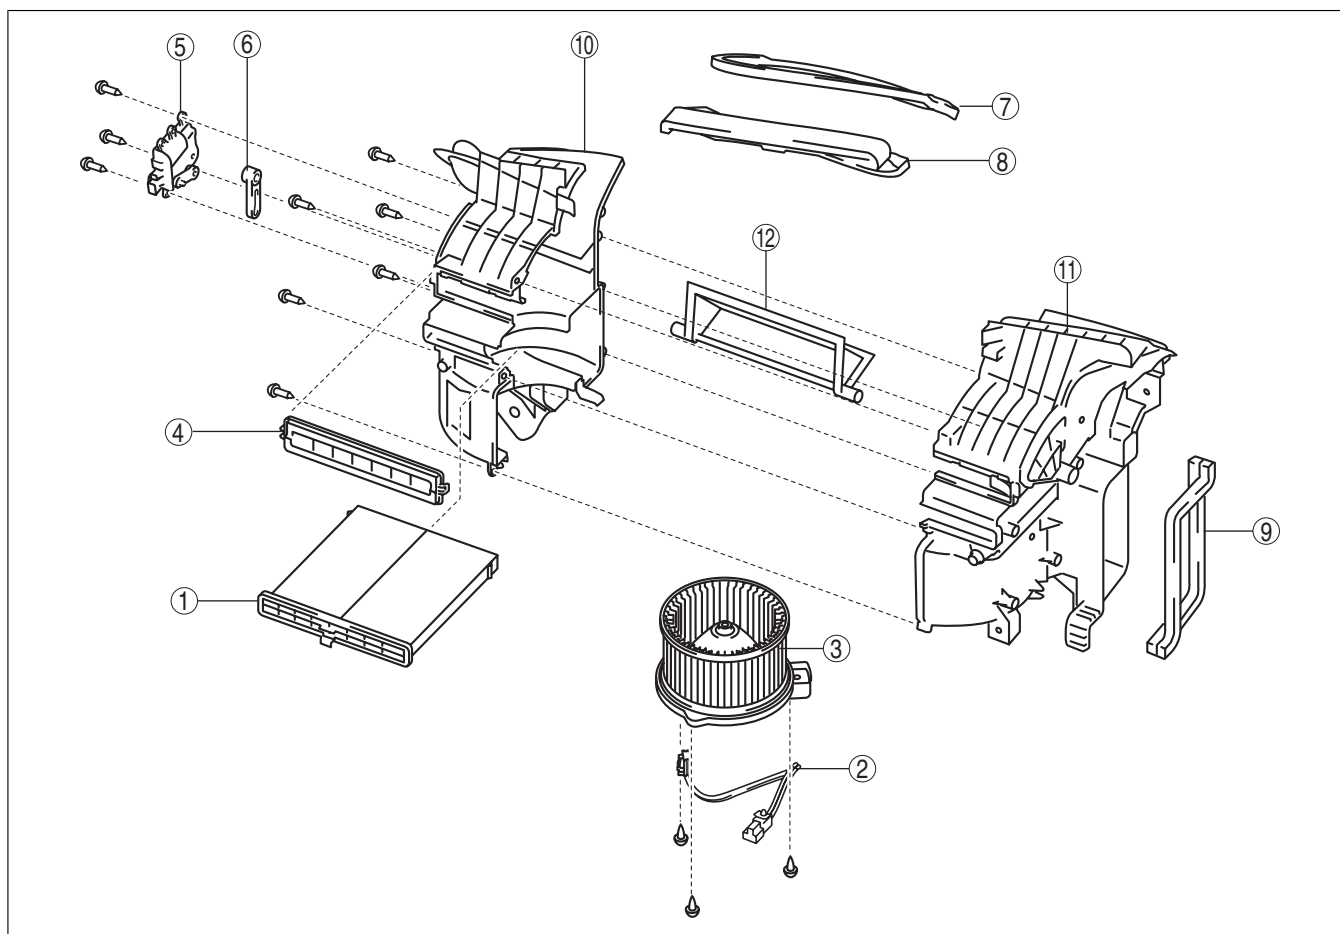

ac5wzw00001799

1	Air filter
2	Harness (with blower motor mid-wiring harness)
3	Blower motor
4	Cover
5	Air intake actuator
6	Air intake link
7	Polyurethane (1)
8	Polyurethane (2)
9	Polyurethane (3)
10	Blower case (1)
11	Blower case (2)
12	Air intake door

2. Assemble in the reverse order of disassembly.