


AIR BAG SYSTEM LOCATION INDEX

id081000805300

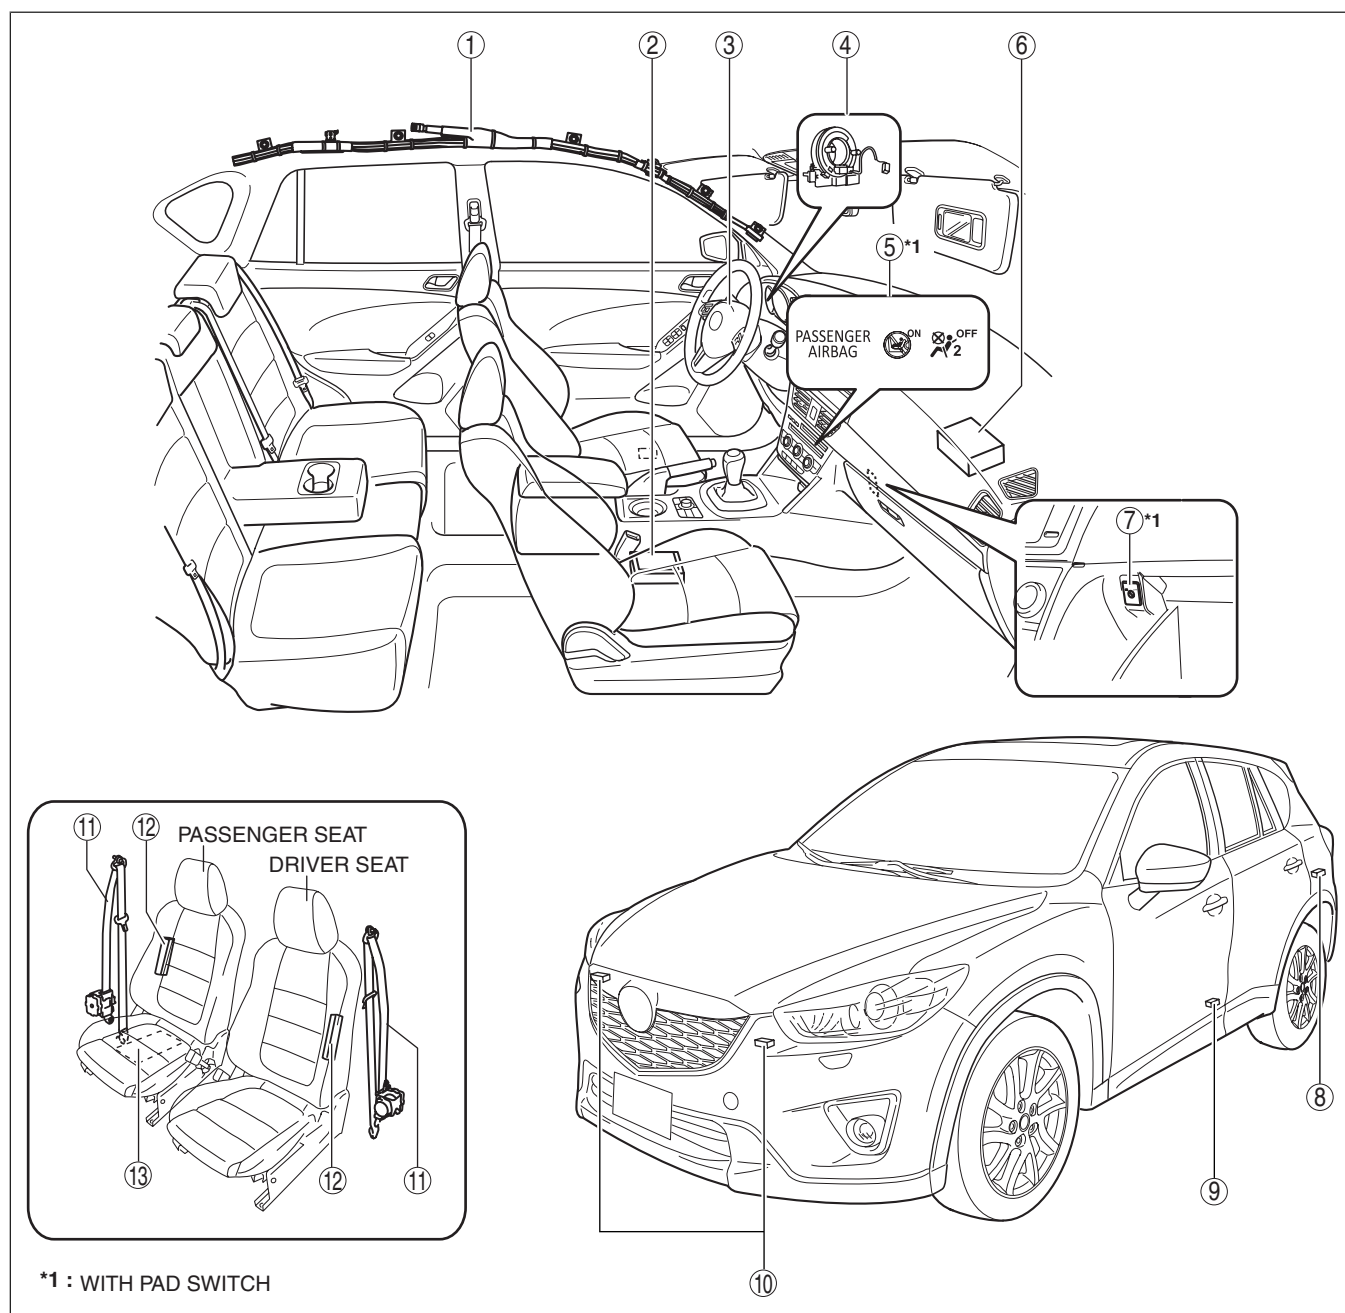

*1 : WITH PAD SWITCH

ac5wzw00002060

1	Curtain air bag module (See CURTAIN AIR BAG MODULE REMOVAL/INSTALLATION.) (See AIR BAG MODULE AND PRE-TENSIONER SEAT BELT DEPLOYMENT PROCEDURES.)	4	Clock spring (See CLOCK SPRING REMOVAL/INSTALLATION.) (See CLOCK SPRING INSPECTION.) (See CLOCK SPRING ADJUSTMENT.)
2	SAS control module (See SAS CONTROL MODULE REMOVAL/INSTALLATION.) (See SAS CONTROL MODULE CONFIGURATION (USING READ/WRITE FUNCTION).) (See SAS CONTROL MODULE CONFIGURATION (USING AS-BUILT DATA).)	5	Passenger air bag deactivation (PAD) indicator (See PASSENGER AIR BAG DEACTIVATION (PAD) SWITCH REMOVAL/INSTALLATION.)
3	Driver-side air bag module (See DRIVER-SIDE AIR BAG MODULE REMOVAL/INSTALLATION.) (See AIR BAG MODULE AND PRE-TENSIONER SEAT BELT DEPLOYMENT PROCEDURES.)	6	Passenger-side air bag module (See PASSENGER-SIDE AIR BAG MODULE REMOVAL/INSTALLATION.) (See AIR BAG MODULE AND PRE-TENSIONER SEAT BELT DEPLOYMENT PROCEDURES.)
		7	Passenger air bag deactivation (PAD) switch (See PASSENGER AIR BAG DEACTIVATION (PAD) SWITCH REMOVAL/INSTALLATION.) (See PASSENGER AIR BAG DEACTIVATION (PAD) SWITCH INSPECTION.)

8	Side air bag sensor No.2 (See SIDE AIR BAG SENSOR NO. 2 REMOVAL/ INSTALLATION.)
9	Side air bag sensor No.1 (See SIDE AIR BAG SENSOR NO. 1 REMOVAL/ INSTALLATION.)
10	Crash zone sensor (See CRASH ZONE SENSOR REMOVAL/ INSTALLATION.)
11	Pre-tensioner seat belt (See FRONT SEAT BELT REMOVAL/ INSTALLATION.) (See AIR BAG MODULE AND PRE-TENSIONER SEAT BELT DEPLOYMENT PROCEDURES.)

12	Side air bag module (See SIDE AIR BAG MODULE REMOVAL/ INSTALLATION.) (See AIR BAG MODULE AND PRE-TENSIONER SEAT BELT DEPLOYMENT PROCEDURES.)
13	Occupancy sensor (See OCCUPANCY SENSOR INSPECTION.)