

M POSITION SWITCH INSPECTION [FW6A-EL, FW6AX-EL]


id0517h2500000

Continuity Inspection

Note


- The M position switch is built into the selector lever component.

- Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
- Remove the front console. (See FRONT CONSOLE REMOVAL/INSTALLATION.)
- Disconnect the selector lever component connector.

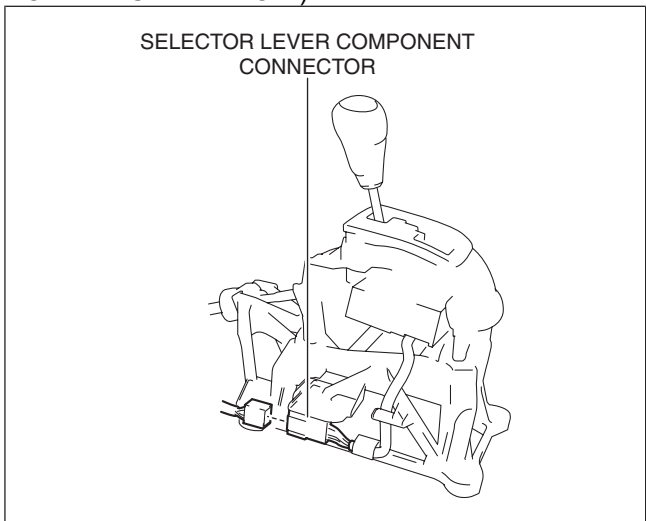

ac5wzw00000784

- Verify that the continuity between selector lever component terminals E and J.
 - If not as verified, replace the selector lever component. (See AUTOMATIC TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION.)

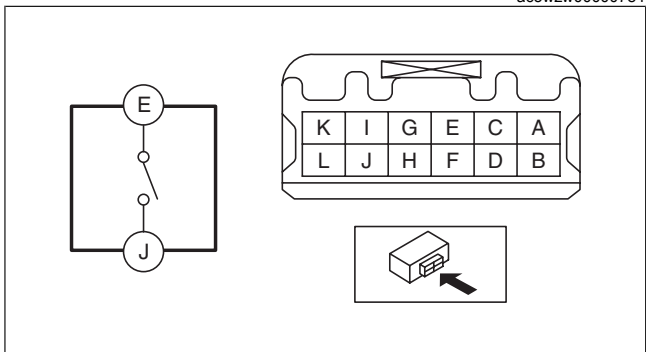

ac5wzw00000785

M position switch specification

Test condition	Continuity
Selector lever is in the M position.	Continuity
Selector lever is not in the M position.	No continuity