


Bluetooth UNIT REMOVAL/INSTALLATION

id092000833300

Caution


- The audio unit communicates with the Bluetooth unit and records the presence/non-presence of the Bluetooth unit when the ignition is switched to ACC or ON (engine off or on) after connecting the negative battery cable.
- If the commander switch is installed with the negative battery cable connected when the audio unit records that there is no Bluetooth unit, the Bluetooth unit does not operate.
- For the Bluetooth unit installation/removal, disconnect the negative battery cable, switch the ignition to ACC or ON (engine off or on) after the servicing is completed, and the audio unit records the presence/non-presence of the Bluetooth unit.

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the glove compartment. (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
3. Remove the nuts.

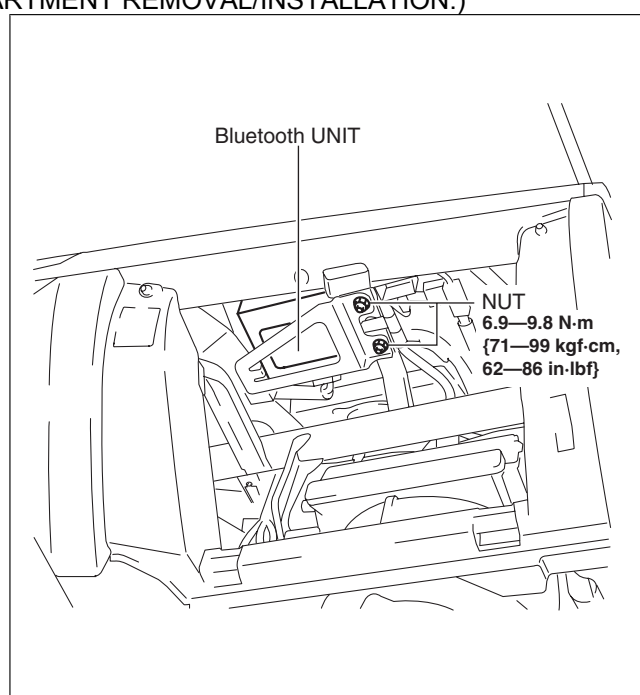

ac5jjw00000475

4. While pressing the tabs of the clip in the direction of the arrows (1) shown in the figure, press the clip in the direction of the arrow (2) to detach it from the Bluetooth unit.
5. Detach the clip.
6. Disconnect the connector.
7. Remove the Bluetooth unit.
8. Install in the reverse order of removal.

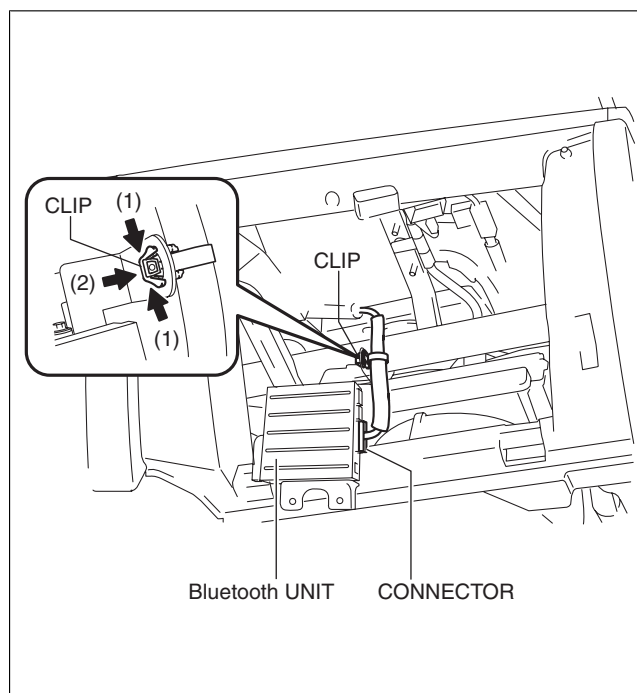

ac5jjw00000476