

QUICK RELEASE (FUEL SYSTEM) CONNECTOR [SKYACTIV-G 2.0, SKYACTIV-G 2.5]


id0114z9003800

Purpose, Function

- Serviceability has been improved by the easy disconnection/connection.


Construction

- The quick connectors are in the following positions:

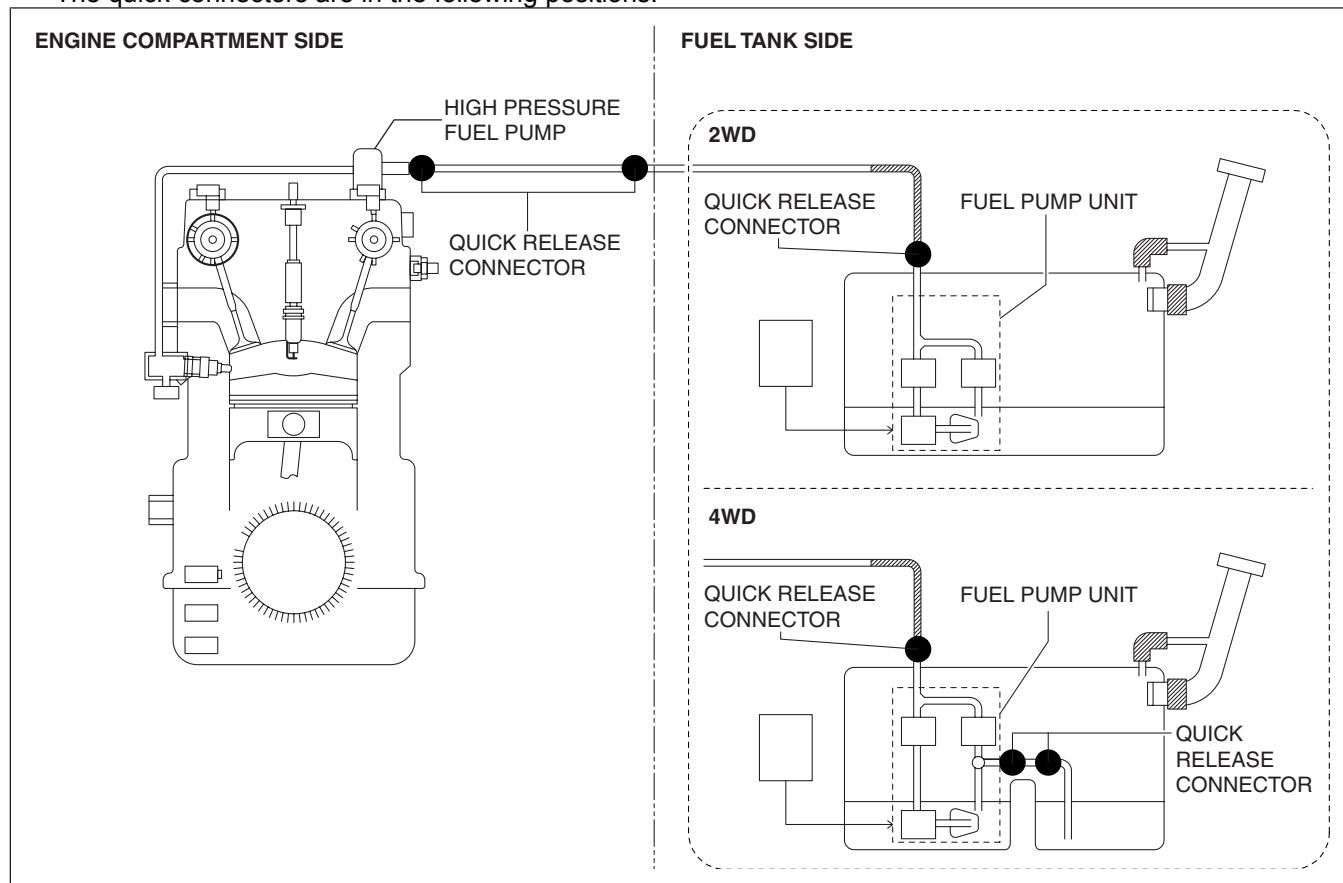

ac5uun00000039

- An SST is not used with this type.
- Mainly consists of a retainer and O-ring. The quick release connector is integrated with the fuel hose and therefore cannot be disassembled.
- When the quick release connector is connected, the fuel pipe projection is locked at the clamp lock point. To release the quick connector lock for each type, follow the procedure in the order shown in each figure.

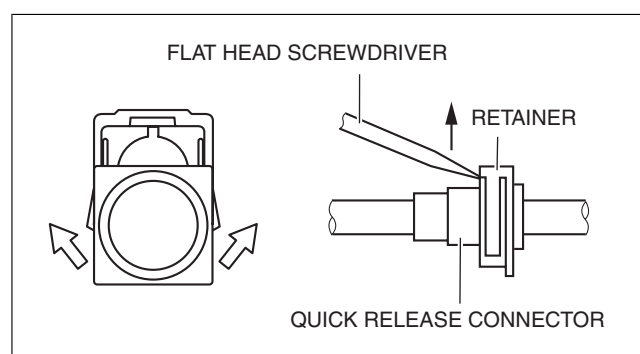

am3uun00002124