

CLOCK SPRING ADJUSTMENT


id081000802100

1. Set the front wheels straight ahead.

Caution


- The clock spring will break if over-wound. Do not forcibly turn the clock spring.

2. Turn the clock spring clockwise until it stops.

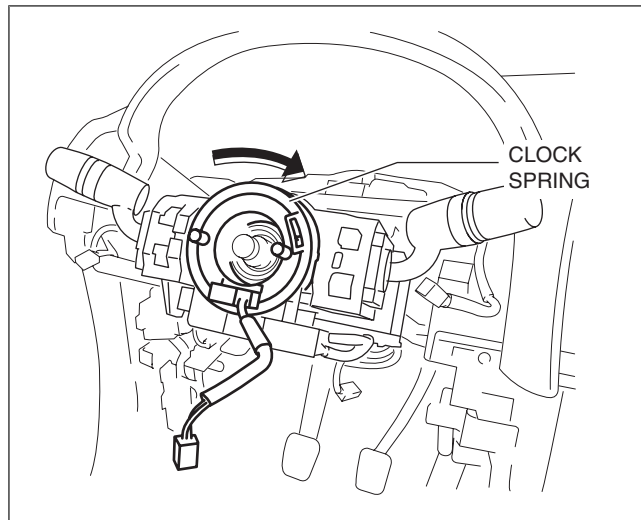


ac5wzw00002045

3. Turn the clock spring counterclockwise **approx. 2 turns**.

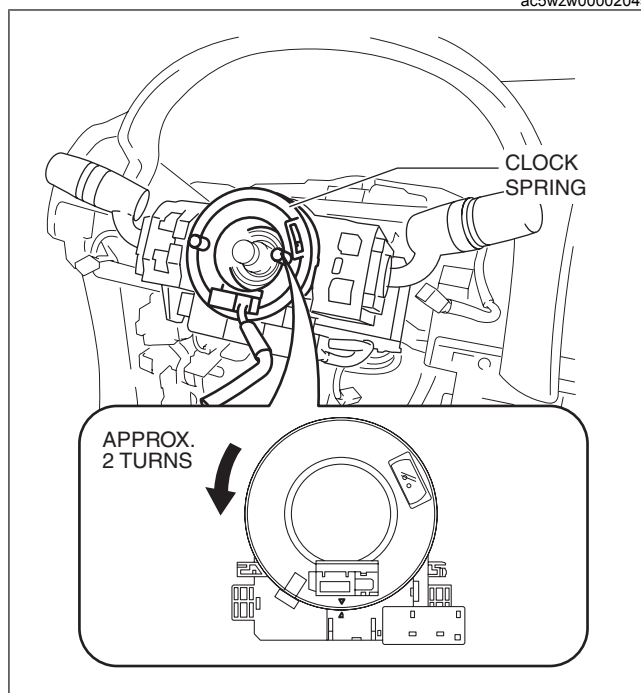

ac5wzw00002046


4. Align the mark on the clock spring with the mark on the outer housing.

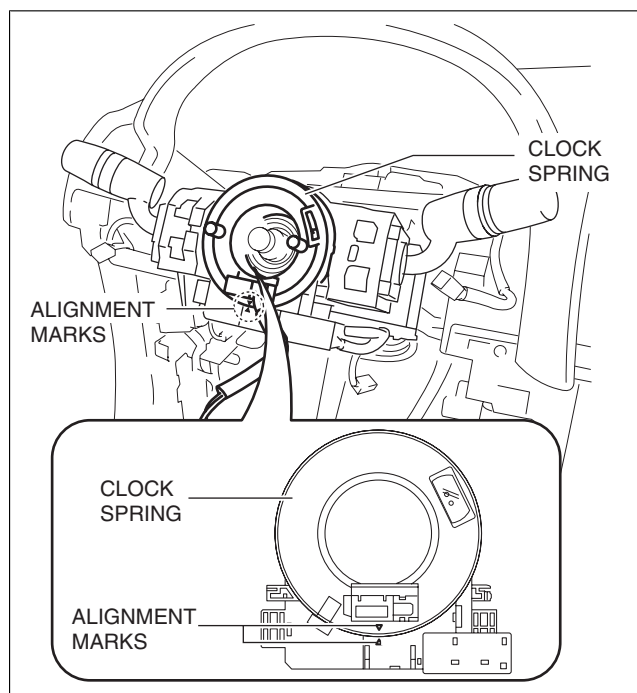

ac5wzw00002047

Note

- After adjusting the alignment marks, the guides can be verified in the viewing slots shown in the figure.

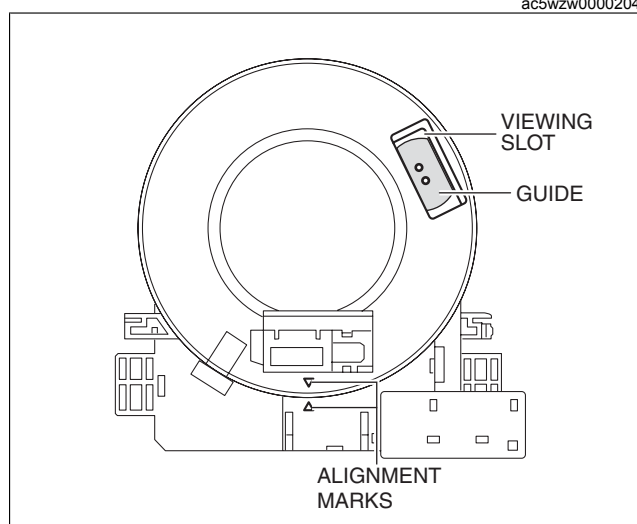

ac5wzw00002048