
CATALYTIC CONVERTER [SKYACTIV-D 2.2]


id0116e1814400

Purpose, Function

- Purifies contaminants in the exhaust gas by utilizing chemical reactions.

Construction

- The catalytic converter is installed to the rear of the engine.
- The catalytic converter has an integrated DPF.

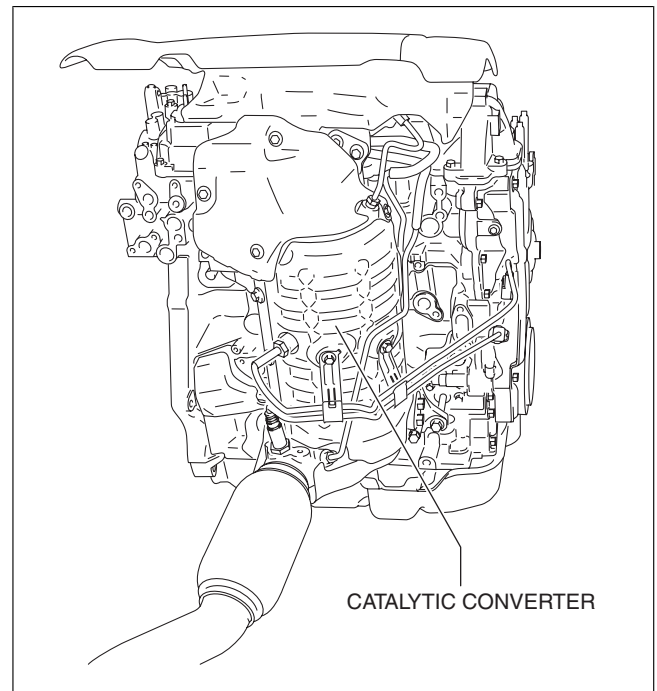

ac5wzn00002257

Operation

- The catalytic converter converts the noxious carbon monoxide and hydrocarbon in the exhaust gas to non-noxious carbon dioxide and water.

Oxidization process

