


REAR WIPER ARM AND BLADE REMOVAL/INSTALLATION

id091900801200


Rear Wiper Arm

1. Pull the cap in the direction of the arrows (1) shown in the figure and remove it in the direction of the arrow (2) with tabs A, B released.

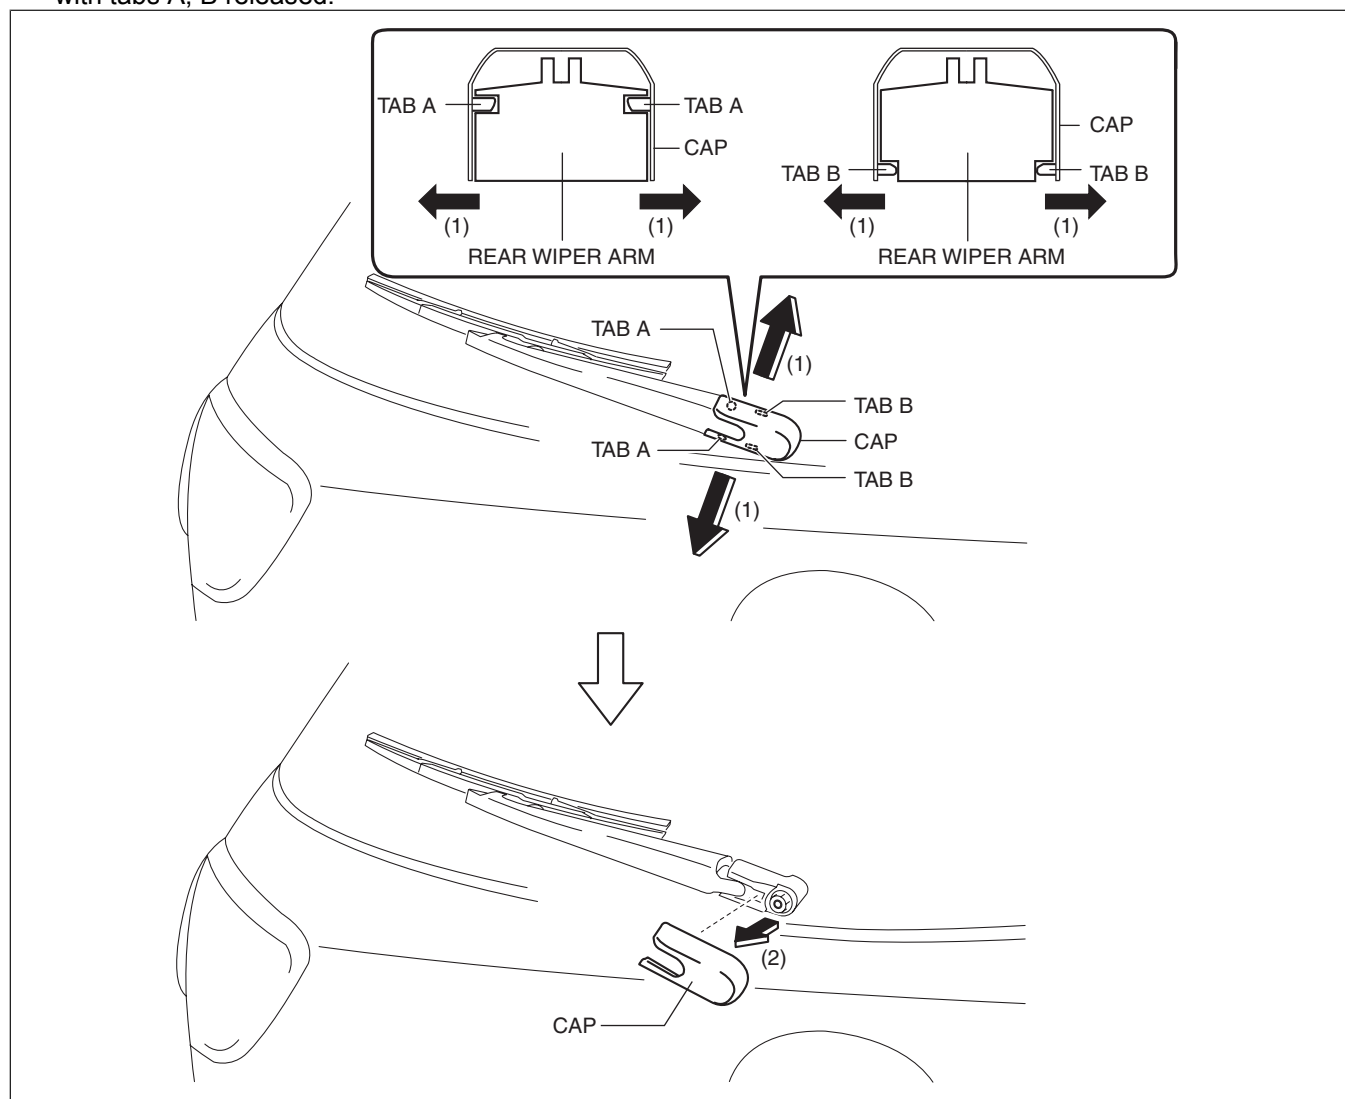


2. Remove the nut with the rear wiper arm and blade pressed.

ac5wzw00004635

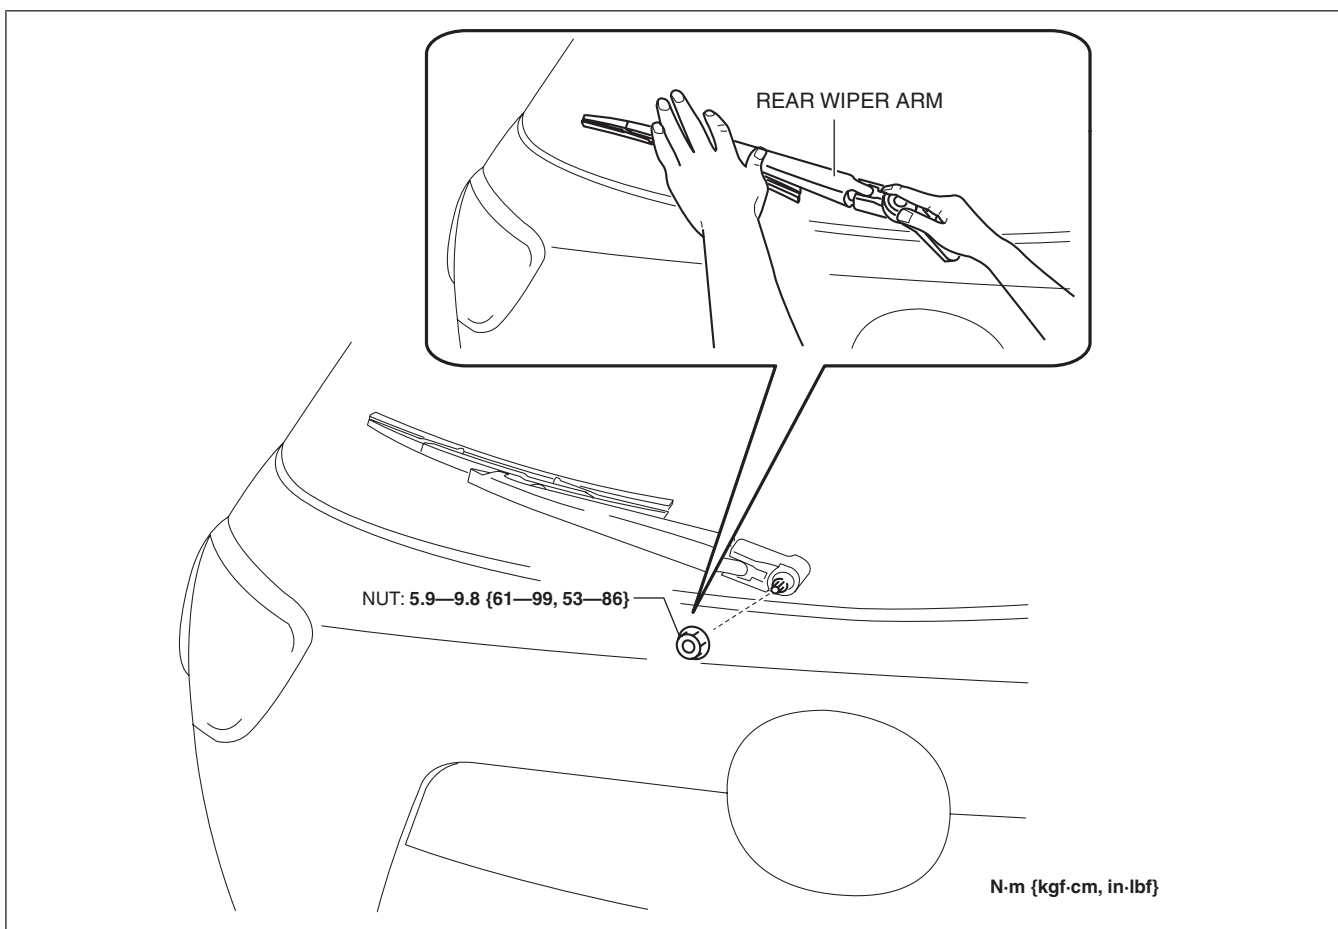

ac5wzw00003280


3. Raise the rear wiper arm and detach it from the serrated connecting part in the direction of the arrow (1) shown in the figure.
4. Install in the reverse order of removal.
5. Adjust the rear wiper arm and blade. (See REAR WIPER ARM AND BLADE ADJUSTMENT.)

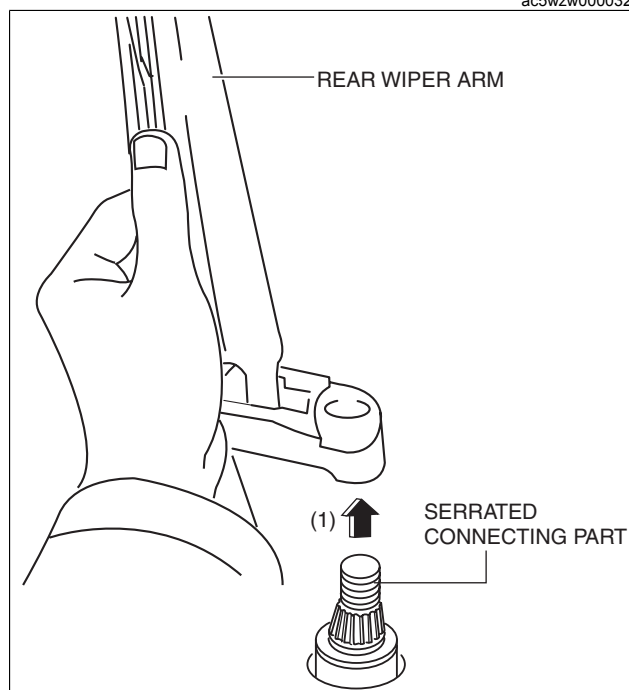

ac5wzw00003281

Rear Wiper Arm Installation Note


1. Clean the serrated connecting part with a wire brush before installing the rear wiper arm.

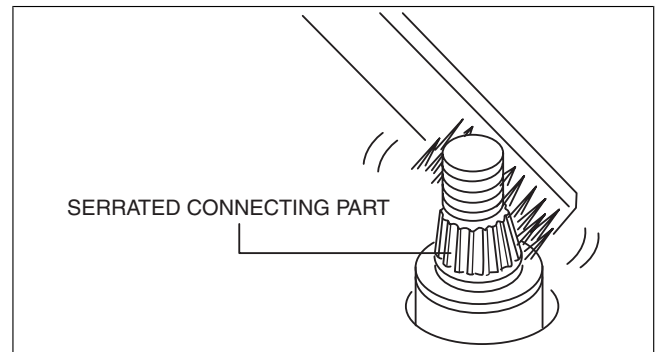

ac5wzw00001618

Rear Wiper Blade

1. Move the rear wiper blade in the direction of the arrow (1) shown in the figure to detach the rear wiper blade from the rear wiper arm.
2. Move the rear wiper blade in the direction of the arrow (2) and remove it from the rear wiper arm in the direction of the arrow (3).

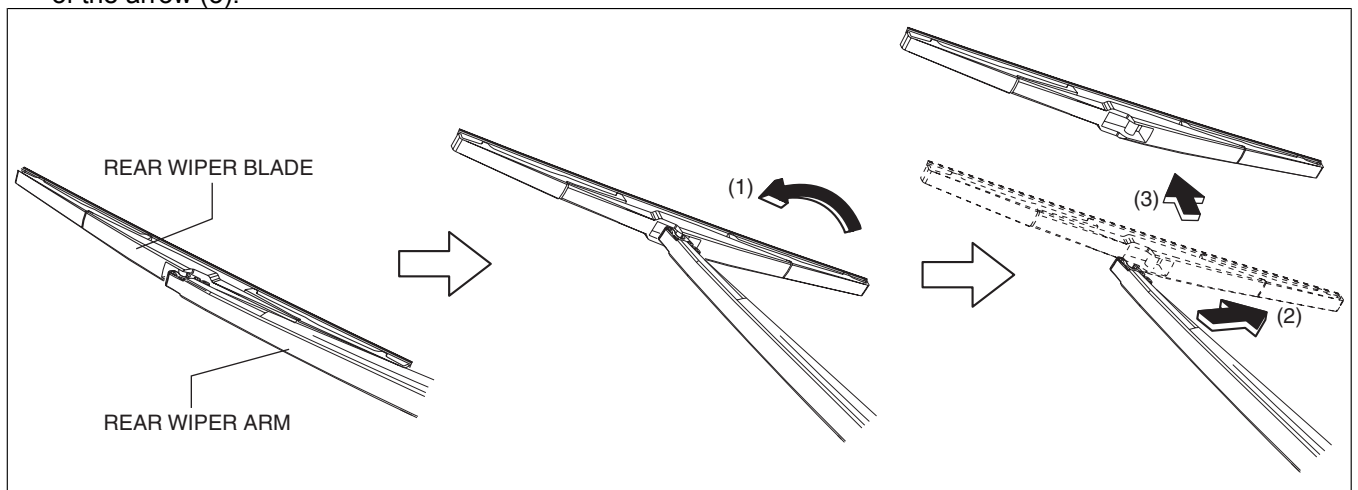

ac5wzw00001619

3. Install in the reverse order of removal.