

LIGHTS-ON INDICATOR LIGHT

id091800013400

Purpose


- Notifies the user that the TNS or the headlights (LO) are on.

Function

- Illuminates when the illumination conditions for the TNS, headlights (LO), or parking lights are met.


Construction

- Displayed in the instrument cluster.

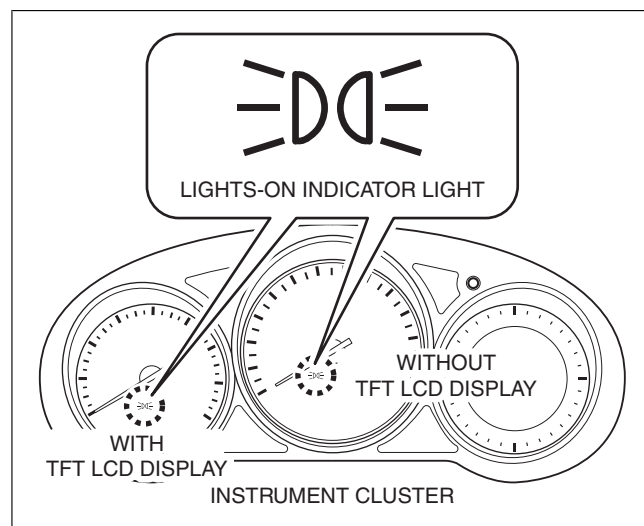

Operation

- When the light switch is operated to the TNS, HEAD, or parking position, a light switch TNS, LO, or parking signal is sent to the start stop unit.
- The start stop unit sends the light switch TNS, LO, or parking signal to the front body control module (FBCM).
- The front body control module (FBCM) sends the light switch TNS, LO, or parking signal to the instrument cluster as a TNS illumination or headlight LO illumination signal.
- When the instrument cluster receives the TNS illumination, or headlight LO illumination signal, it illuminates the lights-on indicator light.

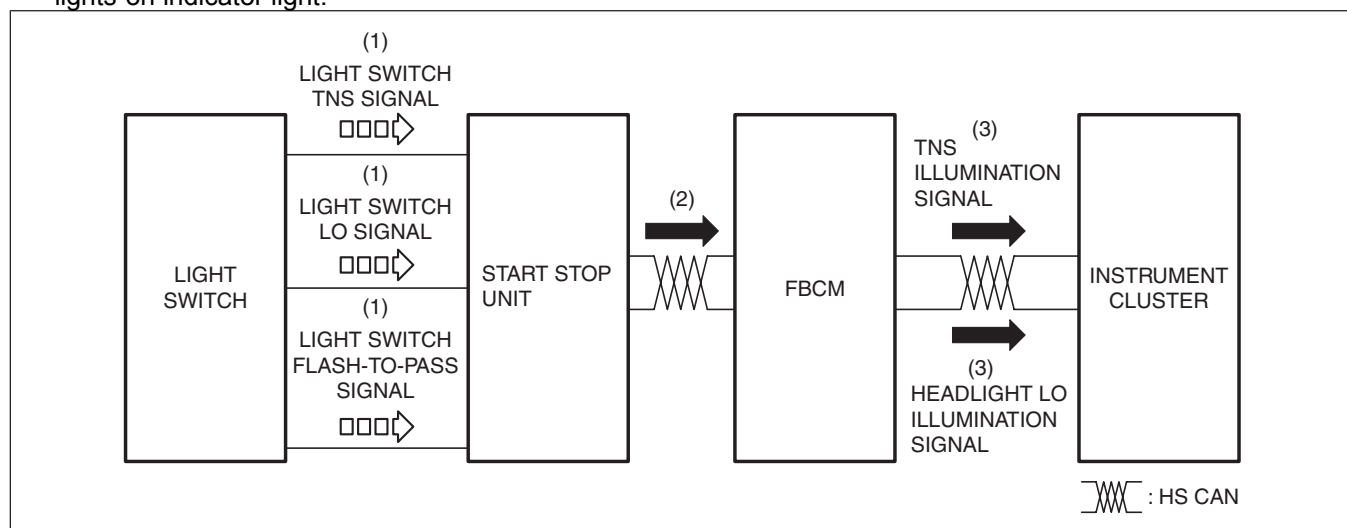

Fail-safe

- Function not equipped.