


ENGINE OIL TEMPERATURE SENSOR/ENGINE OIL PRESSURE SENSOR REMOVAL/INSTALLATION [SKYACTIV-D 2.2]

id0140z7216700

Note


- The engine oil temperature sensor and engine oil pressure sensor cannot be removed as a single unit. When replacing the engine oil temperature sensor or engine oil pressure sensor, replace the engine oil temperature sensor/engine oil pressure sensor.

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the coolant reserve tank. (See COOLANT RESERVE TANK REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)
3. Disconnect the connector for the engine oil temperature sensor/engine oil pressure sensor using the following procedure: (See Engine Oil Temperature Sensor/Engine Oil Pressure Sensor Connector Connection Note.)
 - (1) Pull out the connector lock in the direction of the arrow.
 - (2) Press the lock down in the direction of the arrow and disconnect the connector.
4. Disconnect the starter terminal B and set the wiring harness aside. (See STARTER REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)

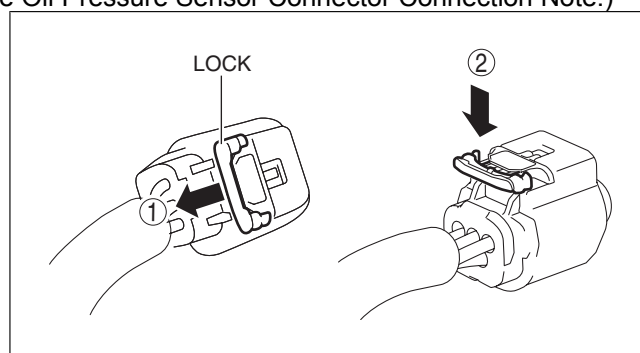

ac5wzw00006376

5. Remove the engine oil temperature sensor/engine oil pressure sensor.

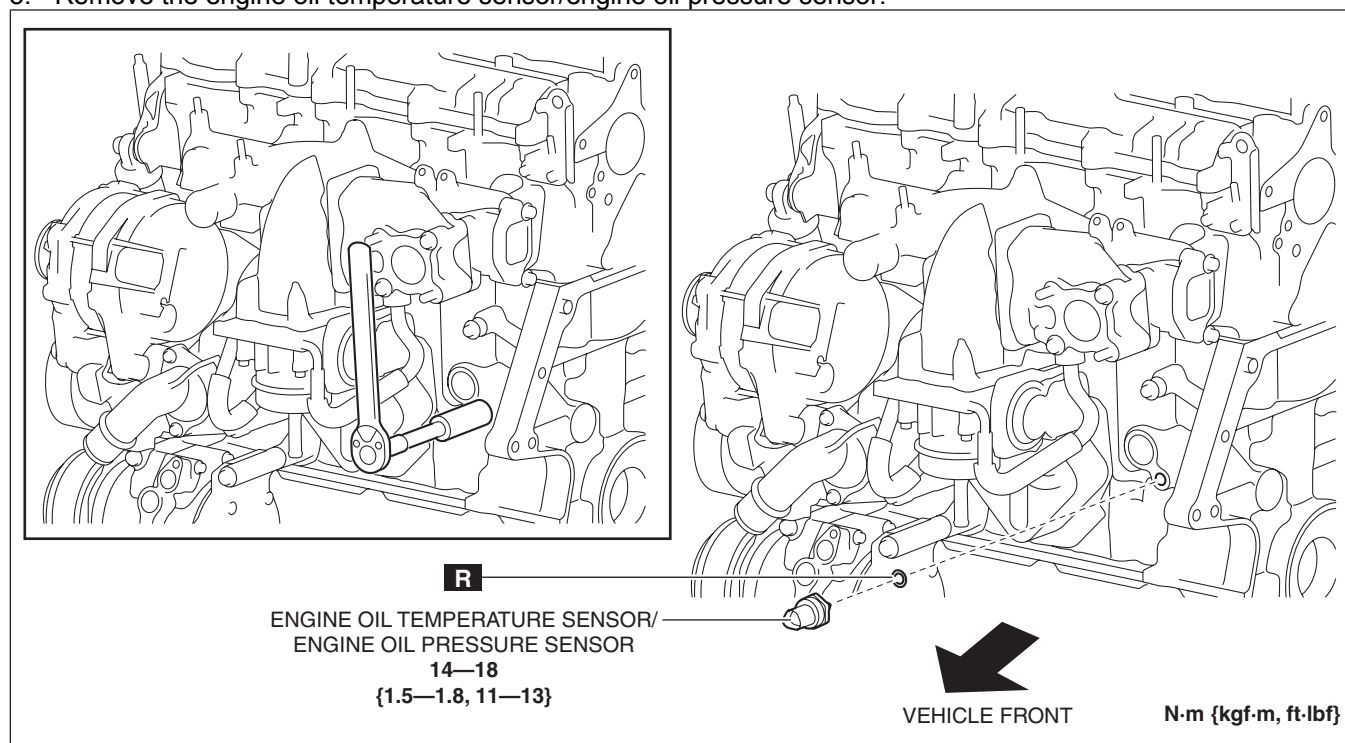


ac5wzw00006377

6. Install in the reverse order of removal.
7. Perform the engine oil data reset. (See ENGINE OIL DATA RESET [SKYACTIV-D 2.2].)

Engine Oil Temperature Sensor/Engine Oil Pressure Sensor Connector Connection Note

1. Connect the connector for the engine oil temperature sensor/engine oil pressure sensor and press it in the lock direction of the arrow.

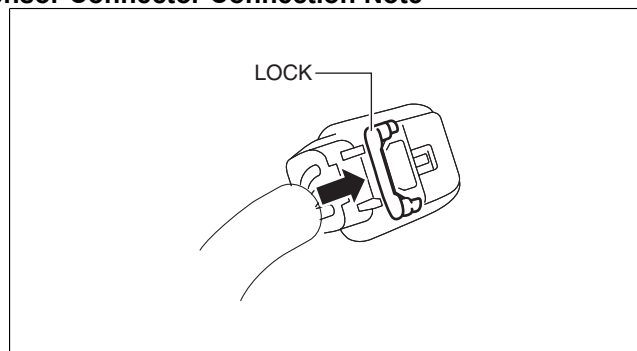

ac5wzw00005478