


REAR SEAT BACK STRIKER REMOVAL/INSTALLATION

id091300812100

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Press the push knob to fold the rear seat back.
3. Remove the following parts:
 - (1) Trunk board (See TRUNK BOARD REMOVAL/INSTALLATION.)
 - (2) Trunk end trim (See TRUNK END TRIM REMOVAL/INSTALLATION.)
 - (3) Rear scuff plate (See REAR SCUFF PLATE REMOVAL/INSTALLATION.)
 - (4) Trunk side trim (See TRUNK SIDE TRIM REMOVAL/INSTALLATION.)
4. Remove the bolts.
5. Remove the rear seat back striker.
6. Install in the reverse order of removal.

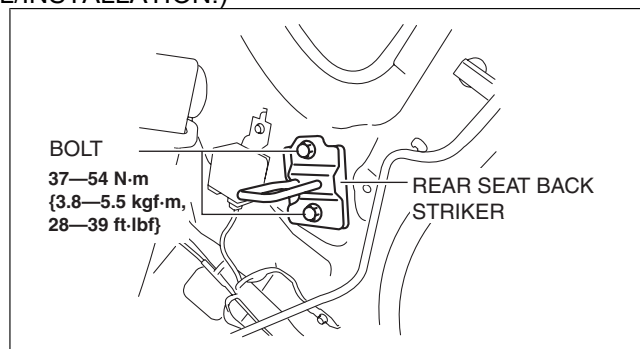

ac5uuw00001984