


BOOST AIR TEMPERATURE SENSOR REMOVAL/INSTALLATION [SKYACTIV-D 2.2]

id0140z7216600

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the front bumper. (See FRONT BUMPER REMOVAL/INSTALLATION.)
3. Remove the charge air cooler outlet pipe. (See CHARGE AIR COOLER REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)
4. Disconnect the boost air temperature sensor connector.
5. Remove the boost air temperature sensor.
6. Install in the reverse order of removal.

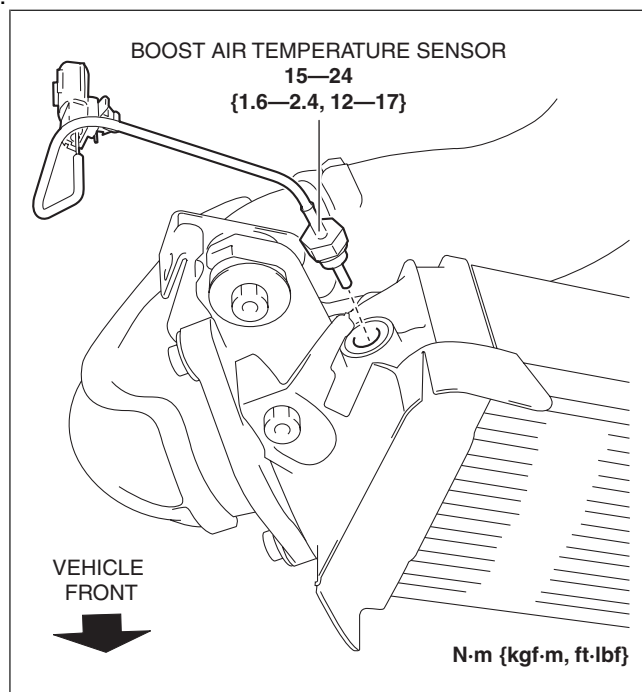

ac5wzw00004429