

COMMANDER SWITCH


id092000012300

Purpose, Function

- The audio unit can be operated without having to change the driving posture.


Structure

- Installed to the center of the rear console.

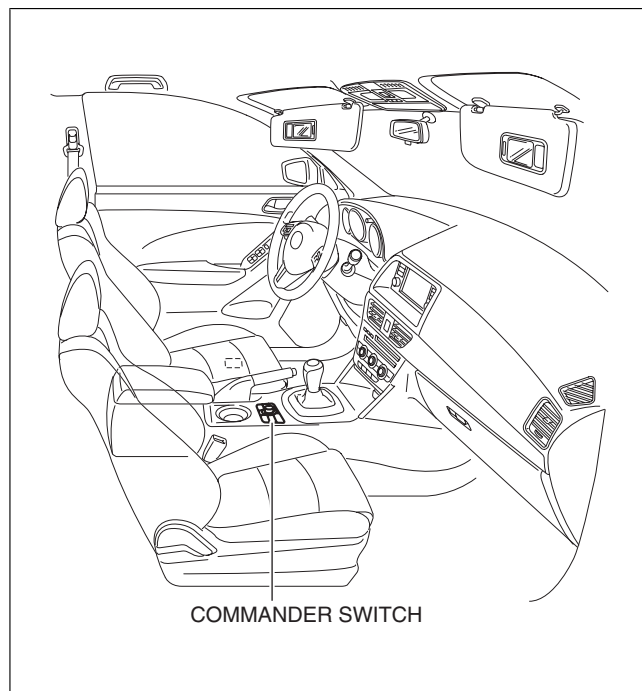

ac5jln00000654

- The commander switch consists of the AUDIO switch, NAV switch, PHONE switch, SETUP switch, BACK switch, and the commander knob.

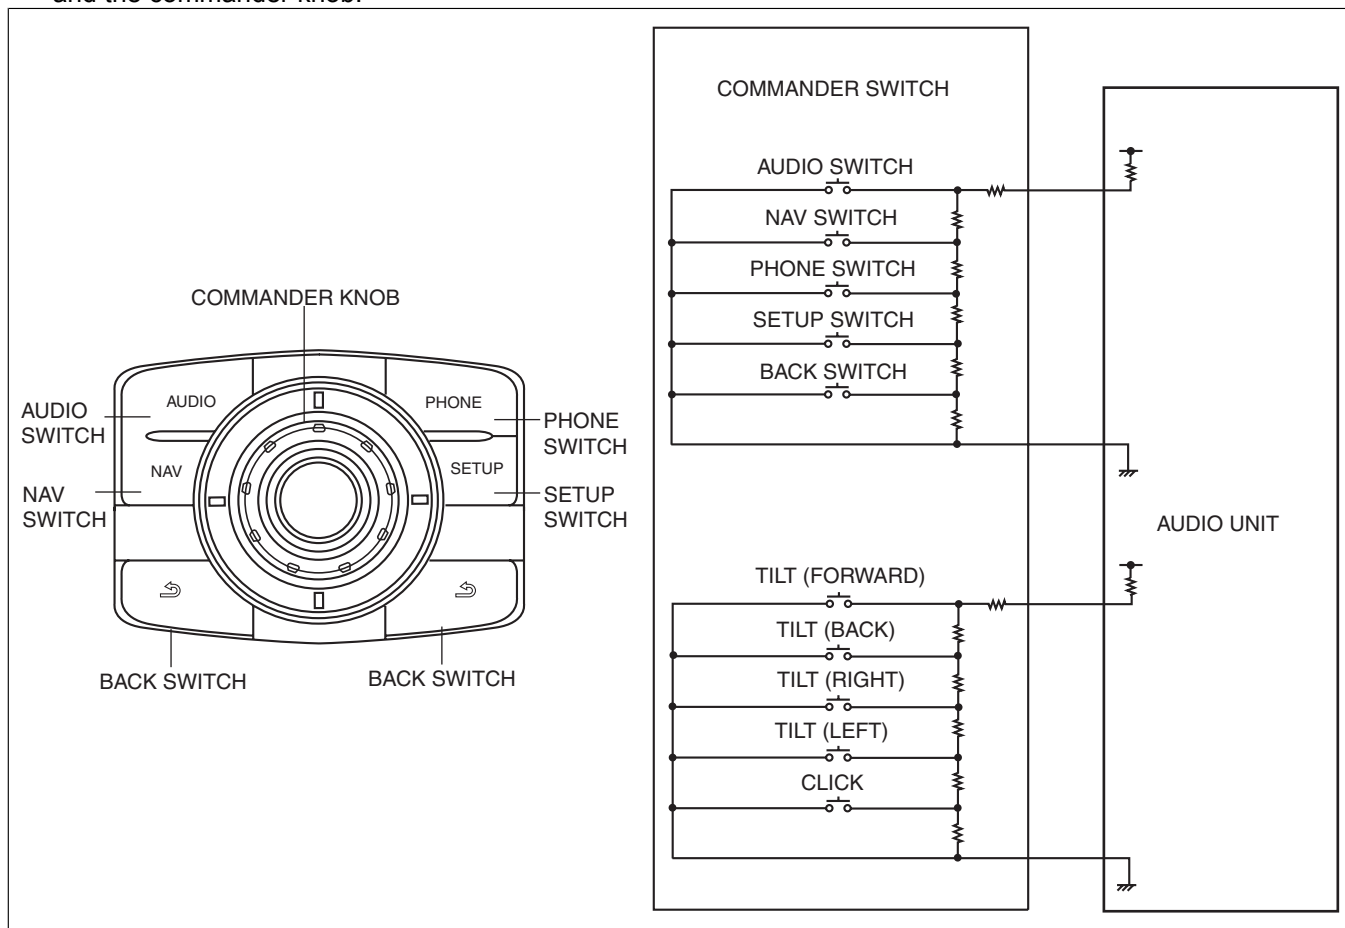

ac5wzn00001217

Operation

Switch name	Operation
AUDIO switch	Switches to the audio screen. After changing to the audio screen, the display content does not change even if the switch is pressed down again.
NAV switch	Switches to the car navigation screen. After changing to the car navigation screen, the display content does not change even if the switch is pressed down again.
PHONE switch	Switches to the dial screen. After changing to the dial screen, the display content does not change even if the switch is pressed down again.
SETUP switch	Switches to the display screen. After changing to the display screen, the display content does not change even if the switch is pressed down again.
BACK switch	When BACK switch icon is displayed on screen <ul style="list-style-type: none">• When "BACK" is displayed beside the icon, switches the screen to one-level upper tier. When "Now Playing" or "Listening" is displayed beside the icon, switches to the main screen. When BACK switch icon is not displayed on screen <ul style="list-style-type: none">• Switches the screen to one-level upper tier. If at the top tier, the display content does not change even if the BACK switch is pressed down again.
Commander knob (tilt ^{*1})	Moves the focus (selection area) of the buttons on the screen. Tilting the knob moves the focus between the areas. Tilt in lateral direction for left/right transit; tilt in longitudinal direction for forward/back transit.
Commander knob (rotation)	Moves the focus (selection area) of the buttons on the screen. Rotating the knob moves the focus within an area.
Commander knob (click ^{*2})	Selects the button on the screen which the focus is on.

*1 : Moving of the commander knob forward/back, left/right.

*2 : Pressing down of the commander knob.

Fail-safe

- Function not equipped.