


FRONT DOOR CHECKER REMOVAL/INSTALLATION

id091100520400


Caution

- When the front door checker securing bolts are removed, the front door may open until it contacts the front fender panel causing the front door and the front fender panel to be damaged. Before removing the front door, overlap and adhere the protective tape to the position shown in the figure and be careful no to damage the front door and the front fender panel.

1. Fully close the front door glass.
2. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
3. Remove the inner garnish. (See INNER GARNISH REMOVAL/INSTALLATION.)
4. Remove the front door trim. (See FRONT DOOR TRIM REMOVAL/INSTALLATION.)
5. Remove the front door speaker. (See FRONT DOOR SPEAKER REMOVAL/INSTALLATION.)
6. Remove bolt.

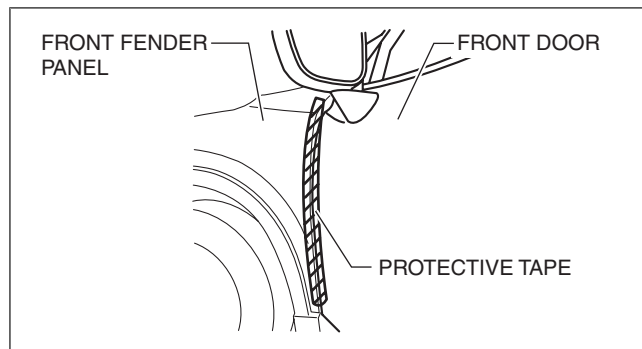


ac5uuw00000847

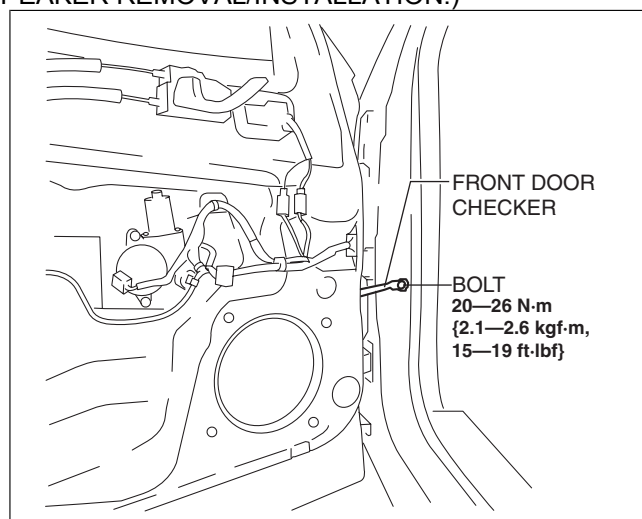

ac5wzw00002814

7. Remove nuts.
8. Pull out the front door checker from the front speaker installation hole.
9. Install in the reverse order of removal.

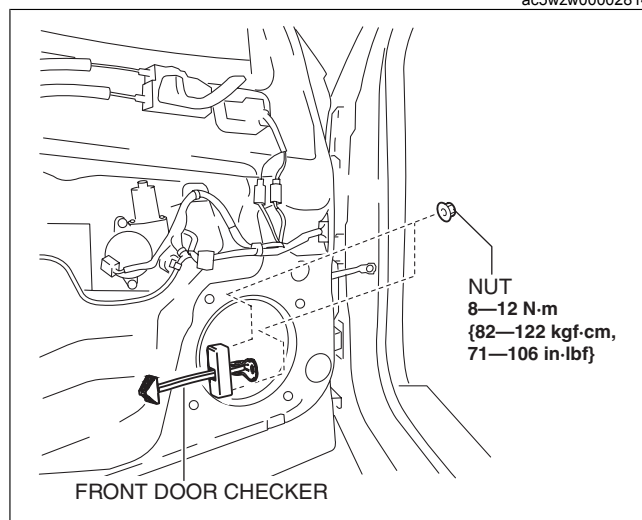

ac5wzw00002815