

## RESONANCE CHAMBER [SKYACTIV-D 2.2]


id0113z7003400

### Purpose, Function

- Pulsation of intake air is controlled and intake air noise is reduced by adding an intake air passage.

### Construction

- The resonance chamber is installed to fresh-air duct.

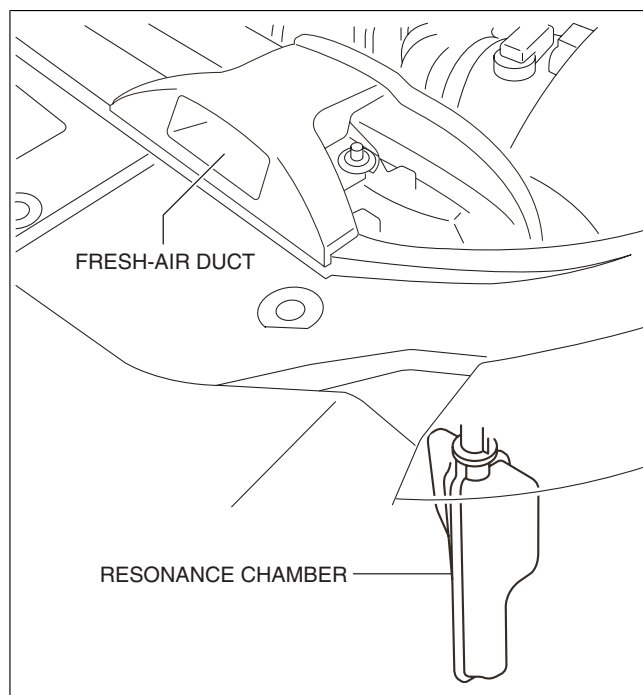

ac5wzn00002185