

## AUTOMATIC TRANSAXLE REMOVAL/INSTALLATION [FW6A-EL]


id0517h21172h1

### Caution

- If the automatic transaxle has been replaced, perform initial learning. (See INITIAL LEARNING [FW6A-EL, FW6AX-EL].)
- Performing the following procedures without first removing the front ABS wheel-speed sensor may possibly cause an open circuit in the harness if it is pulled by mistake. Before performing the following procedures, disconnect the front ABS wheel-speed sensor (axle side) and fix it to an appropriate place where the sensor will not be pulled by mistake while servicing the vehicle.
- Secure the steering wheel using tape or a cable to prevent the steering shaft from rotating after disconnecting the steering shaft. If the steering wheel rotates after the steering shaft and the steering gear and linkage are disconnected, the internal parts of the clock spring could be damaged.


### Removal

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
2. Remove the air cleaner and air hose as a single unit. (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
3. Remove the battery tray and PCM component. (See BATTERY REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
4. Disconnect the wiring harness clip from the transaxle.
5. Remove the splash shield. (See SPLASH SHIELD REMOVAL/INSTALLATION.)

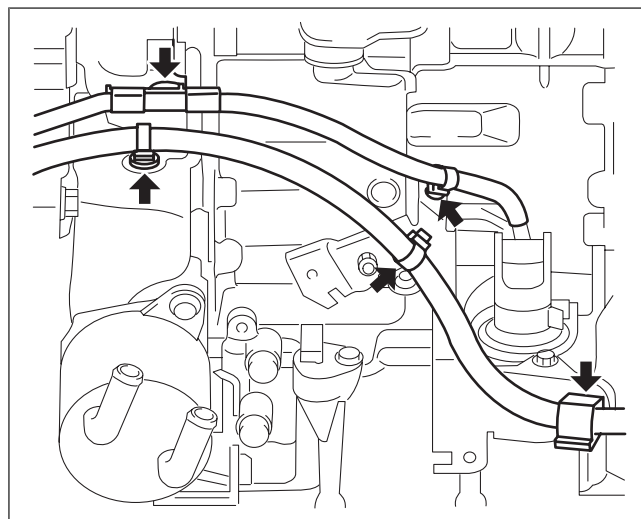

ac5uuw00000219

6. Disconnect the electric AT oil pump connector and electric AT oil pump harness from the transaxle. (With electric AT oil pump)

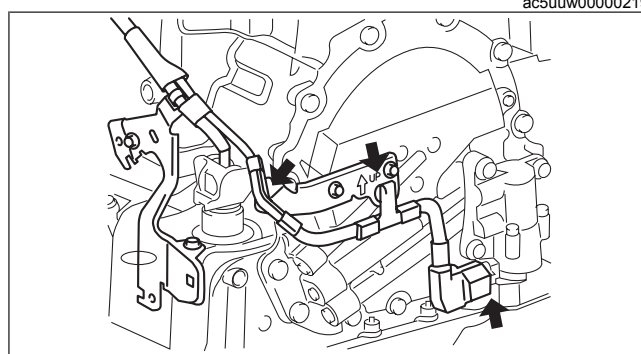


ac5wzw00000914

7. Disconnect the control valve body connector.


### Caution

- Make sure that your hand does not touch the terminal as the connector terminal could be damaged.
- Water or foreign matter entering the connector can cause a poor connection or corrosion. Be careful not to allow water droplets or foreign matter to get on the connector when disconnecting it.

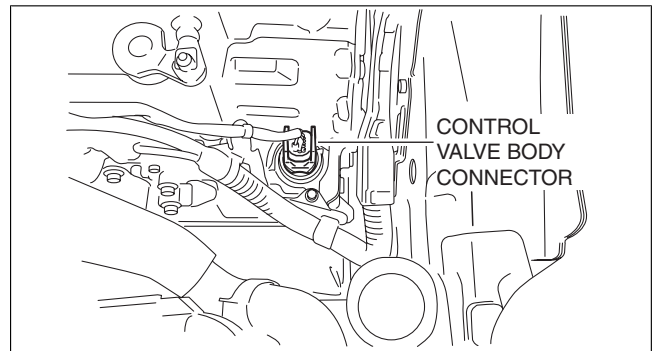


ac5uuw00000223

8. Remove the bracket from the transaxle.

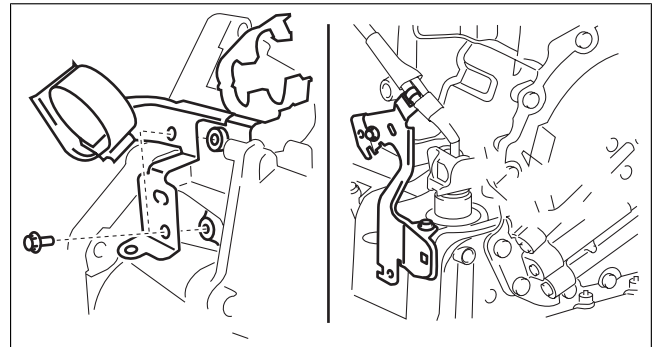


ac5uuw00000224

9. Disconnect the ground cable.

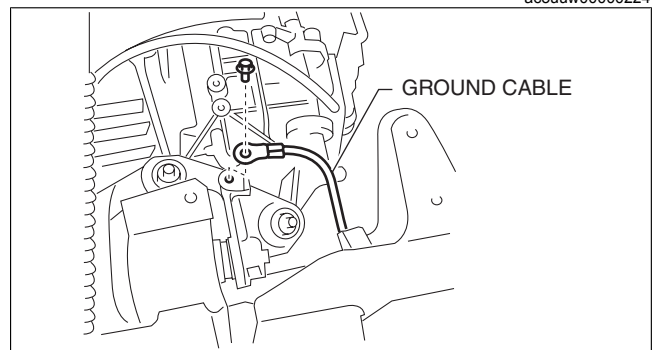


ac5uuw00000220

10. Disconnect the selector cable from the transaxle.

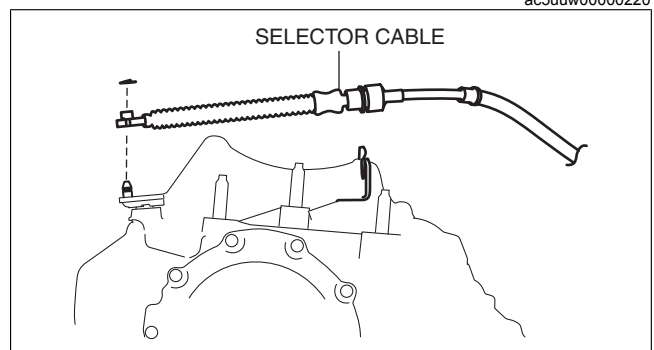

ac5uuw00000221


11. Remove the selector cable bracket.

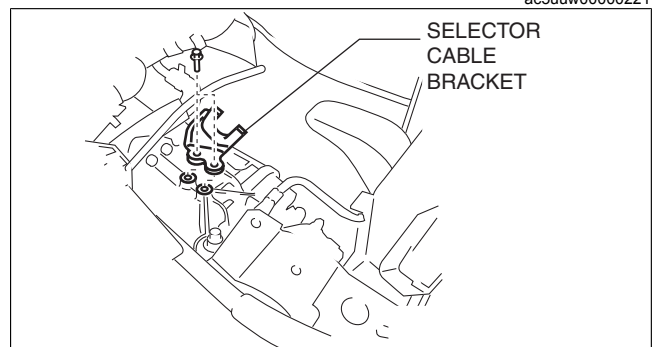

ac5uuw00000222

12. Remove the bracket.


## Type A

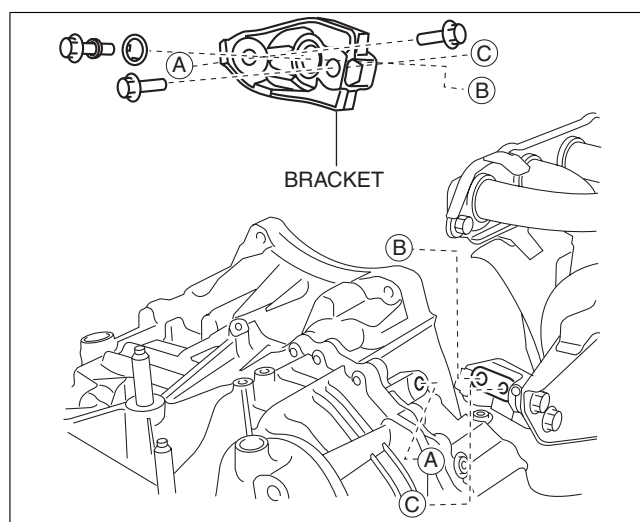


ac5wzw00002468

## Type B

13. Disconnect the breather hose from the transaxle.
14. Remove the joint cover. (See STEERING WHEEL AND COLUMN REMOVAL/INSTALLATION.)
15. Disconnect the intermediate shaft from the steering gear and linkage. (See STEERING WHEEL AND COLUMN REMOVAL/INSTALLATION.)
16. Remove the front tires. (See GENERAL PROCEDURES (SUSPENSION).)
17. Remove the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/INSTALLATION.)
18. Remove the front under cover No.1. (See FRONT UNDER COVER No.1 REMOVAL/INSTALLATION.)
19. Drain the ATF. (See AUTOMATIC TRANSAXLE FLUID (ATF) REPLACEMENT [FW6A-EL, FW6AX-EL].)
20. Disconnect the oil cooler from the transaxle with the hose connected. (Except Automatic Transaxle Replacement) (See OIL COOLER REMOVAL/INSTALLATION [FW6A-EL, FW6AX-EL].)
21. Disconnect the water hose from the oil cooler. (Automatic Transaxle Replacement) (See OIL COOLER REMOVAL/INSTALLATION [FW6A-EL, FW6AX-EL].)
22. Remove the starter. (See STARTER REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
23. Remove the blind cover.

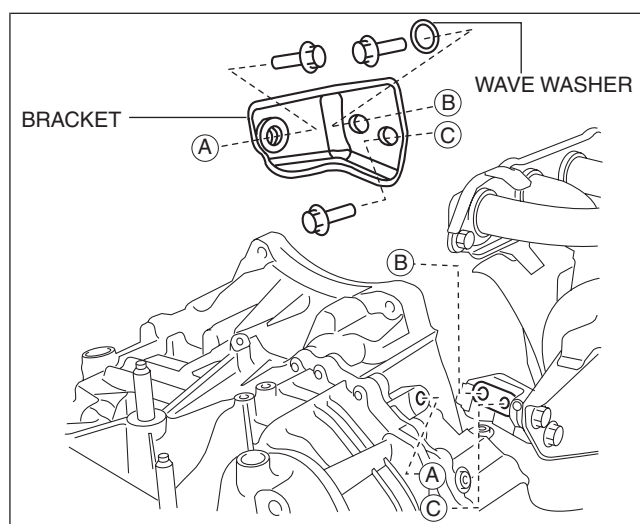


ac5uuw00002992

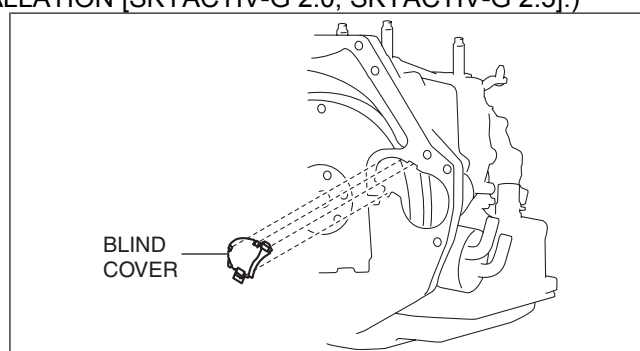


am3uuw00008313

24. Hold the crankshaft pulley to prevent drive plate from rotating.

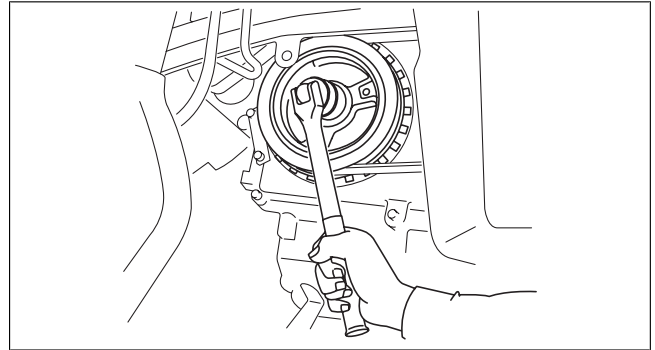


am3uuw00002582

25. Remove the torque converter nuts from the starter installation hole.
26. Disconnect the front ABS wheel-speed sensors from the steering knuckles. (See FRONT ABS WHEEL-SPEED SENSOR REMOVAL/INSTALLATION.)
27. Disconnect the clips securing the brake hose from the front shock absorbers. (See BRAKE HOSE (FRONT) REMOVAL/INSTALLATION.)
28. Disconnect the tie-rod end ball joints from the steering knuckles. (See STEERING GEAR AND LINKAGE REMOVAL/INSTALLATION.)
29. Disconnect the front lower arms from the steering knuckles. (See FRONT LOWER ARM REMOVAL/INSTALLATION.)
30. Disconnect the front stabilizer control links from the front stabilizer. (See FRONT STABILIZER REMOVAL/INSTALLATION.)
31. Disconnect the front drive shaft (LH) from the transaxle. (See FRONT DRIVE SHAFT REMOVAL/INSTALLATION.)
32. Disconnect the front drive shaft (RH) from the transaxle. (See FRONT DRIVE SHAFT REMOVAL/INSTALLATION.)
33. Remove the front crossmember component and No.1 engine mount rubber as a single unit. (See FRONT CROSSMEMBER REMOVAL/INSTALLATION.)
34. Remove the bracket plate No.1 and No.1 engine mount bracket component from the transaxle.

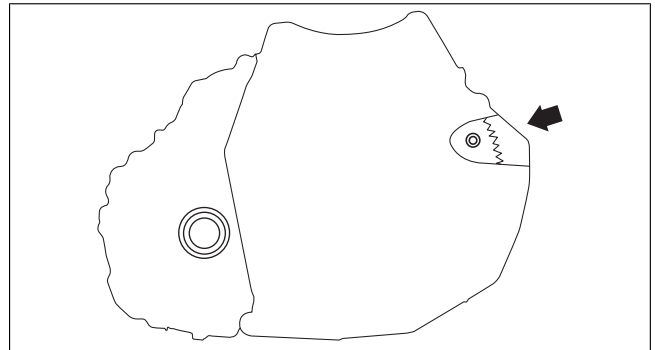

ac5uuw00000225

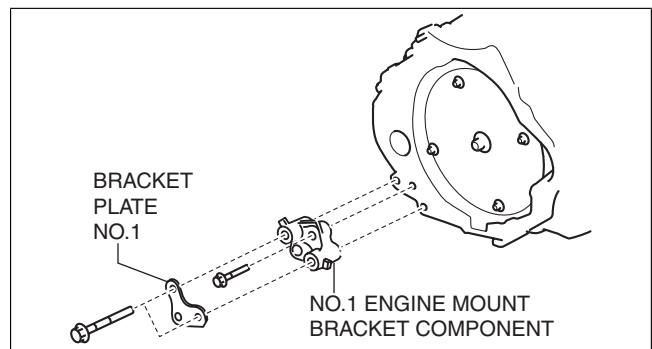


ac5wzw00002127

35. Install the **SST** using the following procedures.


#### Caution

- Refer to the **SST** instruction manual for the basic handing procedure.

- (1) Install one front foot No.2 to each of the left and right front shafts of the **SST**.
- (2) Remove the windshield wiper arm and blade. (See WINDSHIELD WIPER ARM AND BLADE REMOVAL/INSTALLATION.)
- (3) Remove the cowl grille. (See COWL GRILLE REMOVAL/INSTALLATION.)
- (4) Remove the cowl panel. (See COWL PANEL REMOVAL/INSTALLATION.)
- (5) Protect the positions shown in the area using tape.

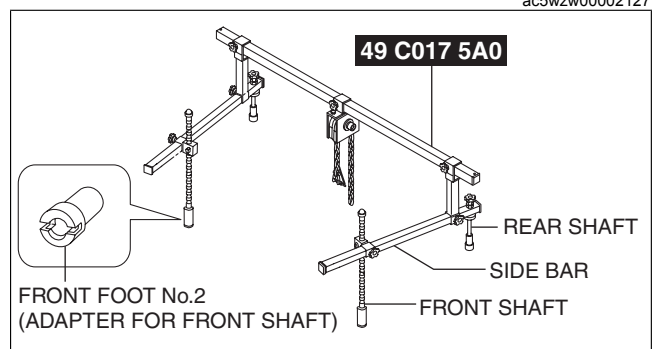


ac5wzw00002128

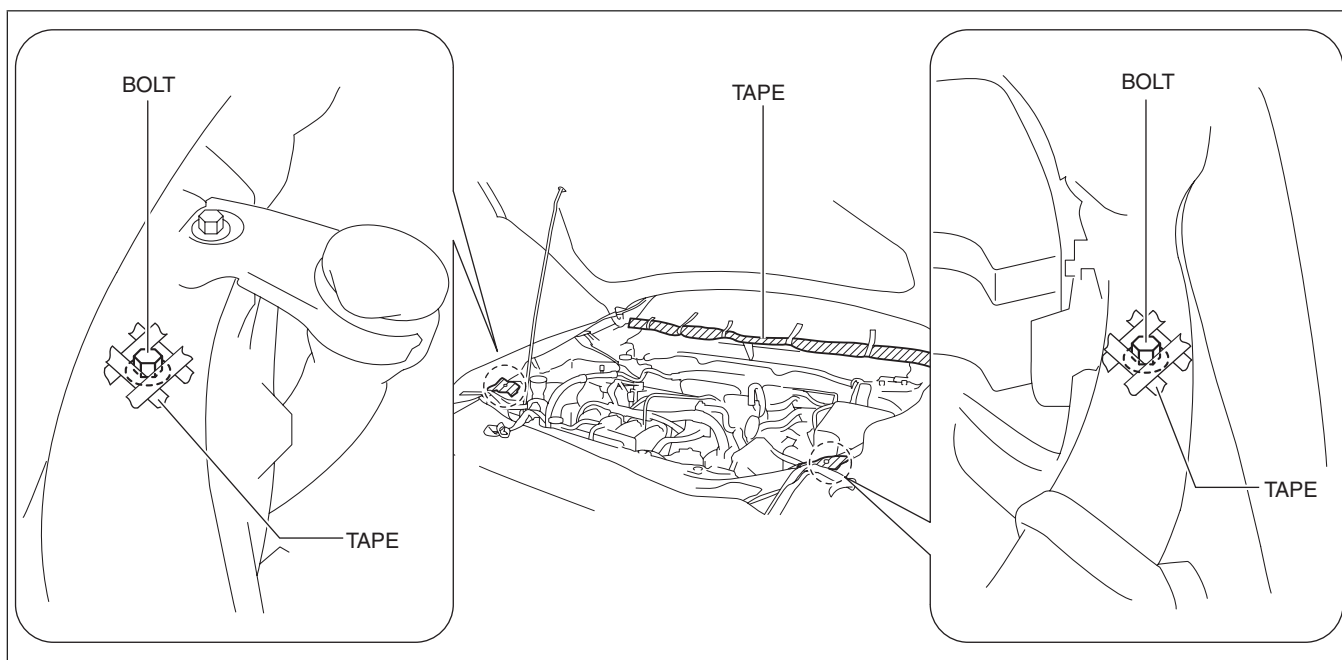

ac5wzw00002884

- (6) To enable installation of the **SST**, disconnect the clip shown in the figure and set the wiring harness aside.

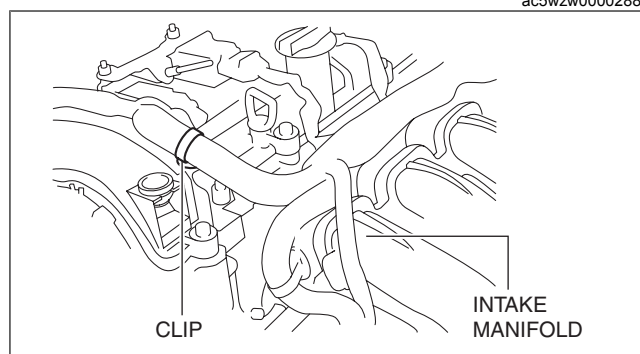


ac5wzw00006179

- (7) Install the **SST** using **part number 99794 1025** or an **M10—1.25**, length **25 mm {0.98 in}** bolt as shown in the figure.

**Engine front side**

**Tightening torque**

**38—51 N·m {3.9—5.2 kgf·m, 29—37 ft·lbf}**

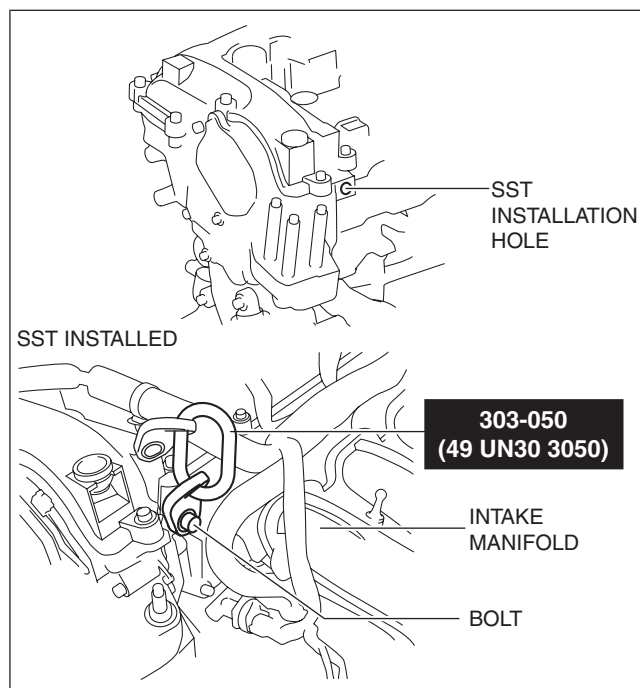


ac5wzw00006128

## Engine rear side


### Tightening torque

38—51 N·m {3.9—5.2 kgf·m, 29—37 ft·lbf}

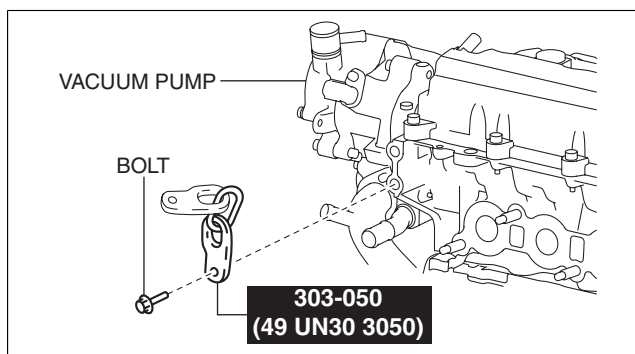


ac5wzw00006180

- (8) As shown in the figure, set the rear shafts of the **SST** to the left and right shock absorber nuts.

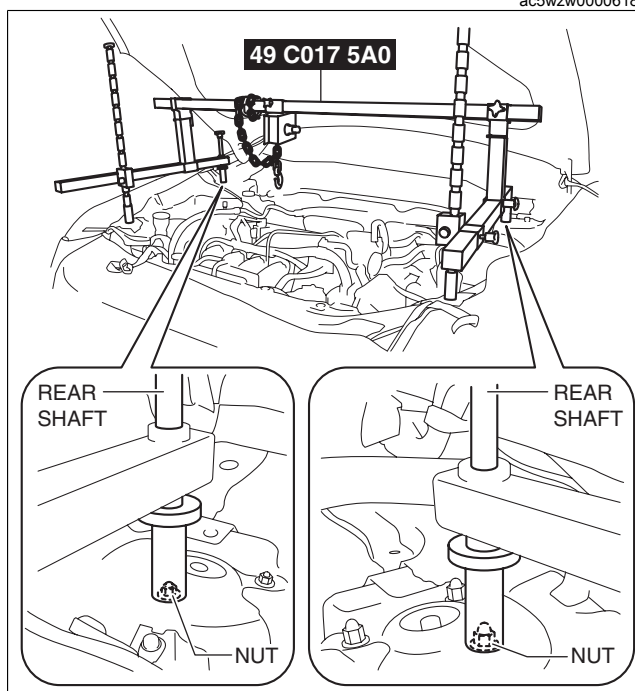


ac5uuw00000230

- (9) As shown in the figure, set the front shafts of the **SST** to the left and right bolts.

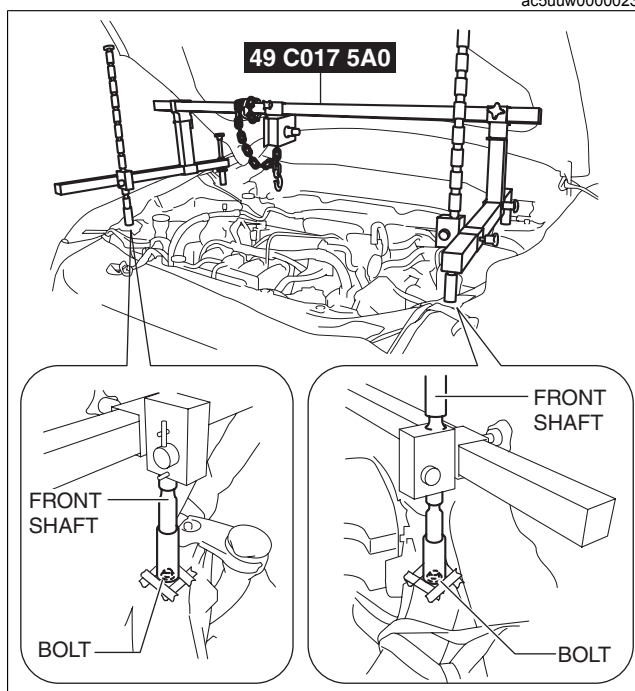


ac5wzw00002885

- (10) When assembling the **SST** (49 L017 5A0), disconnect the fuel hose from the clip shown in the figure to prevent interference between the fuel hose and **SST**.

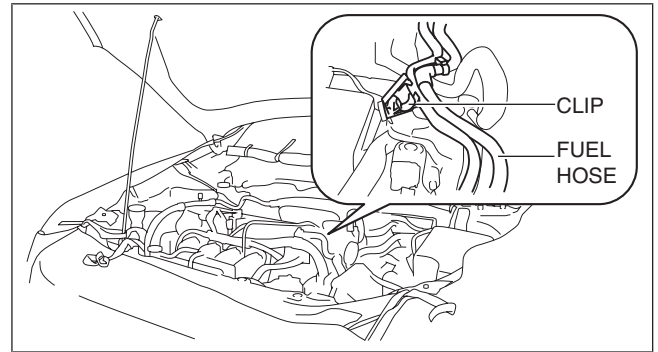


ac5uuw00000232

- (11) Install the **SST** (49 L017 5A0) to the **SST** (49 C017 5A0) as shown in the figure.

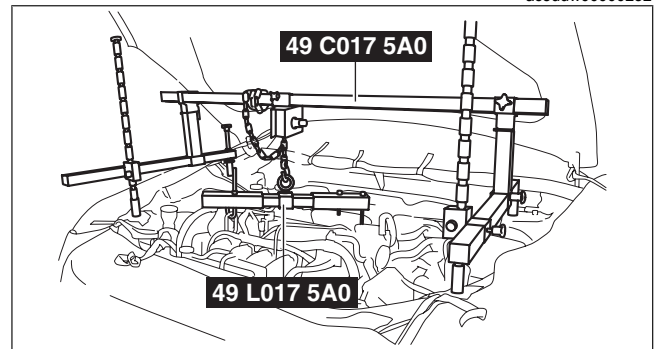

ac5uuw00000234

- (12) Install the **SST** (49 L017 5A0) to the **SST** (49 UN30 3050) with the hook of the **SST** (49 L017 5A0) facing outward.
- (13) Adjust the height of the left and right side bars so that they are leveled, then tighten each part of the **SST**.
- (14) Apply tension to the chain to secure the engine.

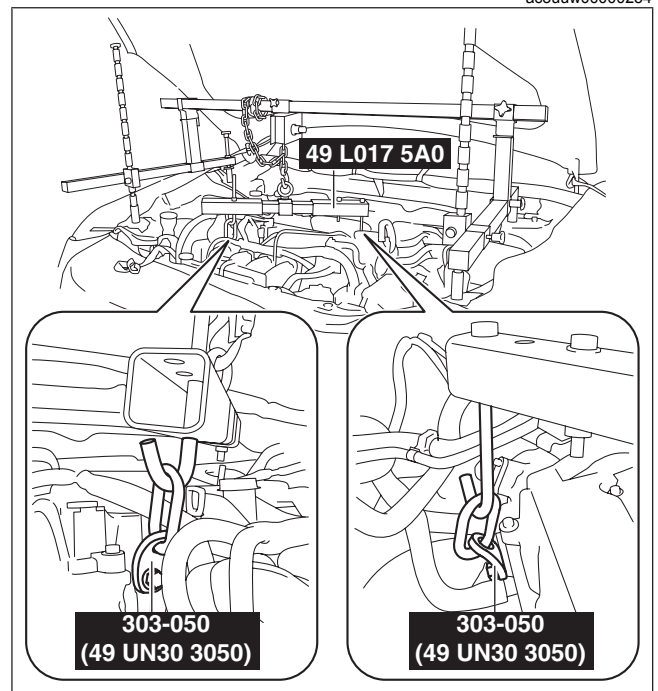

ac5uuw00000233

36. Remove in the order shown in the figure.


#### Warning

- Improperly jacking a transaxle is dangerous. It can slip off the jack and may cause serious injury.

#### Caution

- To prevent the torque converter and transaxle from separating, remove the transaxle without tilting it toward the torque converter.



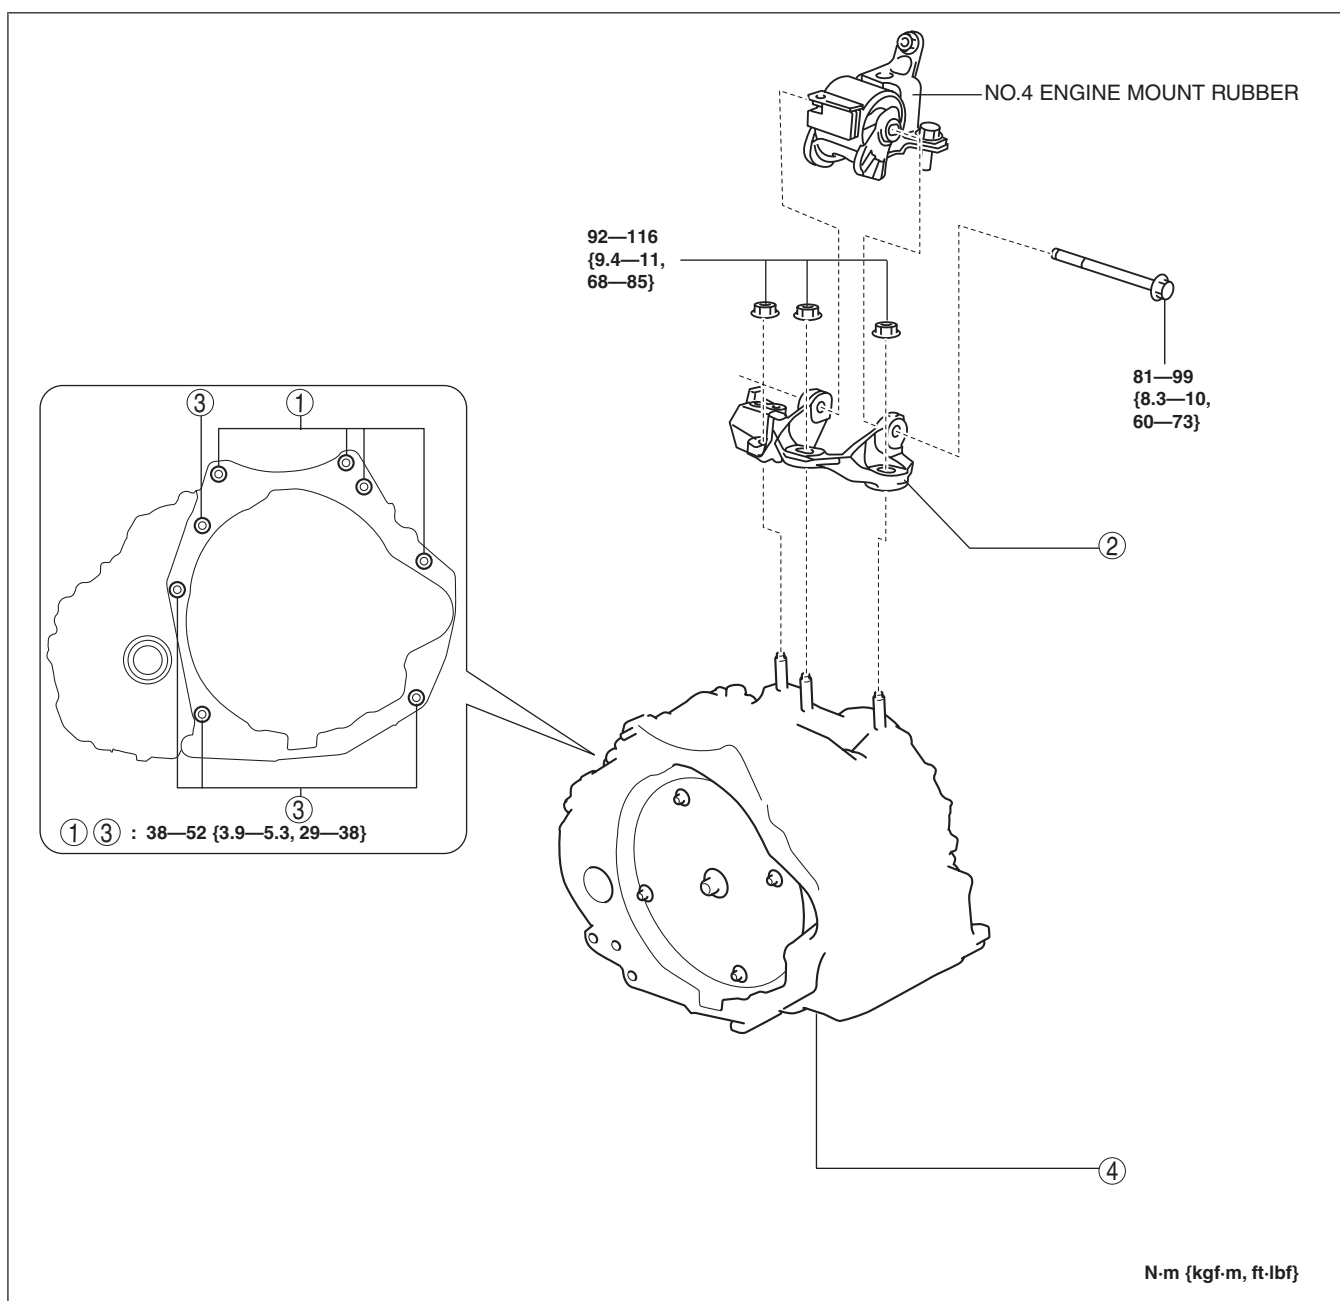

ac5wzw00006257

1	Transaxle mounting bolts (upper side)
2	No.4 engine mount bracket (See No.4 engine mount bracket removal note.)
3	Transaxle mounting bolts (lower side) (See Transaxle mounting bolt removal note.)
4	Transaxle (See No.4 engine mount bracket removal note.) (See Transaxle mounting bolt removal note.)

## No.4 engine mount bracket removal note

### Caution

- A slot has been adopted for the No.4 engine mount bracket installation hole. If the No.4 engine mount bracket is deviated from the original position when installing the No.4 engine mount, engine noise or vibration could increase. When removing the No.4 engine mount, place alignment marks on the No.4 engine mount bracket so that they can be assembled to the same positions as before removal.




1. Place alignment marks on the locations shown in the figure so that they can be assembled to the same positions as before removal.

**Note**

- Paint so that the outline of the nut is framed on the bracket side.

2. Remove the No.4 engine mount bracket.

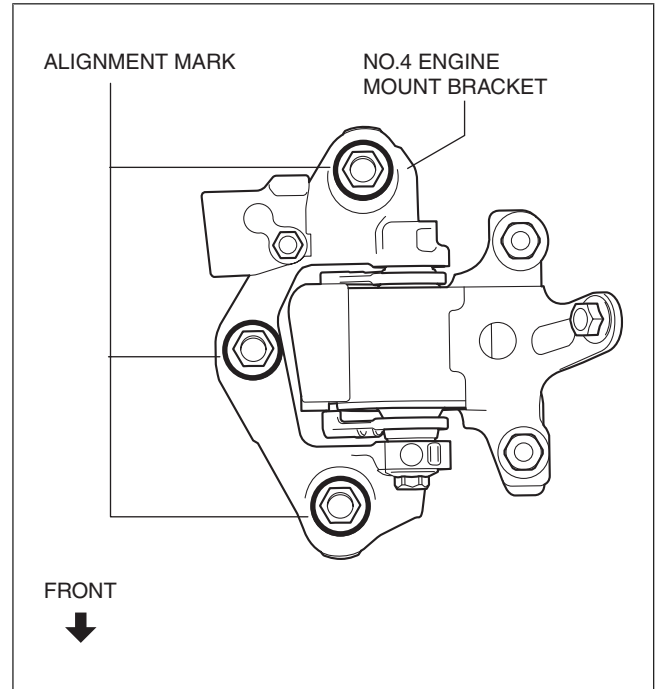


ac5wzw00004604

### Transaxle mounting bolt removal note

**Warning**


- Remove the transaxle carefully, holding it steady. If the transaxle falls it could be damaged or cause injury.

1. Adjust the **SST** and lean the engine toward the transaxle.

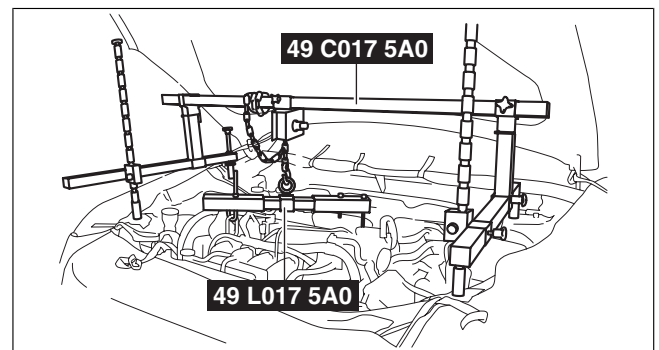

ac5uuw00000234

2. Support the transaxle on a jack.
3. Remove the transaxle mounting bolts (lower side).
4. Remove the transaxle.

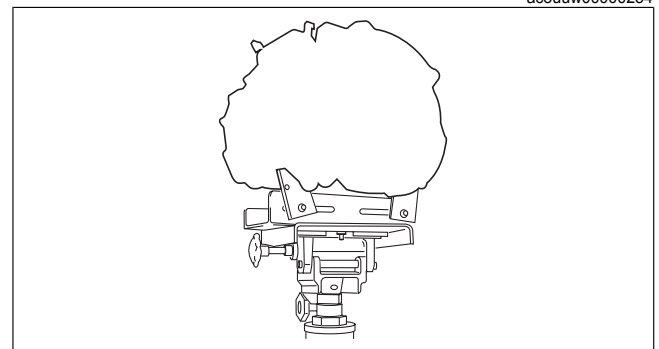


am3uuw00002584

### Installation

**Caution**

- Verify that the torque converter stud bolts are inserted into the drive plate bolt holes, and install the transaxle installation bolts. Otherwise, the drive plate could be damaged.

1. Verify that the torque converter stud bolts are inserted into the drive plate bolt holes from the starter installation hole.

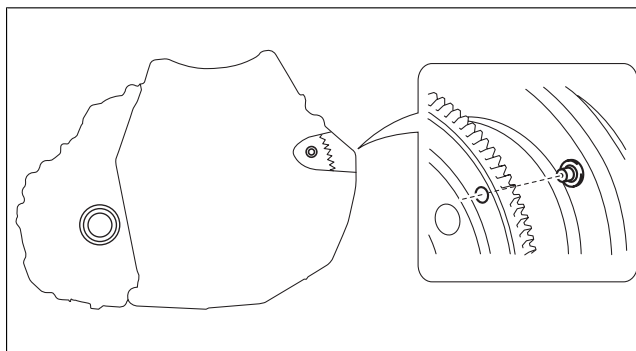


am3uuw00008315

2. Install the transaxle mounting bolts.

**Tightening torque**

**38—52 N·m {3.9—5.3 kgf·m, 29—38 ft·lbf}**

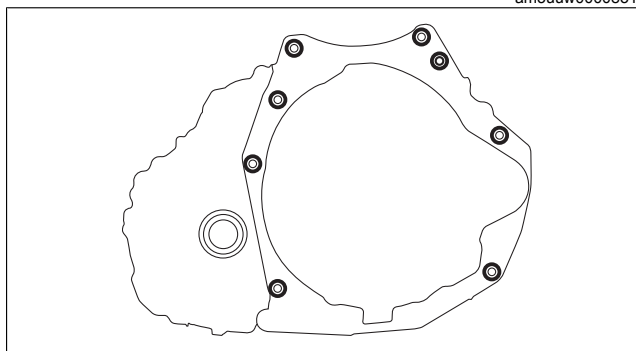

am3uuw00009181


3. Tighten the stud bolts for the transaxle.

**Note**

- If the No.4 engine mount bracket nut is loosened, tighten the stud bolts for the transaxle because they may be loosened.


**Tightening torque**

**15—25 N·m {1.6—2.5 kgf·m, 12—18 ft·lbf}**

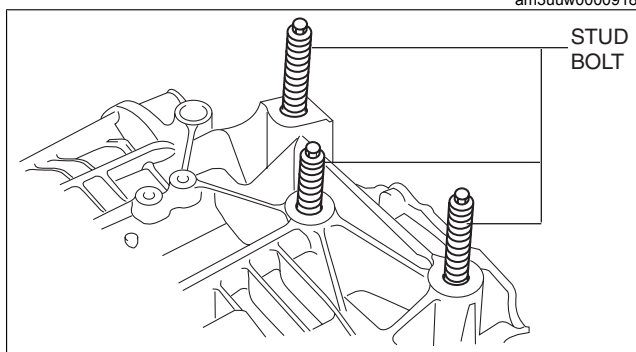


ac5wzw00002130

4. Install the No.4 engine mount bracket to No.4 engine mount rubber, and temporarily tighten the installation bolt.

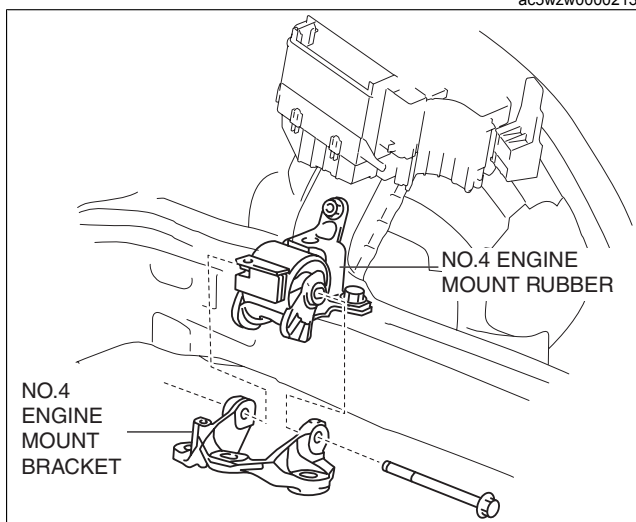


ac5uuw00000237

5. Pull up the transaxle using the **SSTs**, pass the transaxle stud bolts through the No.4 engine mount bracket, and temporarily tighten the No.4 engine mount installation nuts.

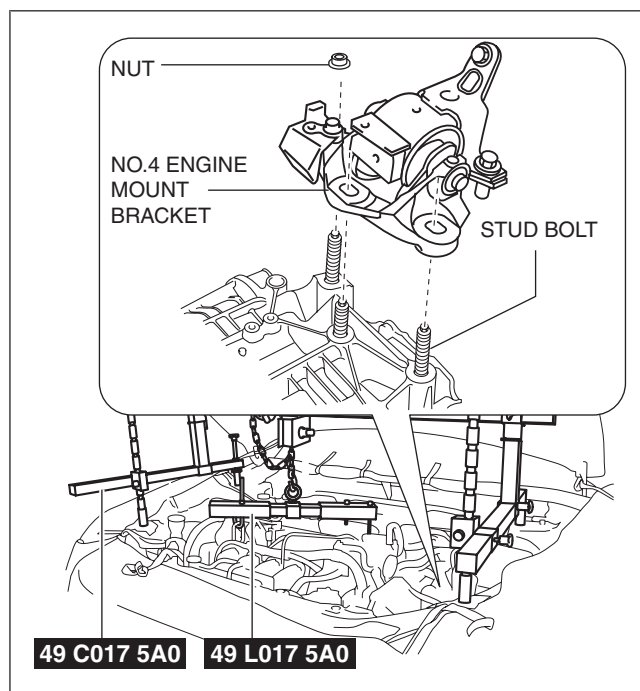


6. Install the No.1 engine mount bracket component and the bracket plate No.1 to the transaxle, and temporarily tighten the installation bolts.

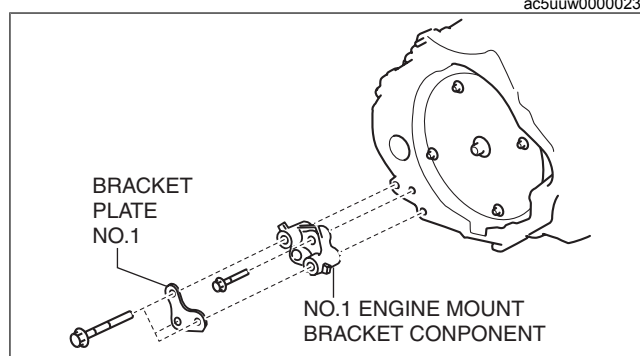

7. Install the bracket to the transaxle and the exhaust manifold and tighten the bolts in the order shown in the figure.  
**Type A**

#### Tightening procedure


1. Tighten the bolt A.  
19—25 N·m {2.0—2.5 kgf·m, 15—18 ft·lbf}
2. Tighten the bolt B.  
5—10 N·m {51—101 kgf·cm, 45—88 in·lbf}
3. Loosen the bolt B 90°—180°
4. Tighten the bolt C.  
38—51 N·m {3.9—5.2 kgf·m, 29—37 ft·lbf}

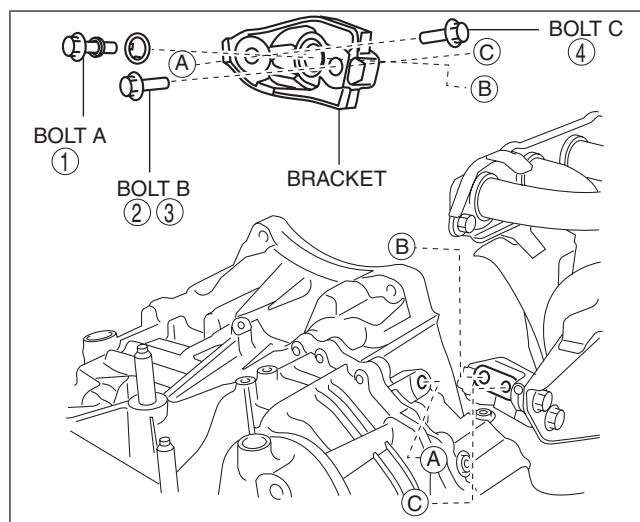


## Type B

### Tightening procedure


1. Tighten the bolt A.  
38—51 N·m {3.9—5.2 kgf·m, 29—37 ft·lbf}
  2. Tighten the bolt B.  
8—10 N·m {82—101 kgf·cm, 71—88 in·lbf}
  3. Tighten the bolt C.  
5—10 N·m {51—101 kgf·cm, 45—88 in·lbf}
  4. Loosen the bolt C 90°—180°
8. Install the front crossmember component and No.1 engine mount rubber as a single unit. (See FRONT CROSSMEMBER REMOVAL/INSTALLATION.)
9. Temporarily tighten the No.1 engine mount rubber installation bolts.
10. Align the alignment marks on the No.4 engine mount bracket and nuts, and temporarily tighten the nuts shown in the figure.

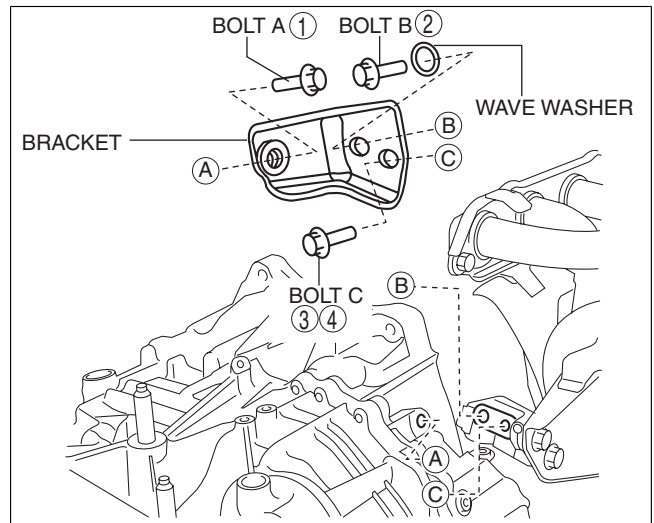

ac5uuw00002997

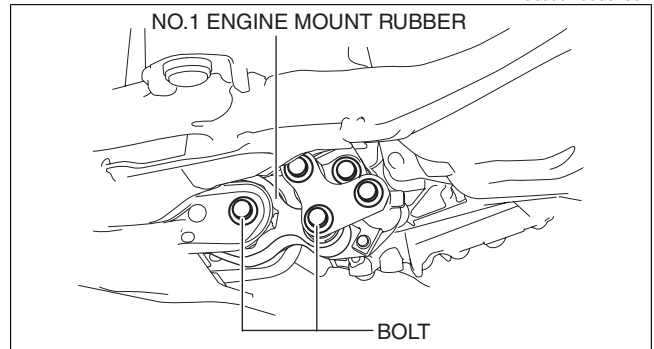


ac5wzw00002132

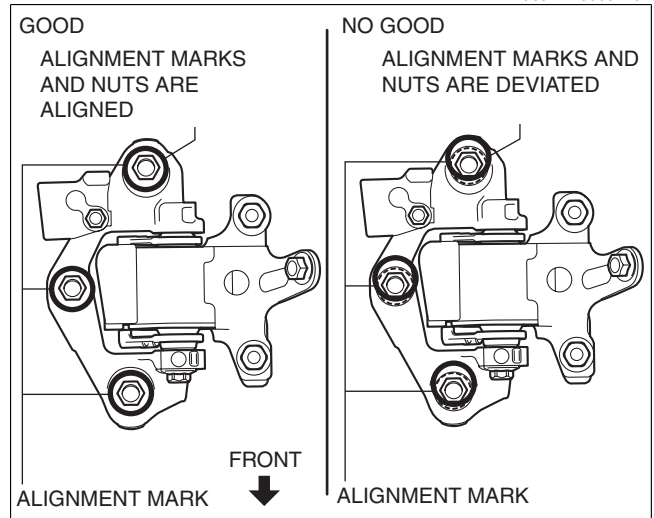

ac5wzw00006129

11. Tighten the No.4 engine mount bracket installation nuts and bolt in the order shown in the figure.

No.	Tightening torque
1, 2, 3	92—116 N·m {9.4—11 kgf·m, 69—85 ft·lbf}
4	81—99 N·m {8.3—10 kgf·m, 60—73 ft·lbf}

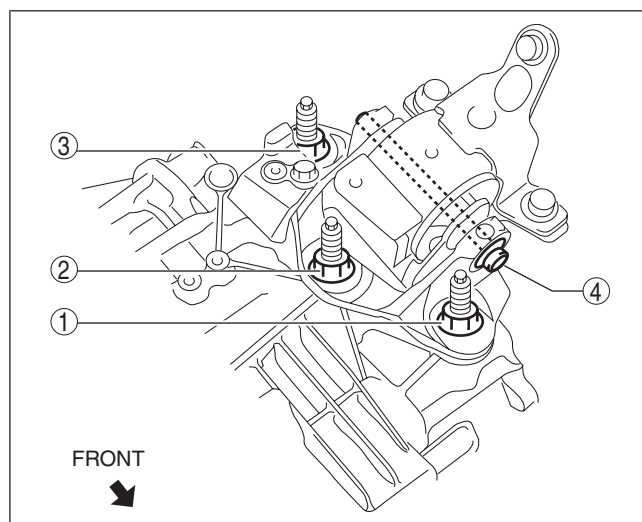


ac5uuw00000243

12. Tighten the No.1 engine mount bracket and bracket plate installation bolts in the order shown in the figure.

**Tightening torque**

**84—98 N·m {8.6—9.9 kgf·m, 62—72 ft·lbf}**


13. Remove the **SST (49 C017 5A0)**.

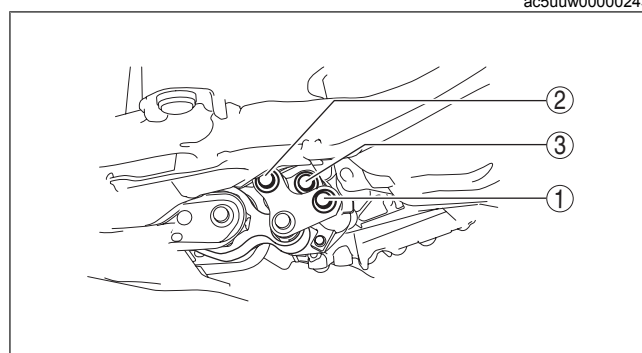

ac5wzw00002133

14. Tighten the No.1 engine mount rubber installation bolts in the order shown in the figure.

No.	Tightening torque
1	140—163 N·m {15—16 kgf·m, 104—120 ft·lbf}
2	130—164 N·m {14—16 kgf·m, 96—120 ft·lbf}

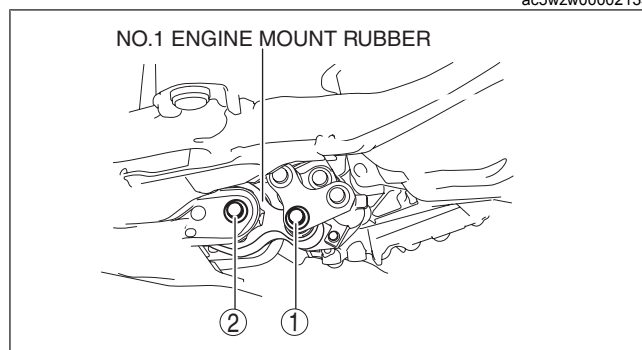


ac5wzw00002134

15. Fix the crankshaft pulley to lock the torque converter against rotation.

**Caution**

- After temporarily tightening the torque converter installation nut uniformly, tighten it to the specified torque.

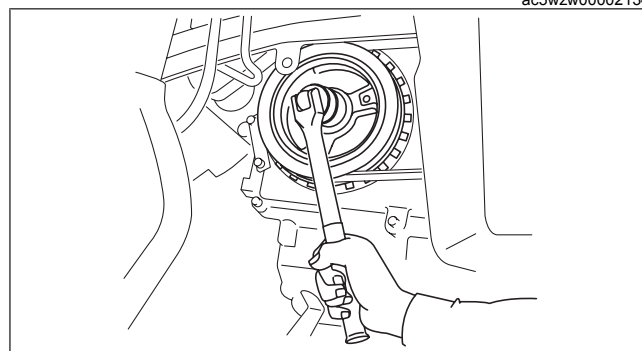


am3uuw00002582

16. Tighten the torque converter installation nut.


**Tightening torque**

**41—54 N·m {4.2—5.5 kgf·m, 31—39 ft·lbf}**

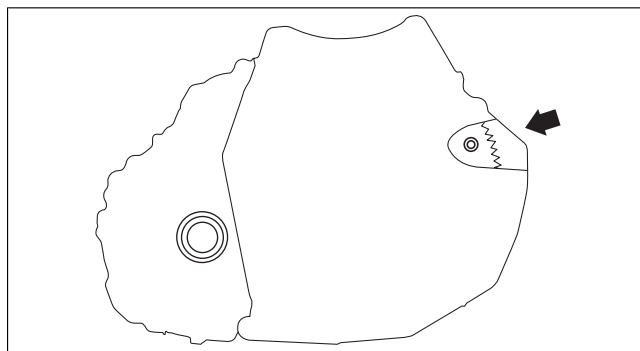


ac5uuw00000225

17. Install the blind cover.
18. Install the starter. (See STARTER REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
19. Install the front drive shaft (RH) to the transaxle. (See FRONT DRIVE SHAFT REMOVAL/INSTALLATION.)
20. Install the front drive shaft (LH) to the transaxle. (See FRONT DRIVE SHAFT REMOVAL/INSTALLATION.)
21. Install the front stabilizer control links to the front stabilizer. (See FRONT STABILIZER REMOVAL/INSTALLATION.)
22. Install the front lower arms to the steering knuckles. (See FRONT LOWER ARM REMOVAL/INSTALLATION.)
23. Install the tie-rod end ball joints to the steering knuckles. (See STEERING GEAR AND LINKAGE REMOVAL/INSTALLATION.)
24. Install the clips securing the brake hose to the front shock absorbers. (See BRAKE HOSE (FRONT) REMOVAL/INSTALLATION.)
25. Install the front ABS wheel-speed sensors to the steering knuckles. (See FRONT ABS WHEEL-SPEED SENSOR REMOVAL/INSTALLATION.)
26. Connect the water hose to the oil cooler. (Automatic Transaxle Replacement) (See OIL COOLER REMOVAL/INSTALLATION [FW6A-EL, FW6AX-EL].)
27. Install the oil cooler to the transaxle with the hose connected. (Except Automatic Transaxle Replacement) (See OIL COOLER REMOVAL/INSTALLATION [FW6A-EL, FW6AX-EL].)
28. Install the front under cover No.1. (See FRONT UNDER COVER No.1 REMOVAL/INSTALLATION.)
29. Install the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/INSTALLATION.)
30. Install the front tires. (See GENERAL PROCEDURES (SUSPENSION).)
31. Install the intermediate shaft to the steering gear and linkage. (See STEERING WHEEL AND COLUMN REMOVAL/INSTALLATION.)
32. Install the joint cover. (See STEERING WHEEL AND COLUMN REMOVAL/INSTALLATION.)
33. Connect the breather hose to the transaxle.
34. Install the selector cable bracket.
35. Connect the selector cable to the transaxle.

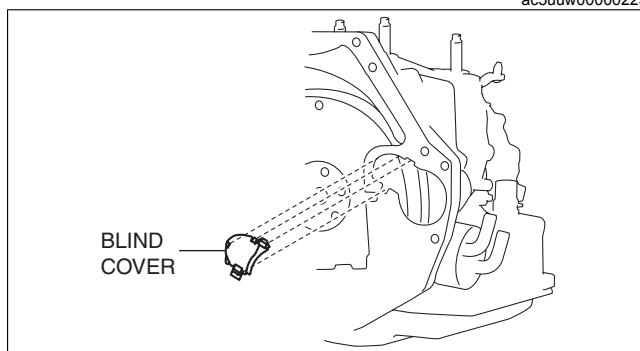


am3uuw00008313

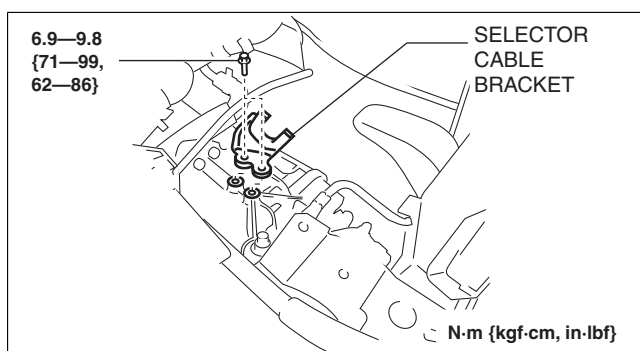


ac5wzw00002135

36. Install the ground cable.

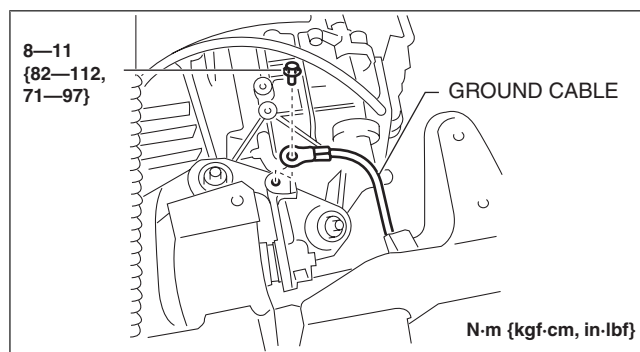

ac5uuw00000247

37. Install the bracket to the transaxle.

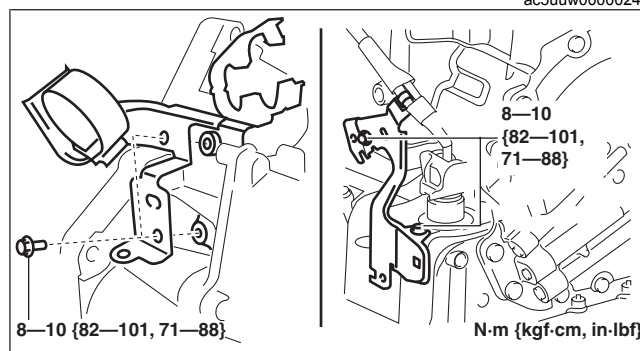


ac5wzw000002136

38. Connect the control valve body connector.

**Caution**


- Make sure that your hand does not touch the terminal as the connector terminal could be damaged.
- Verify that there is no fluid or foreign matter adhering to the connector before connecting the connector.
- Insert the connector straight as the connector terminal could be damaged.
- Rotate the connector lever until a click is heard.

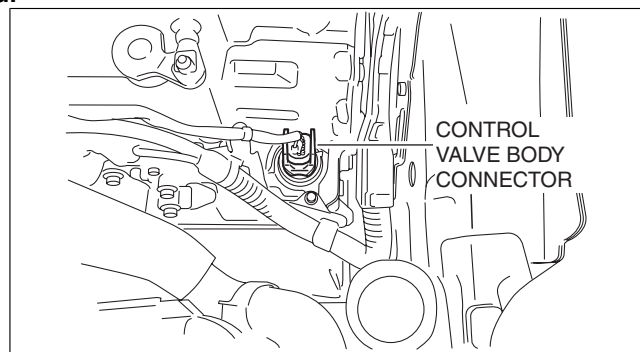

ac5uuw00000223

39. Connect the electric AT oil pump connector and electric AT oil pump harness from the transaxle. (With electric AT oil pump)

40. Install the splash shield. (See SPLASH SHIELD REMOVAL/INSTALLATION.)

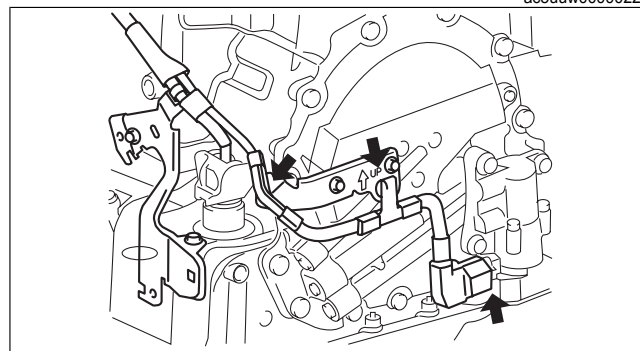

ac5wzw00000914



41. Connect the wiring harness from the transaxle.
42. Install the battery tray and PCM component. (See BATTERY REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
43. Install the air cleaner and air hose as a single unit. (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
44. Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
45. Add the ATF. (See AUTOMATIC TRANSAXLE FLUID (ATF) REPLACEMENT [FW6A-EL, FW6AX-EL].)
46. Perform the "Initial Learning" (automatic transaxle replacement). (See INITIAL LEARNING [FW6A-EL, FW6AX-EL].)
47. Perform the "Mechanical System Test". (See MECHANICAL SYSTEM TEST [FW6A-EL, FW6AX-EL].)

