


END COVER COMPONENT ASSEMBLY

id051700664200

Structural View

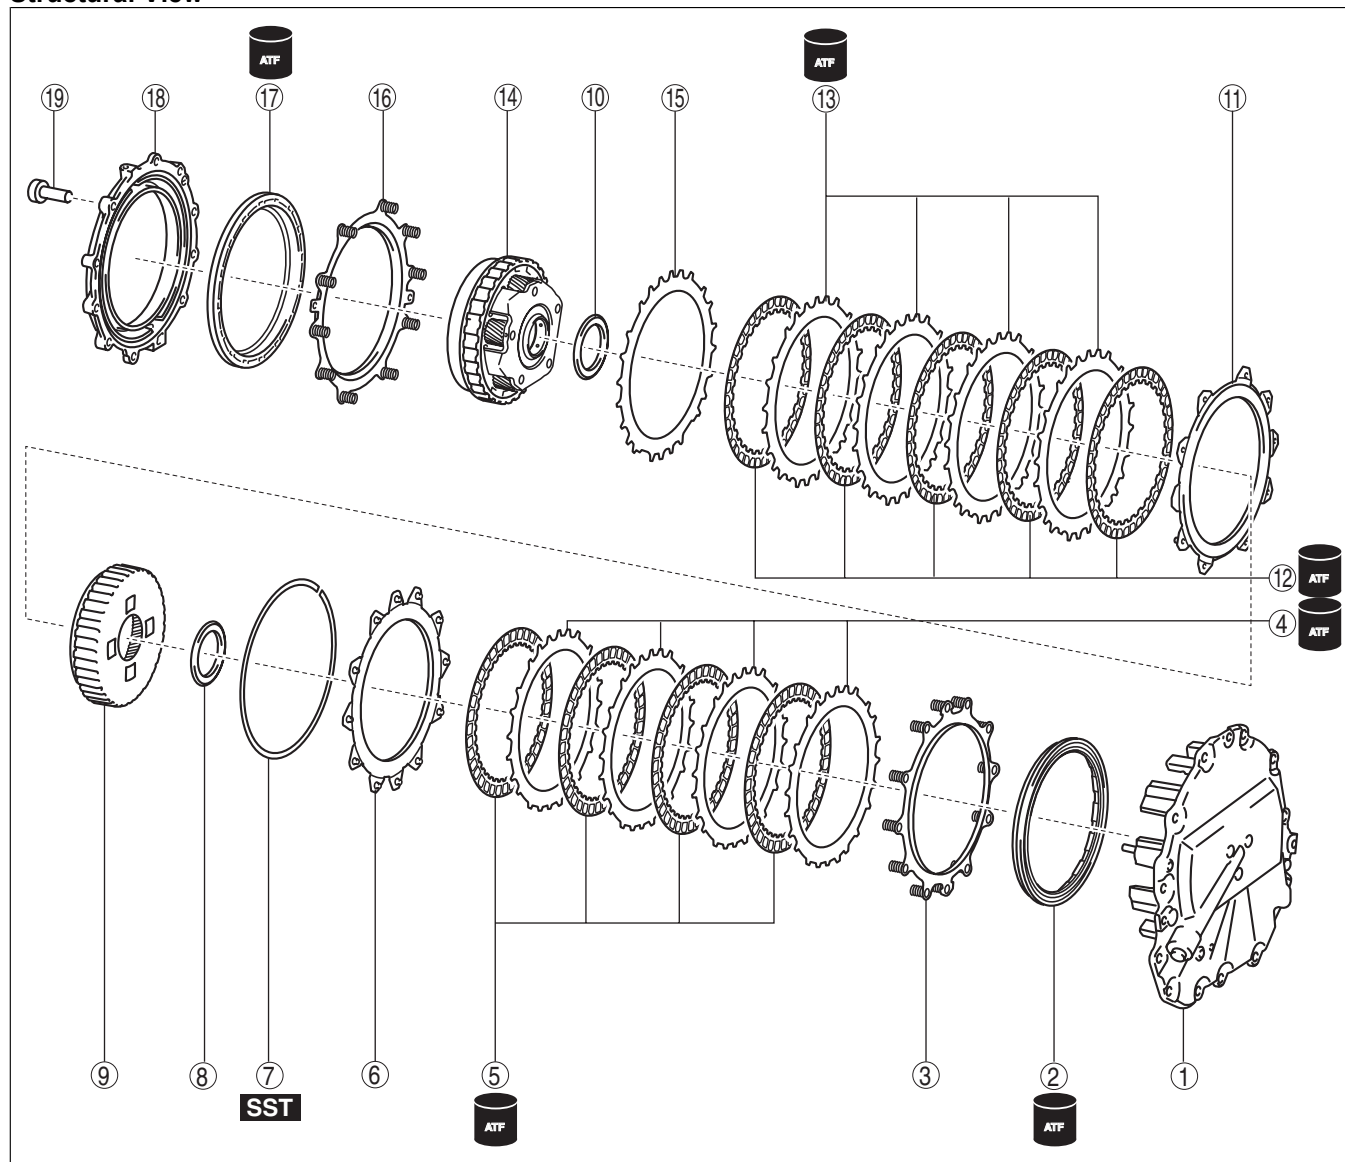

bgw3ja00000652


1	End cover
2	R-3-5 brake piston
3	Springs and retainer component (inner diameter approx. 148.8 mm {5.858 in})
4	Driven plate (inner diameter approx. 141.8 mm {5.583 in})
5	Drive plate (outer diameter approx. 169.4 mm {6.669 in})
6	Retaining plate (inner diameter approx. 141.8 mm {5.583 in})
7	Snap ring (outer diameter approx. 186.2 mm {7.331 in}) (selection)
8	Thrust needle bearing (outer diameter approx. 63 mm {2.5 in})
9	Reduction internal gear
10	Thrust needle bearing (outer diameter approx. 63 mm {2.5 in})

11	Retaining plate (inner diameter approx. 148 mm {5.83 in})
12	Drive plate (outer diameter approx. 171.9 mm {6.768 in})
13	Driven plate (outer diameter approx. 148 mm {5.83 in}, thickness approx. 1.6 mm {0.063 in})
14	Reduction planetary gear
15	Retaining plate (inner diameter approx. 148 mm {5.83 in}) (selection)
16	Springs and retainer component (inner diameter approx. 150.6 mm {5.929 in})
17	2-6 brake piston
18	Brake housing
19	8 bolts (M6×1.0 bolt, length approx. 25 mm {0.98 in})

Assembly Procedure


- Assemble the R-3-5 brake piston using the following procedure:
 - Apply ATF (ATF FZ) to the R-3-5 brake piston lip.

(2) Assemble the R-3-5 brake piston.

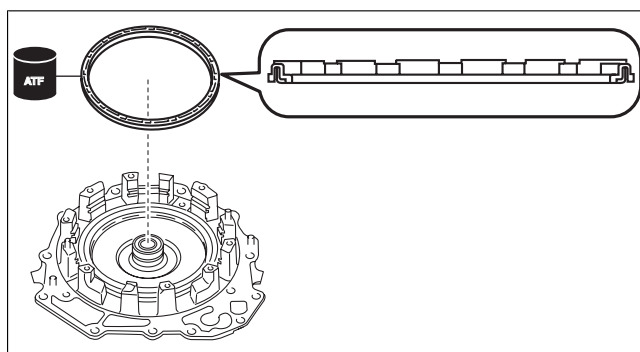

azzjiw00001012

2. Measure the R-3-5 brake clearance and select the appropriate snap ring. (See R-3-5 BRAKE CLEARANCE MEASUREMENT/ADJUSTMENT.)

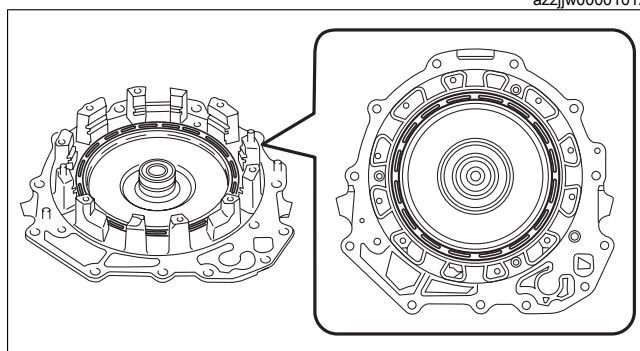


azzjiw00001013


3. Assemble the springs and retainer component.

Note

- Springs and retainer component size: Inner diameter approx. 148.8 mm {5.858 in}

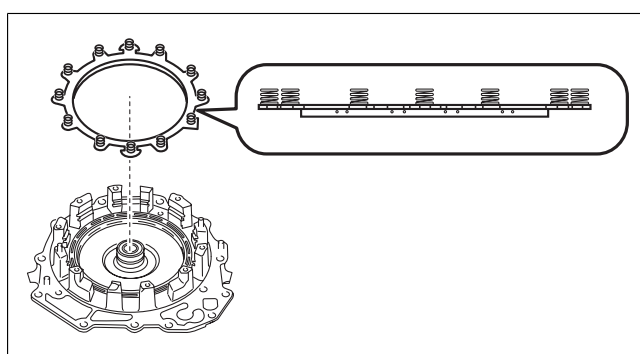

azzjiw00001014

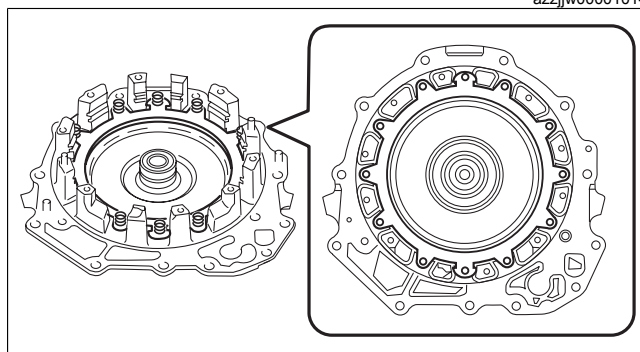

azzjiw00001015

4. Assemble the drive plates and driven plates using the following procedure:

Note

- Drive plate size: Outer diameter approx. 169.4 mm {6.669 in}
- Driven plate size: Inner diameter approx. 141.8 mm {5.583 in}

- (1) Apply ATF (ATF FZ) to the drive plates and driven plates.

Caution

- If the drive plate is replaced with a new one, immerse it in ATF (ATF FZ) for 2 hours or more to permeate the facing with ATF.


(2) Assemble the drive plates and driven plates.

Assembly order


Driven plate—drive plate—driven plate—drive plate—driven plate—drive plate—driven plate—drive plate

A : Drive plate

B : Driven plate

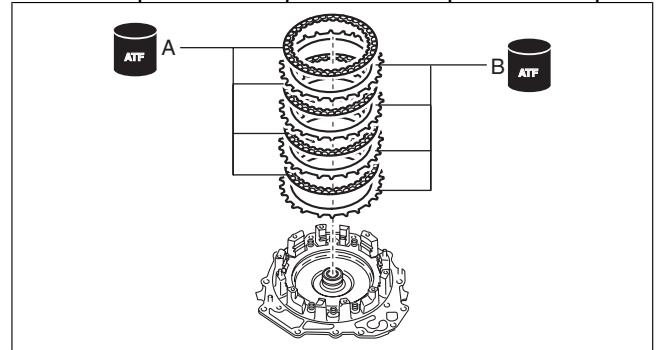

bgw3ja00000498

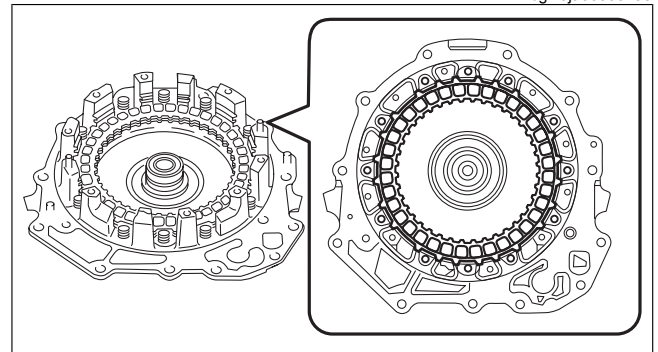


azzjjw00001017


5. Assemble the retaining plate.

Note

- Retaining plate size: Inner diameter approx. 141.8 mm {5.583 in}

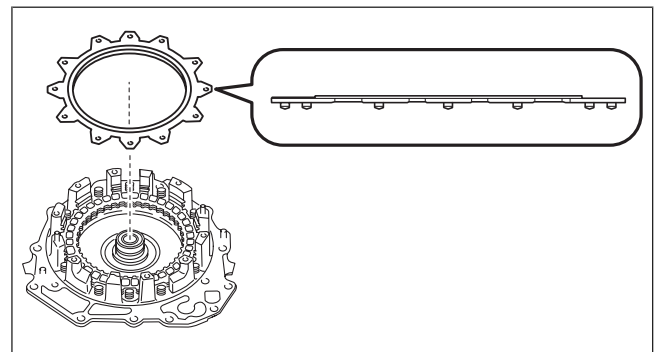

azzjjw00001018

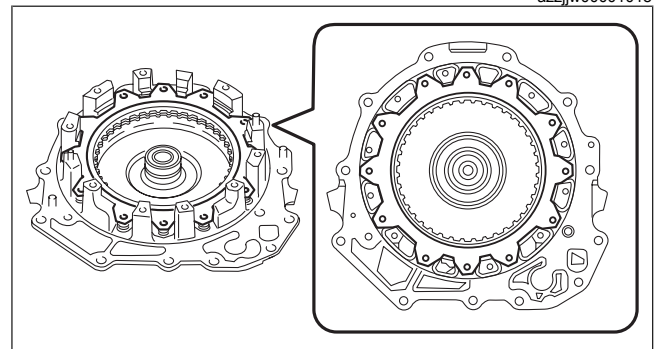

azzjjw00001019


6. Assemble the snap ring using the following procedure:

Note


- Snap ring size: Outer diameter approx. 186.2 mm {7.331 in}

(1) Set the snap ring selected in Step 2 on top of the end cover.

A : Snap ring (selection)

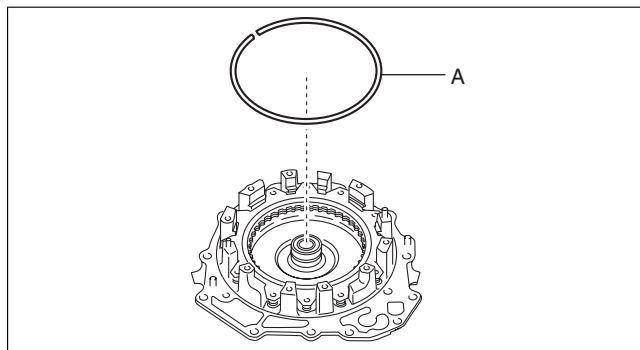


azzijw00001020

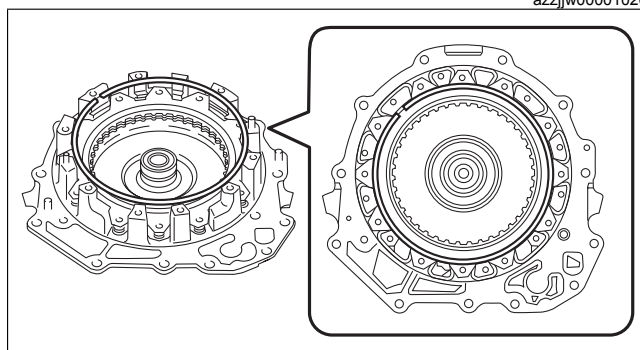


azzijw00001021

(2) Install the SST.

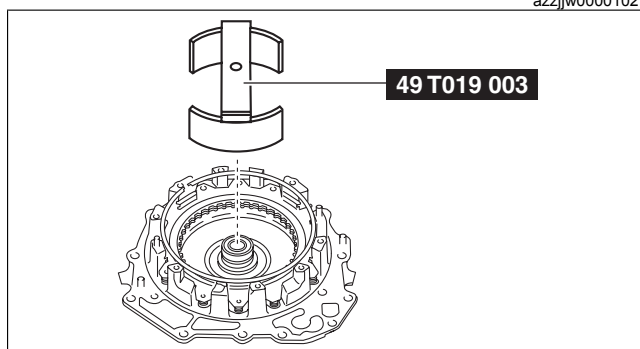

azzijw00001022

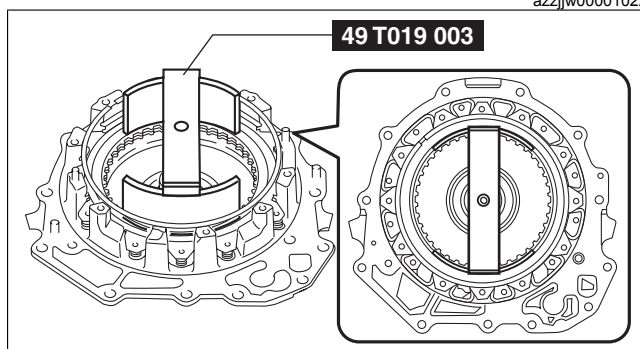


azzijw00001023

(3) Set the SST and part to the press as shown in the figure.

Caution

- Using the rubber plates, adjust the alignment surface of the end cover with the transaxle case so that it is level. Otherwise the parts could tip over during the procedure and get damaged.

A : Press
B : Rubber plate

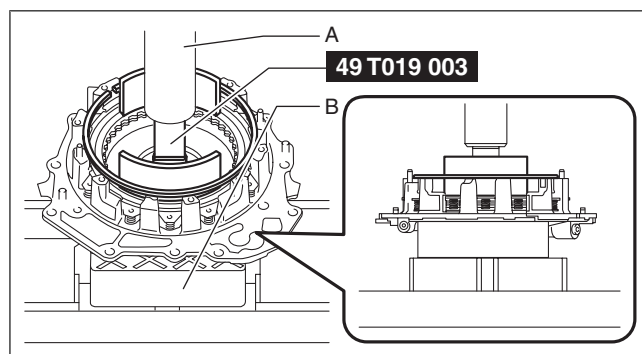


azzjjw00001024

(4) Press down the SST using the press until the snap ring groove of the end cover comes out.

Caution

- If the SST is pressed excessively by the press, surrounding parts could be damaged. Stop pressing down the SST using the press when the snap ring groove of the end cover comes out.

A : Snap ring groove

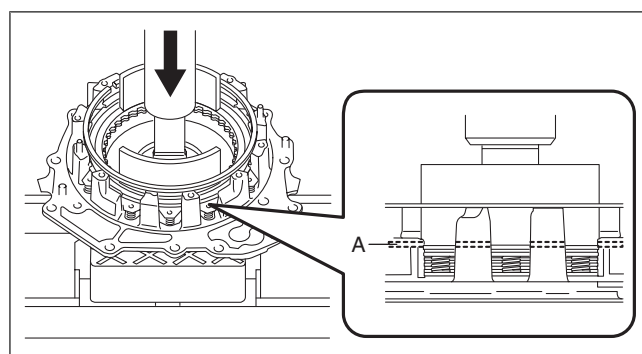


azzjjw00001025

(5) Assemble the snap ring to the position shown in the figure.

Caution


- Assemble the snap ring so that the end gap of the snap ring is in the area shown in the figure.
- After assembling the snap ring, verify that the snap ring is securely inserted into the bottom of the snap ring groove.

A : End gap of snap ring assembly area

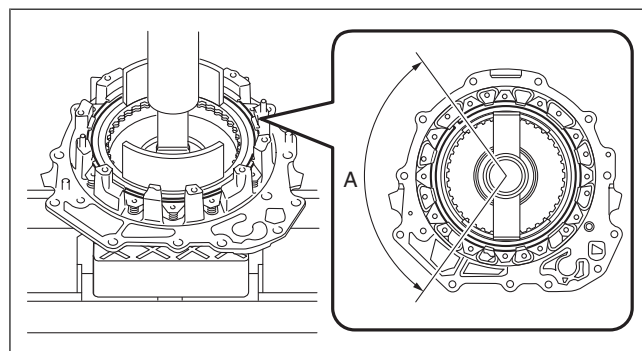


azzjjw00001026

(6) Take the SST and part off the press.

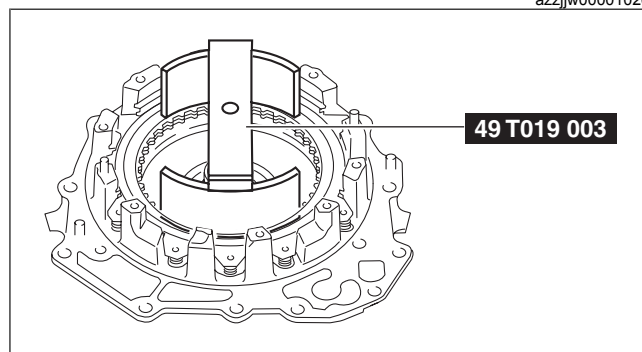

azzjjw00001027

(7) Remove the SST.

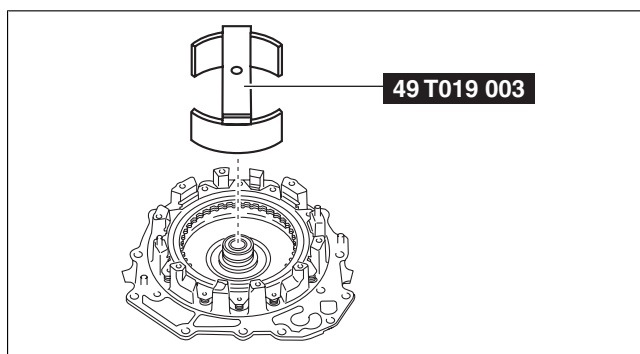

azzjiw00001028

7. Perform an operation verification of the R-3-5 brake using the following procedure:

(1) Blow compressed air into the oil passage shown in the figure and verify the operation condition of the R-3-5 brake.

Warning

- Always wear protective eye wear when using the air compressor. Otherwise, ATF or dirt particles blown off by the air compressor could get into the eyes.


Caution

- To prevent damage to parts, always use an air compressor which is adjusted to the indicated pressure.

Compressed air pressure

0.39—0.44 MPa {4.0—4.4 kgf/cm², 57—63 psi}

- If there is a malfunction, perform disassembly again, verify the cause and repair the applicable part. (See END COVER COMPONENT DISASSEMBLY.)

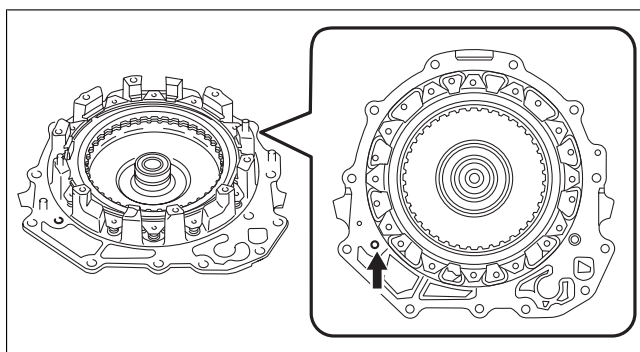


azzjiw00001029

8. Assemble the thrust needle bearing.

Note

- Thrust needle bearing size: Outer diameter approx. 63 mm {2.5 in}

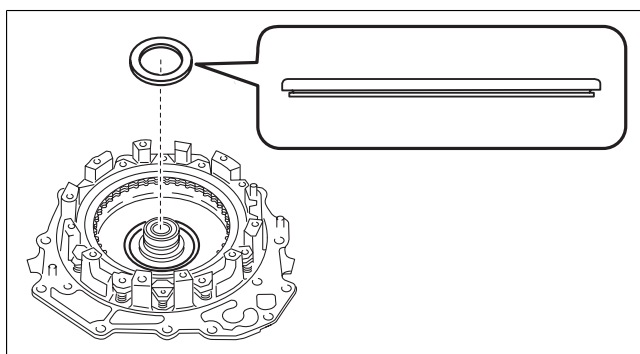


azzjiw00001030


9. Assemble the reduction internal gear.

Note

- While rotating the reduction internal gear, engage the splines of each of the R-3-5 brake drive plates one by one, and assemble.

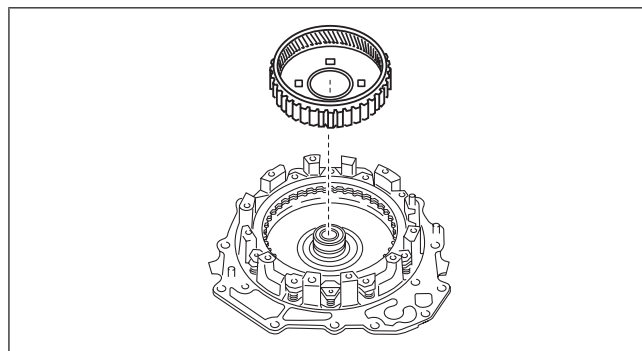

azzjjw00001031

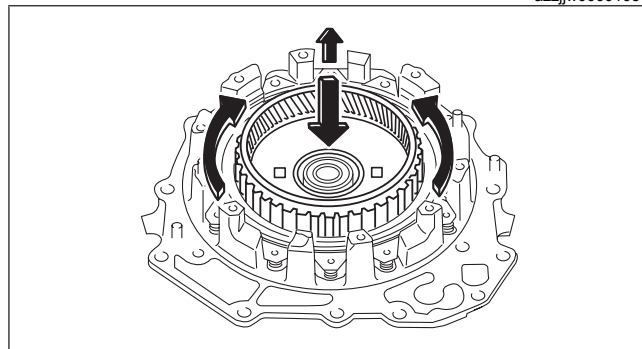

azzjjw00001032

10. To verify that the reduction internal gear is securely assembled, measure the distance shown in the figure.

Note

- Recommended measuring instrument: Depth gauge, straight edge ruler

A : End cover end (alignment surface with brake housing)

B : Reduction internal gear end

Specification


48.4—49.5 mm {1.91—1.94 in}

- If not within the specification, remove the reduction internal gear and reassemble.

Note

- Measurement method

- (1) Set two straight edge rulers along the alignment surfaces of the end cover with the brake housing as shown in the figure.

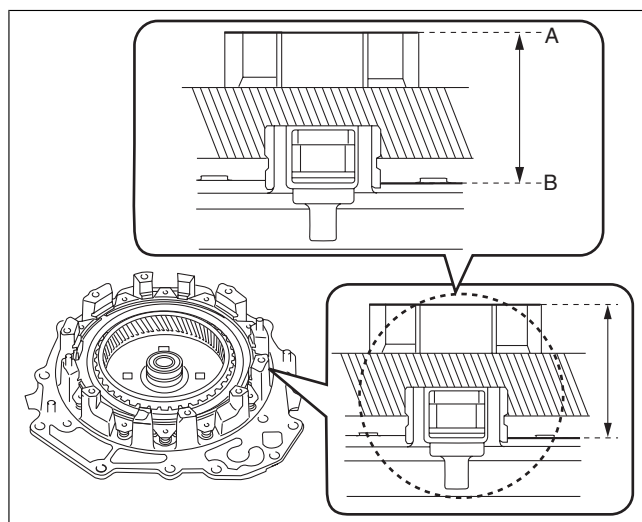


azzjjw00001549

- (2) Measure the positions (2 locations) shown in the figure using a depth gauge and calculate the average value.

A : Straight edge ruler

- (3) Subtract the thickness of the straight edge ruler from the average value.

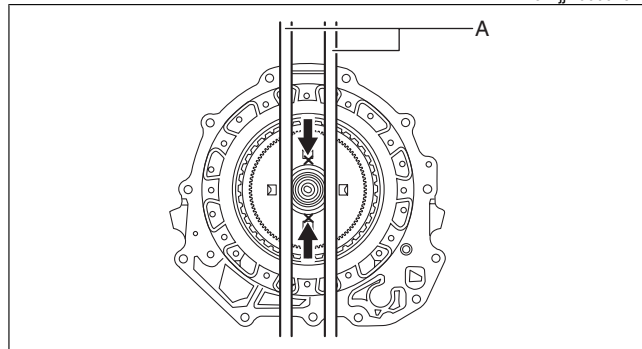


azzjjw00001034

11. Assemble the thrust needle bearing.

Note

- Thrust needle bearing size: Outer diameter approx. 63 mm {2.5 in}

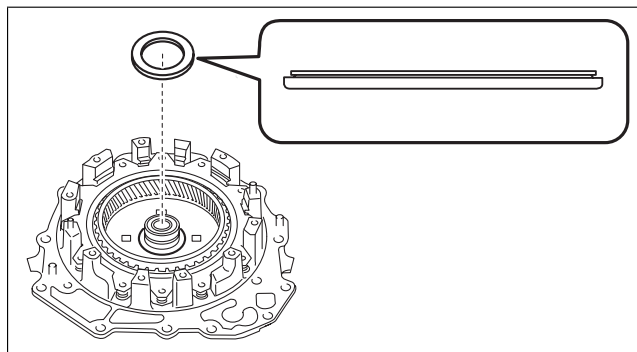


azzijw00001035


12. Assemble the retaining plate.

Note

- Retaining plate size: Inner diameter approx. 148 mm {5.83 in}

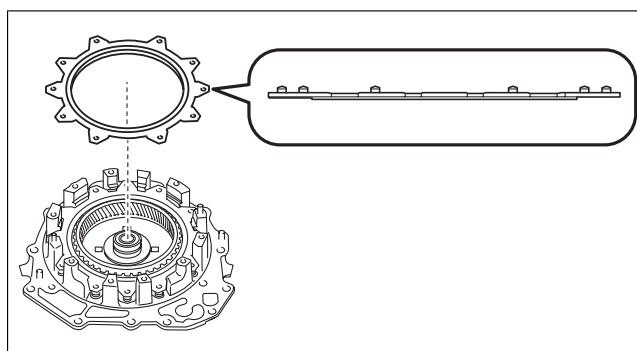

azzijw00001036

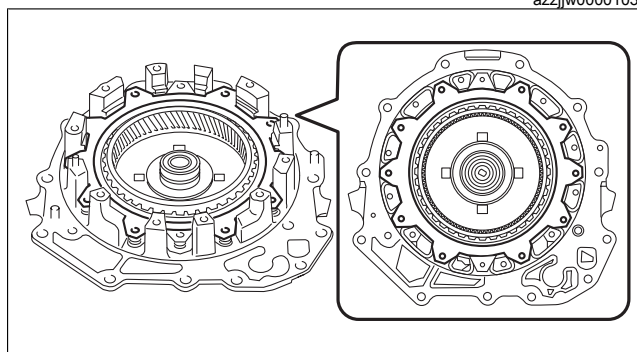

azzijw00001037

13. Assemble the drive plates and driven plates using the following procedure:

Caution

- The driven plate has a similar shape to the retaining plate used for the 2-6 brake clearance adjustment. Before assembling the driven plate, always verify the plate thickness and the shape.

Note

- Drive plate size: Outer diameter approx. 171.9 mm {6.768 in}
- Driven plate size: Inner diameter approx. 148 mm {5.83 in}, thickness approx. 1.6 mm {0.063 in}

(1) Apply ATF (ATF FZ) to the drive plates and driven plates.

Caution

- If the drive plate is replaced with a new one, immerse it in ATF (ATF FZ) for 2 hours or more to permeate the facing with ATF.


(2) Assemble the drive plates and driven plates.

Assembly order


Drive plate—driven plate—drive plate—driven plate—drive plate—driven plate—drive plate—driven plate
—drive plate

A : Drive plate

B : Driven plate

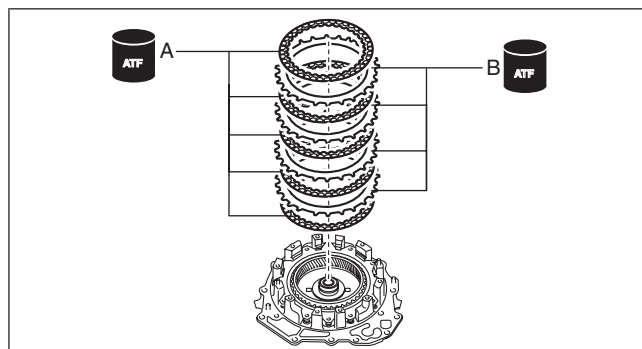

bgw3ja00000499

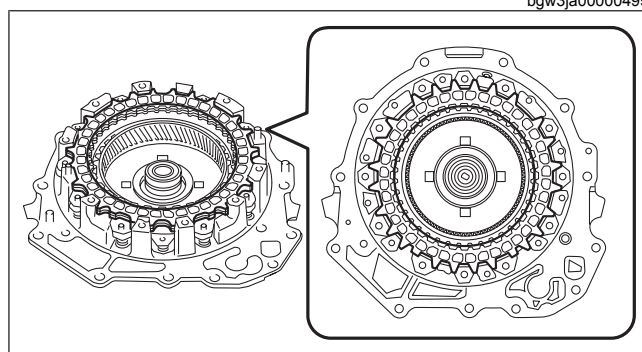

azzjw00001039

14. Assemble the reduction planetary gear.


Note

- If the reduction planetary gear assembly is difficult, assembly is easier if the work is performed using the following procedure:


(1) Remove the drive plates and driven plates.

A : Drive plate

B : Driven plate

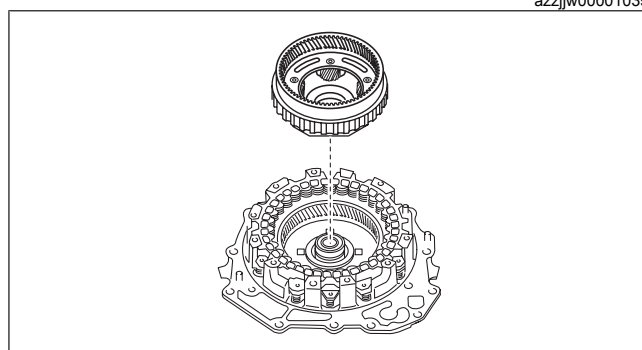


bgw3ja00000500

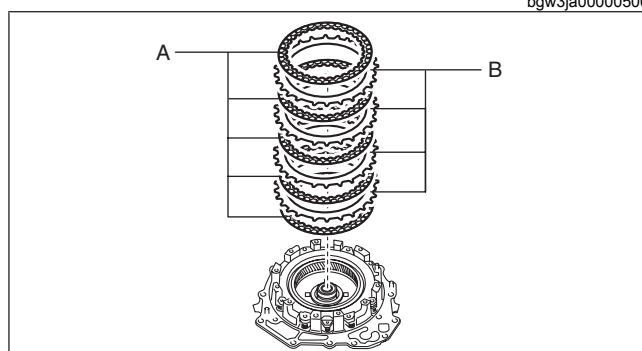

bgw3ja00000501

(2) Remove the retaining plate.

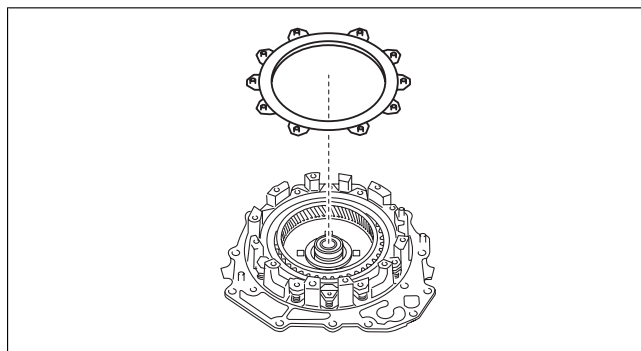

azzjiw00001042

(3) Assemble the drive plates and driven plates to the reduction planetary gear shown in the figure.

Caution

- The driven plate has a similar shape to the retaining plate used for the 2-6 brake clearance adjustment. Before assembling the driven plate, always verify the plate thickness and the shape.


Note

- Drive plate size: Outer diameter approx. 171.9 mm {6.768 in}
- Driven plate size: Inner diameter approx. 148 mm {5.83 in}, thickness approx. 1.6 mm {0.063 in}
- Align the spline positions of the driven plate while assembling.


Assembly order

Drive plate—driven plate—drive plate—driven plate—drive plate—driven plate—drive plate—driven plate—drive plate

A : Drive plate
B : Driven plate

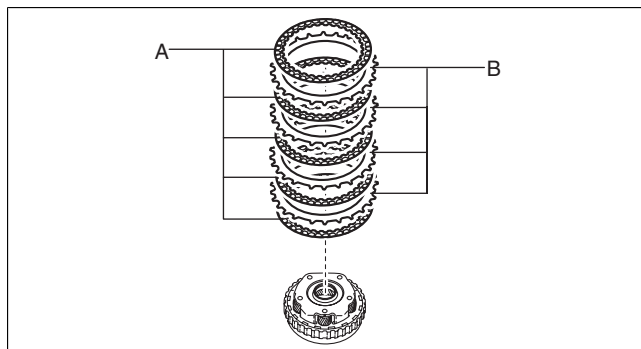

bgw3ja00000502

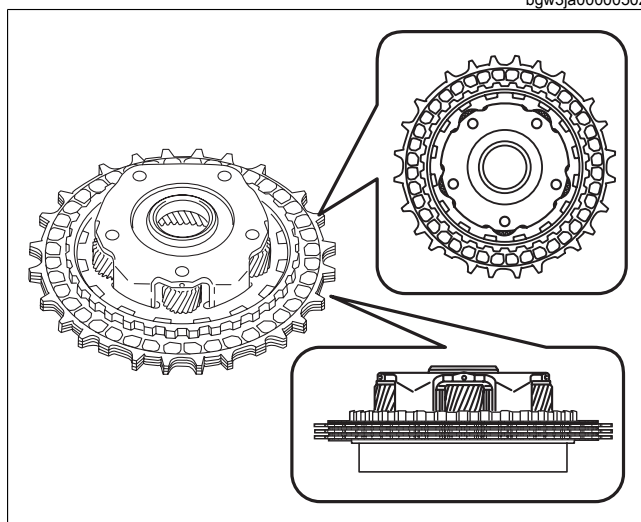


bgw3ja00000503


(4) Assemble the retaining plate to the reduction planetary gear as shown in the figure.

Note

- Retaining plate size: Inner diameter approx. 148 mm {5.83 in}
- Assemble the retaining plate so that the splines of the retaining plate and the splines of the driven plates are positioned as shown in the figure.

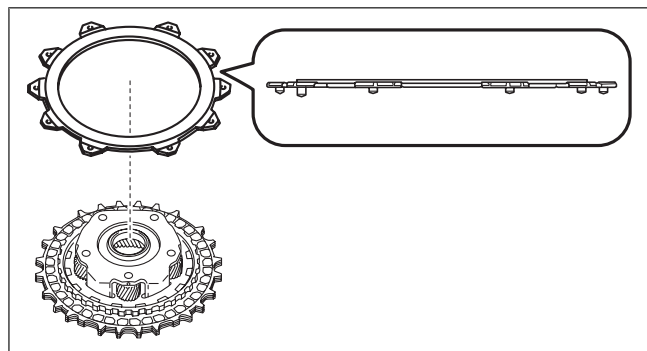


bgw3ja00000504

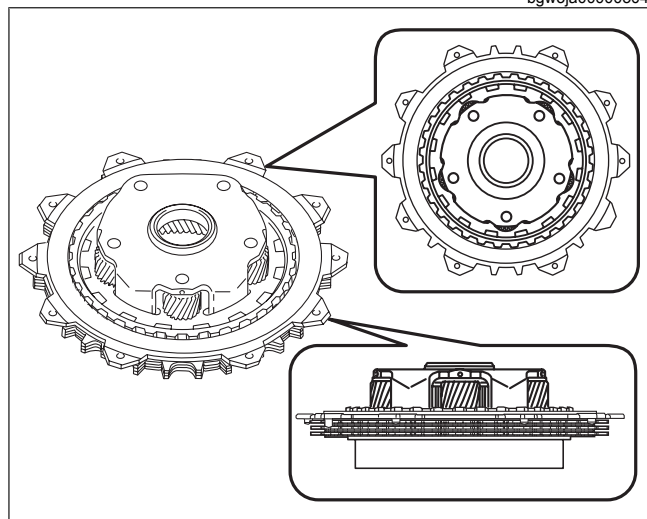


bgw3ja00000505

- (5) Assemble the parts assembled together in Steps (3) and (4).

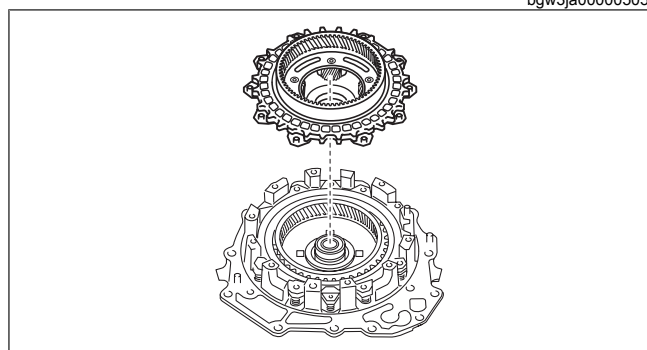

bgw3ja00000506

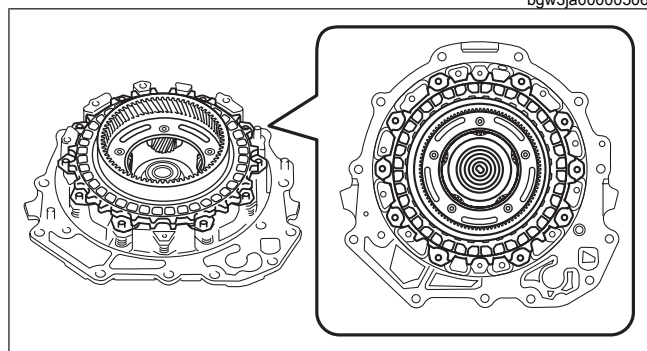

bgw3ja00000507

15. To verify that the reduction planetary gear is securely assembled, measure the distance shown in the figure.

Note

- Recommended measuring instrument: Depth gauge, straight edge ruler

A : Reduction planetary gear end (rear internal gear end)
 B : End cover end (alignment surface with transaxle case)

Specification

67.4—69.1 mm {2.66—2.72 in}

- If not within the specification, remove the reduction planetary gear and reassemble.


Note

- Measurement method


- (1) Set two straight edge rulers on the reduction planetary gear (rear internal gear) as shown in the figure.
- (2) Measure the positions (2 locations) shown in the figure using a depth gauge and calculate the average value.

A : Straight edge ruler

- (3) Subtract the thickness of the straight edge ruler from the average value.

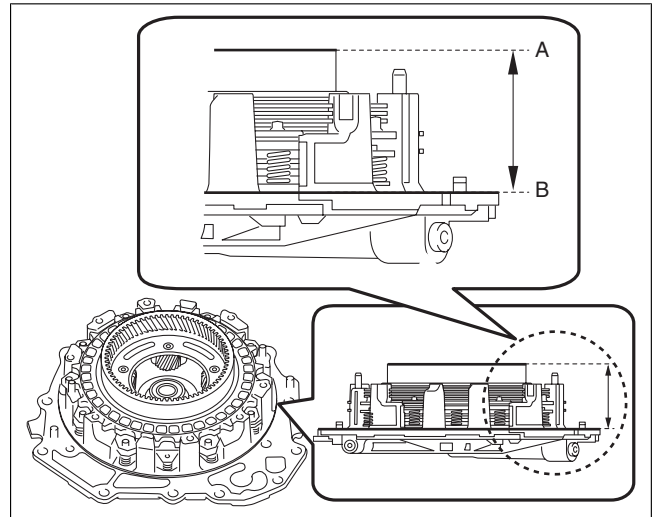

bgw3ja00000508

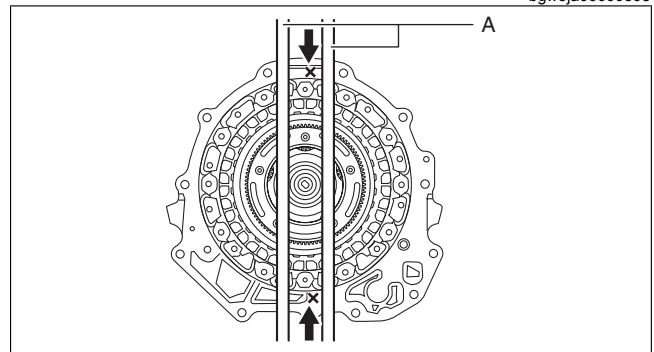

bgw3ja00000509

16. Assemble the retaining plate using the following procedure:

- (1) Measure the 2-6 brake clearance and select the appropriate retaining plate. (See 2-6 BRAKE CLEARANCE MEASUREMENT/ADJUSTMENT.)

Note


- If the retaining plate is assembled for the 2-6 brake clearance measurement/adjustment, the following retaining plate assembly procedure is not necessary.

- (2) Assemble the retaining plate selected in Step (1).


Note

- Retaining plate: Inner diameter approx. 148 mm {5.83 in}

A : Retaining plate (selection)

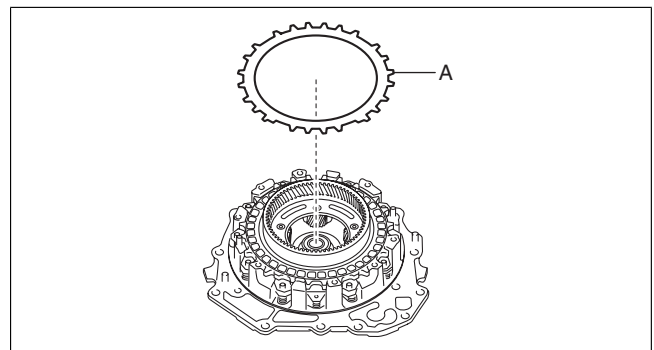

bgw3ja00000510

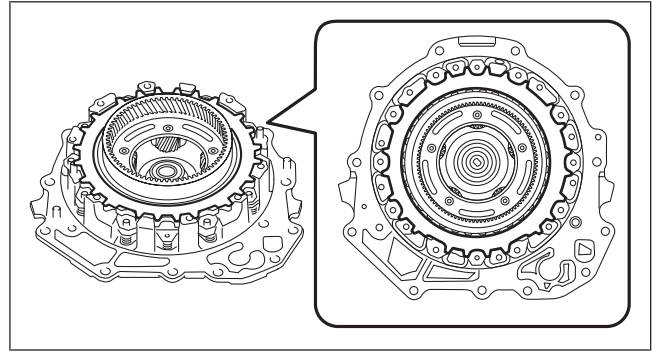


bgw3ja00000511


17. Assemble the springs and retainer component.

Note

- Springs and retainer component size: Inner diameter approx. 150.6 mm {5.929 in}

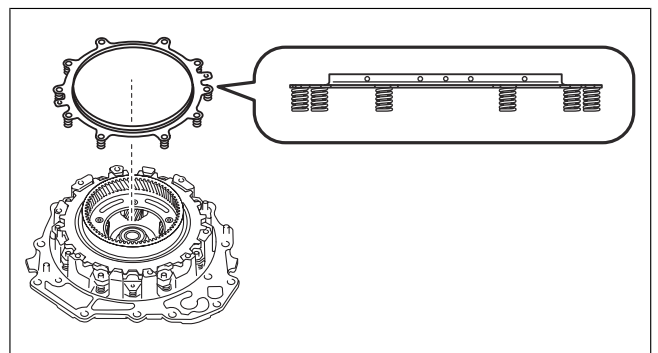


bgw3ja00000512

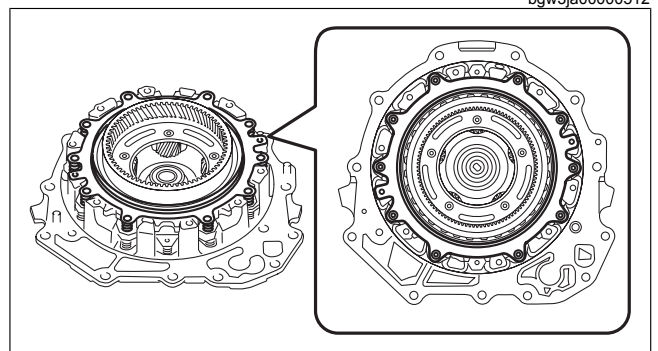


bgw3ja00000513

18. Assemble the 2-6 brake piston to the brake housing using the following procedure:

- (1) Apply ATF (ATF FZ) to the 2-6 brake piston lip.
- (2) Assemble the 2-6 brake piston.

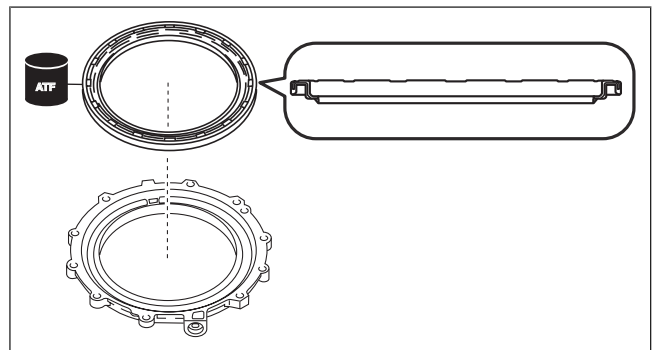


azzjiw00001055

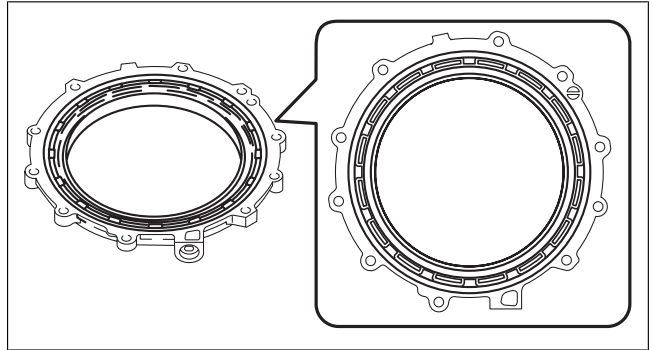


azzjiw00001056

19. Assemble the brake housing using the following procedure:

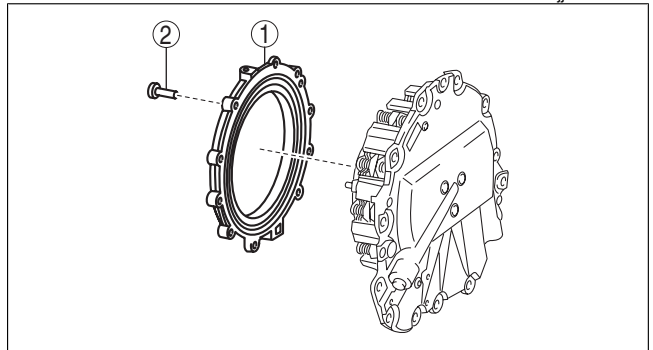


azzjiw00001057

(1) Assemble the brake housing.

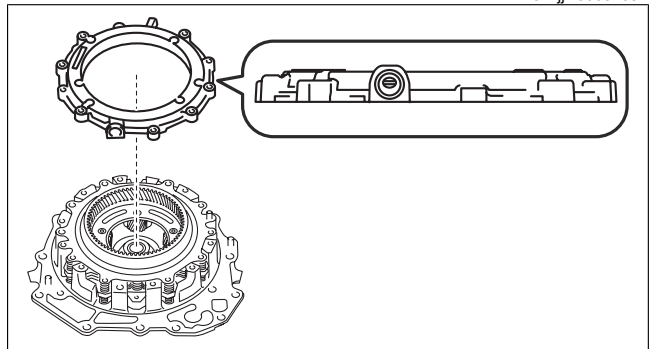

bgw3ja00000514

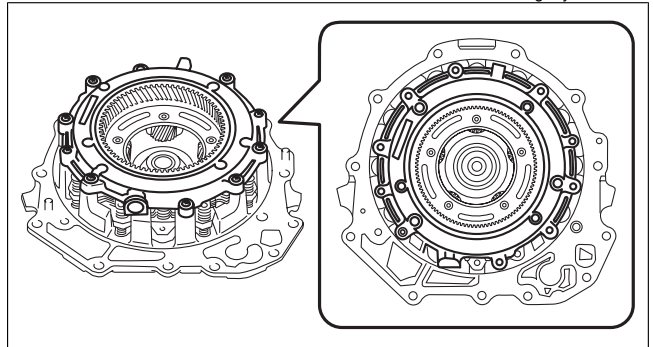

bgw3ja00000515

(2) Assemble and tighten the bolts shown in the figure uniformly.

Caution


- If the bolts are not tightened uniformly, the brake housing will slant and parts could be damaged due to the spring force of the springs and retainer component in the brake housing.

Note

- Bolt size: M6×1.0 bolt, length approx. 25 mm {0.98 in}

Tightening torque
8—10 N·m {82—101 kgf·cm, 71—88 in·lb}

1	Brake housing
2	8 bolts (M6×1.0 bolt, length approx. 25 mm {0.98 in})

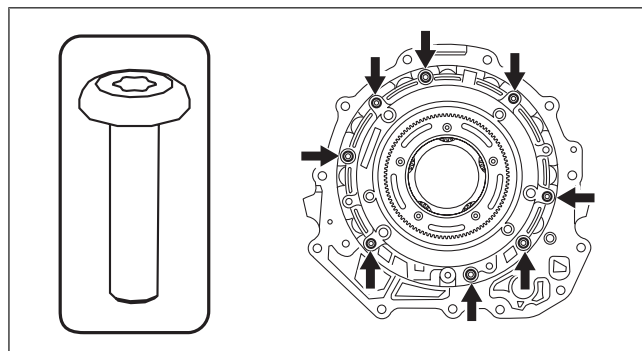

bgw3ja00000516

20. Perform an operation verification of the 2-6 brake using the following procedure:

- (1) Blow compressed air into the oil passage shown in the figure and verify the operation condition of the 2-6 brake.

Warning

- Always wear protective eye wear when using the air compressor. Otherwise, ATF or dirt particles blown off by the air compressor could get into the eyes.


Note

- To prevent damage to parts, always use an air compressor which is adjusted to the indicated pressure.

Compressed air pressure

0.39—0.44 MPa {4.0—4.4 kgf/cm², 57—63 psi}

- If there is a malfunction, perform disassembly again, verify the cause and repair the applicable part. (See END COVER COMPONENT DISASSEMBLY.)

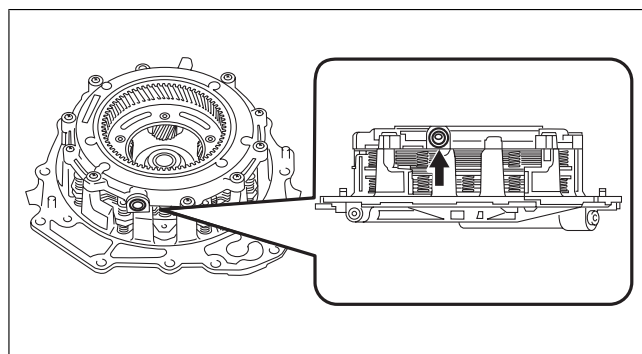

bgw3ja00000517