


## REAR SEAT BELT REMOVAL/INSTALLATION

id081100800800

### Caution


- If the retractor is disassembled, it will not operate correctly due to looseness and excessive play of the internal parts, therefore, do not disassemble the retractor.

1. Remove the following parts:
  - (1) Trunk board (See TRUNK BOARD REMOVAL/INSTALLATION.)
  - (2) Trunk end trim (See TRUNK END TRIM REMOVAL/INSTALLATION.)
  - (3) Rear scuff plate (See REAR SCUFF PLATE REMOVAL/INSTALLATION.)
  - (4) Trunk side trim (See TRUNK SIDE TRIM REMOVAL/INSTALLATION.)
  - (5) D-pillar trim (See D-PILLAR TRIM REMOVAL/INSTALLATION.)
2. Remove the bolts.

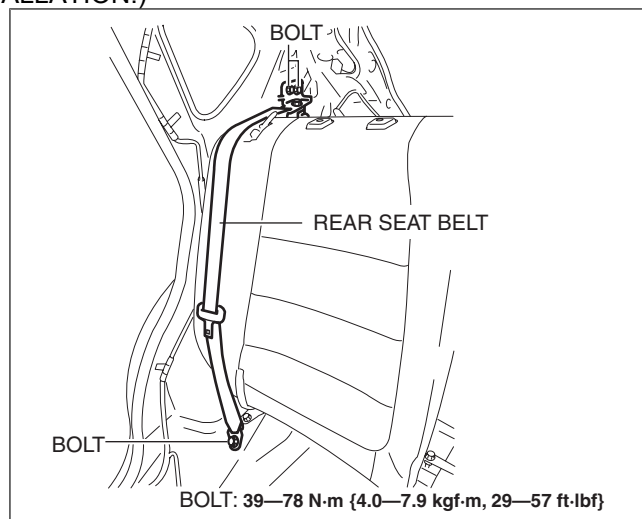

ac5wzw00002068

3. Remove the tab as shown in the figure.

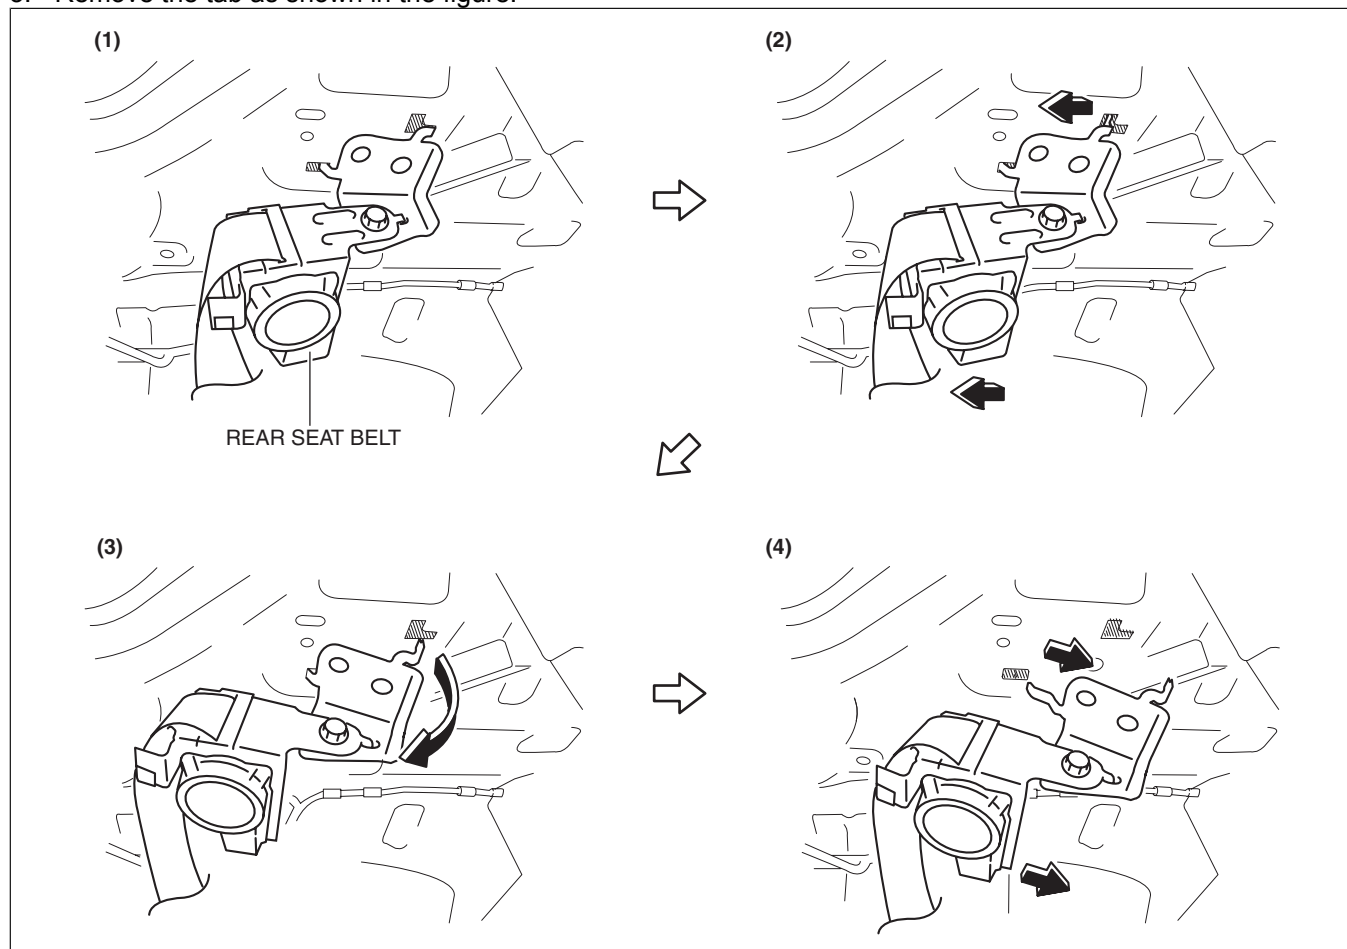

ac5wzw00002069

- 
4. Remove the rear seat belt.
  5. Install in the reverse order of removal.